Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Joyroom JR-T03S

Joyroom JR-T03S Pro Max Wireless Bluetooth Earphones User Manual

Model: JR-T03S Pro Max

Introduction

Thank you for choosing the Joyroom JR-T03S Pro Max Wireless Bluetooth Earphones. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your earphones to ensure optimal performance and longevity. Please read this manual carefully before use.

Setup

1. Initial Charging

Before first use, fully charge the earphones and the charging case. The charging case supports both wired and Qi wireless charging.

- **Wired Charging:** Connect the charging case to a power source using a compatible USB-C cable. A full charge takes approximately 1 hour.
- **Wireless Charging:** Place the charging case on a Qi-compatible wireless charging pad. A full charge takes approximately 1.5 hours.

The charging indicator light on the case will show the charging status.



Image: The charging case demonstrating both wired (USB-C) and wireless (Qi pad) charging methods.

2. Pairing with a Device

The JR-T03S Pro Max earphones feature an instant pop-up connection for quick pairing.

1. Ensure Bluetooth is enabled on your smartphone or other device.
2. Open the lid of the charging case with the earphones inside.
3. A pop-up window should appear on your device (for compatible devices) prompting you to connect. Follow the on-screen instructions.
4. If no pop-up appears, go to your device's Bluetooth settings and select "JR-T03S Pro Max" from the list of available devices.

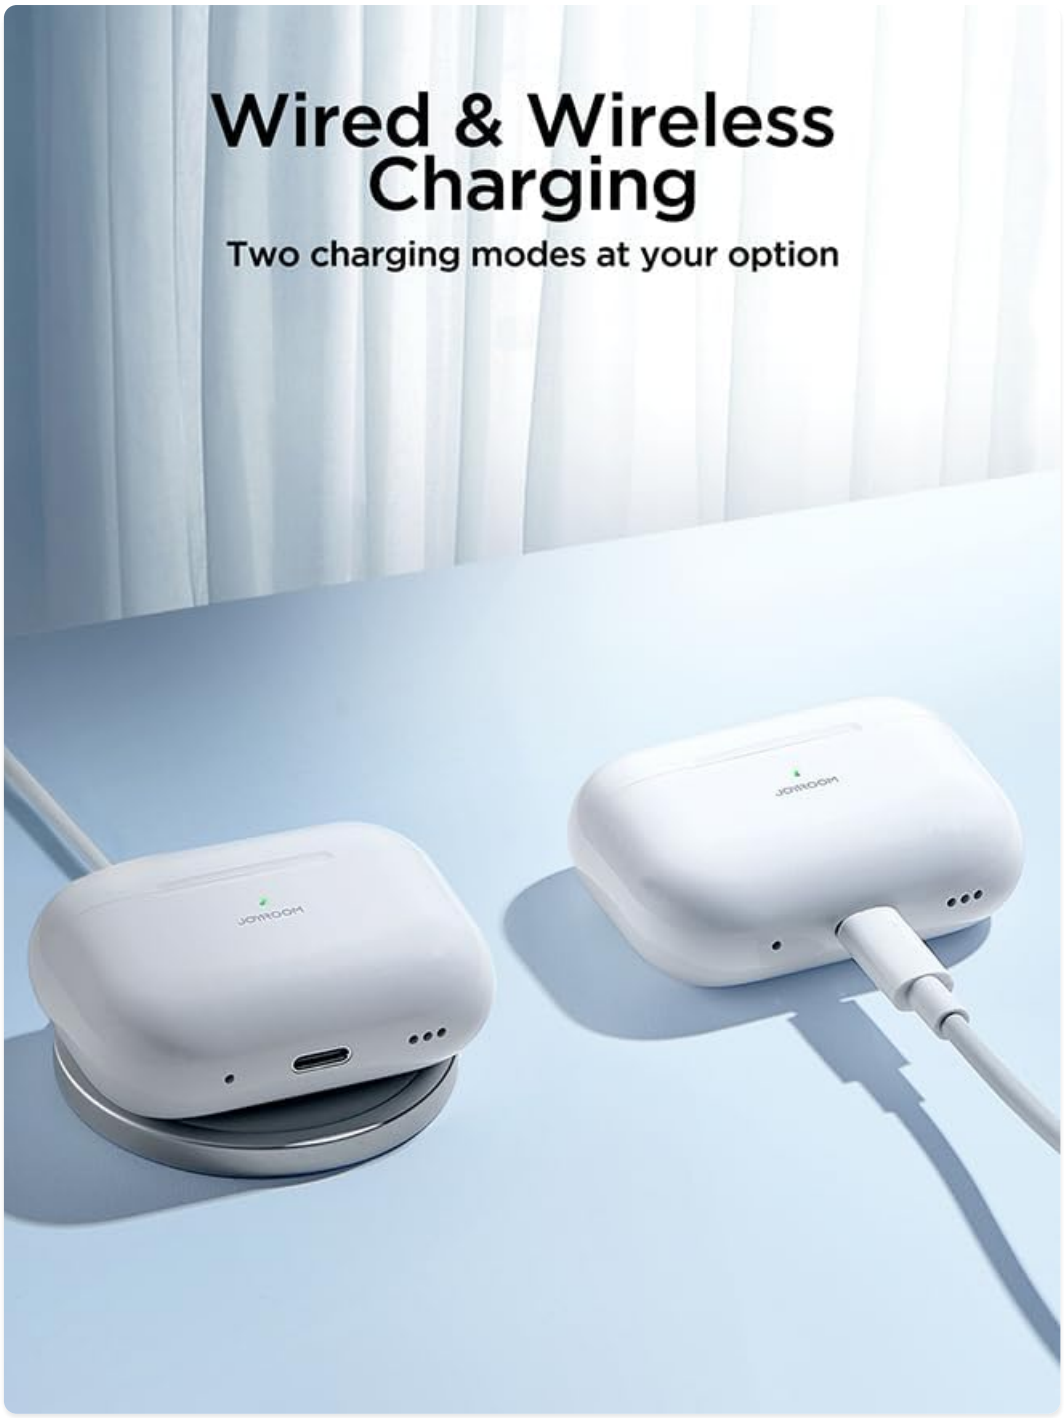


Image: A smartphone screen showing the automatic pop-up connection for the earphones when the case is opened.

3. Fitting the Earphones

For optimal sound quality and comfort, choose the correct size silicone ear tips.

- The earphones come with three sizes of soft silicone ear tips.
- Try different sizes to find the best fit that creates a comfortable, noise-isolating seal in your ear canal.
- Gently insert the earphones into your ears and twist slightly to secure them.

Operating Instructions

1. Touch Controls

The earphones feature integrated touch controls for various functions. Specific gestures may vary slightly, but common functions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Long press on either earbud.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Switch Noise Control Modes:** Long press on either earbud (e.g., Noise Reduction, Transparency).

2. In-Ear Detection

The earphones are equipped with smart optical sensors.

- Music playback will automatically pause when you remove an earbud from your ear.
- Music playback will automatically resume when you place the earbud back in your ear.
- This feature can be disabled if desired by a long press gesture (refer to touch controls).



Image: A woman wearing one earbud, demonstrating the in-ear detection feature that pauses audio when removed.

3. Noise Control Modes

The earphones offer multiple noise control modes for different environments.

- **Noise Reduction:** Blocks out ambient noise for an immersive listening experience.
- **Transparency Mode:** Allows you to hear your surroundings while still enjoying your audio, useful for awareness.
- Switch between modes using the touch controls (long press).

4. Enhanced Calling

The earphones feature DNS (Dynamic Noise Suppression) enhanced calling for clear communication.

- DNS technology reduces background noise during calls, ensuring your voice is transmitted clearly.



Image: A man using the earphones for a phone call, illustrating the clear calling experience provided by DNS technology.

Maintenance

1. Cleaning

- Regularly clean the earphones and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Avoid getting moisture into any openings. Do not use abrasive cleaners or solvents.

2. Storage

- When not in use, store the earphones in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

3. Battery Care

- To prolong battery life, avoid fully discharging the earphones and charging case frequently.
- Charge the device regularly, even if not used for extended periods.

Troubleshooting

Common Issues and Solutions

Problem	Solution
Earphones do not pair or connect.	• Ensure earphones are charged. • Turn off and on Bluetooth on your device. • Forget the device in your Bluetooth settings and re-pair. • Place earphones back in the case, close the lid, wait a few seconds, then open to trigger pop-up connection.
No sound or low volume.	• Check device volume and earphone volume. • Ensure earphones are properly seated in your ears. • Clean any debris from the earphone speakers.
Earphones frequently disconnect.	• Ensure no strong interference sources are nearby. • Keep the earphones within the effective Bluetooth range of your device. • Ensure earphones are fully charged.
Microphone quality is low during calls.	• Ensure the microphone is not obstructed. • Test in a quieter environment to minimize background noise. • Ensure the earphones are updated to the latest firmware (if applicable, check Joyroom support).

Problem	Solution
Charging case not charging.	• Check the charging cable and power adapter. • Ensure the wireless charging pad is functioning correctly and the case is placed properly. • Clean the charging port on the case.

Specifications

Feature	Detail
Brand	Joyroom
Model Name	JR-T03S Pro Max
Color	White
Ear Placement	In Ear
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.0
Noise Control	Sound Isolation, Transparency Mode
Earbud Battery Capacity	45 mAh
Charging Case Battery Capacity	360 mAh
Wired Charging Time	1 hour
Wireless Charging Time	1.5 hours
Music Playtime	Up to 6 hours (27 hours with charging case)
Frequency Range	20 Hz - 20 kHz
Water Resistance Level	Water Resistant
Materials	Silicone (ear tips, carry case)
Compatible Devices	Desktop computers, Laptops, Tablets, Smartphones, Smart speakers
Special Features	Wireless Charging, In-Ear Detection, DNS Enhanced Calling

Warranty and Support

Warranty Information

The Joyroom JR-T03S Pro Max earphones come with a standard Joyroom warranty. Please refer to the warranty card

included in your product packaging or visit the official Joyroom website for detailed warranty terms and conditions.

Customer Support

For further assistance, technical support, or inquiries, please visit the official Joyroom store or contact their customer service:

- **Joyroom Store:** Visit Joyroom Store on Amazon
- Refer to your product packaging for additional contact information.

© 2026 Joyroom. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CW1PLVVY

More documents and user manuals: **https://manuals.plus/**