Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY RM-C3329

ALLIMITY RM-C3329 Voice Replaced Remote Control User Manual

Model: RM-C3329

Introduction

This manual provides instructions for the ALLIMITY RM-C3329 Voice Replaced Remote Control. This remote is designed as a replacement for various Konka and JVC LED TV models, offering essential functions and voice control capabilities. It is a direct replacement and typically does not require complex programming beyond initial pairing.

Compatible TV Models:

- RM-C3329, RM-C3359, RM-C3369, RM-C3363
- 32H31A, 40H33A, 43U55A, 50Q75A, 50U55A, 55Q75A, 55U55A, 65Q75A, 65U55A, 75Q75A, 75U55A
- RMC3329, 32HDGTV, 40FHDGTV, CLE-1044
- Q7, U5, M3, H3, Q7 Pro, M3 Series


Setup

1. Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



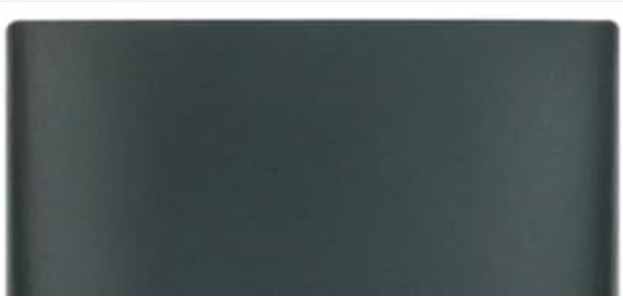


+ AAA 15V –
+ AAA 15V –

Image: Back view of the remote control, illustrating the battery compartment with two AAA battery slots.

2. Pairing with Your TV

Before using the remote, it must be paired with your compatible Konka or JVC LED TV. Refer to your TV's user manual for specific pairing instructions, as the process may vary slightly by TV model. Generally, pairing involves:

- Ensuring your TV is powered on.
- Accessing the TV's settings menu (often under "Remotes & Accessories" or "Bluetooth Settings").
- Initiating the pairing mode on the TV.
- Pressing and holding specific buttons on the remote (e.g., "OK" and "Volume Down" simultaneously) until a pairing indicator appears on the TV screen or the remote's LED flashes.

This remote is designed as a direct replacement and typically does not require complex programming codes.

Operating Instructions

The ALLIMITY RM-C3329 remote control features a standard layout for easy navigation and control of your television. Below is a general overview of key buttons and their functions:





Image: Front view of the remote control, highlighting the button layout.

- **Power Button ( ):** Turns the TV on or off.
- **Input Button:** Selects the input source (HDMI, AV, etc.).
- **Netflix / YouTube Buttons:** Direct access to Netflix and YouTube applications.
- **CC (Closed Caption) Button:** Toggles closed captions on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button (↩):** Returns to the previous screen or menu.
- **Home Button (⌂):** Accesses the TV's home screen or smart TV interface.
- **Menu Button (☰):** Opens the TV's main menu or settings.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Number Pad (0-9):** Direct channel selection.
- **Voice Control Button (Google Assistant icon):** Activates the voice assistant for commands and search.





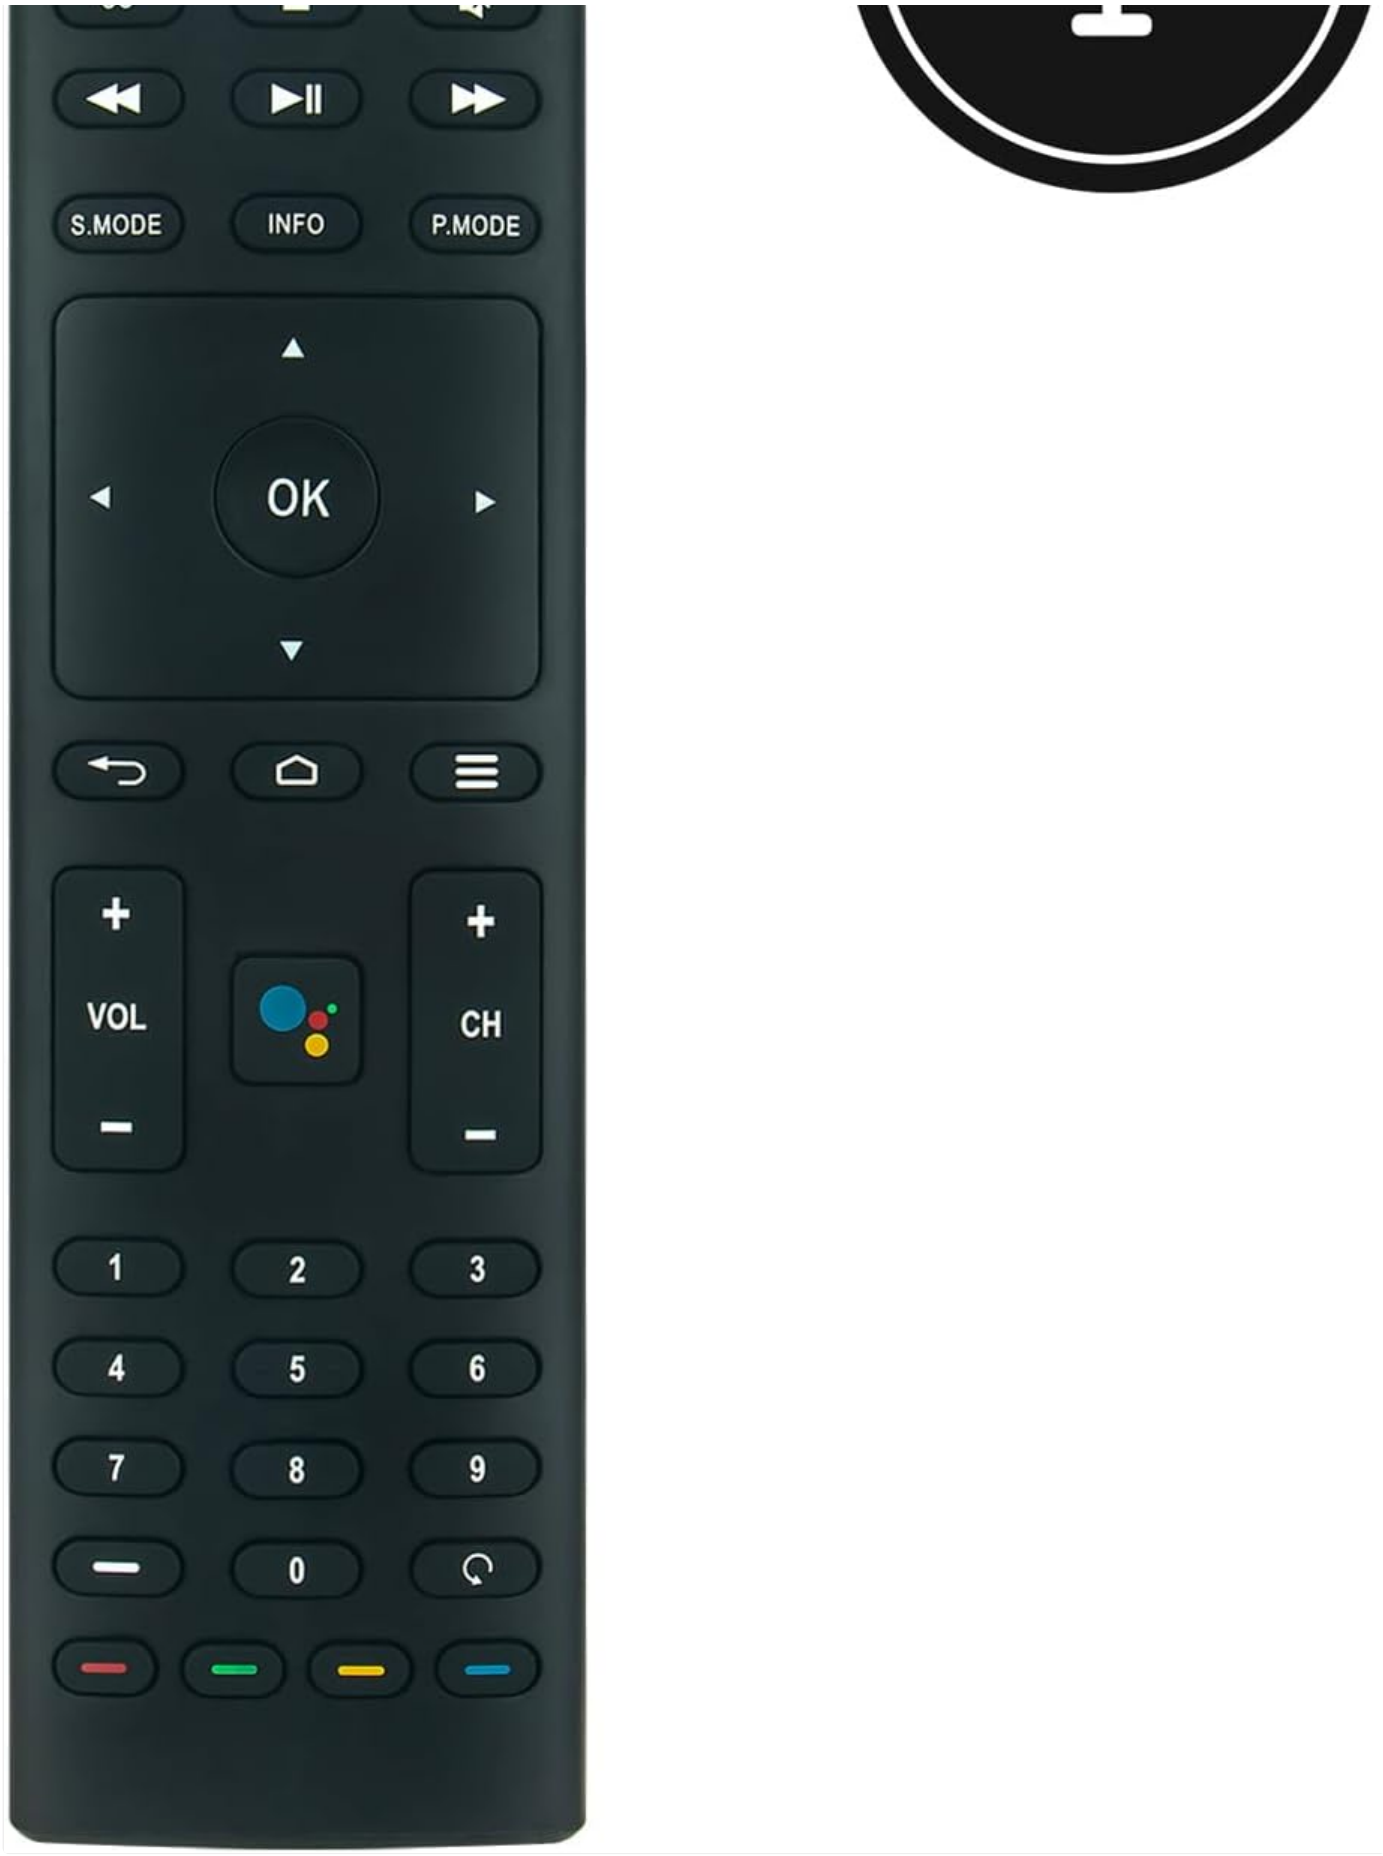


Image: Remote control highlighting the voice control button.

Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new 1.5V AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new 1.5V AAA batteries, ensuring correct polarity.
Remote not controlling TV.	Remote not paired with TV.	Refer to the "Pairing with Your TV" section and your TV's manual to re-pair the remote.
Intermittent response.	Low battery power; Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight between the remote and the TV's IR receiver.
Voice control not working.	Remote not properly paired for voice functions; TV settings.	Ensure the remote is fully paired, including Bluetooth for voice. Check TV's voice assistant settings.

Specifications

Model Number	RM-C3329
Brand	ALLIMITY
Power Supply	2 x 1.5V AAA Batteries
Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	1.59 ounces
Color	Black
Special Feature	No Programming Required (after initial pairing)
Compatible Devices	Television (Konka, JVC LED TV models as listed)

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. As this is a replacement remote, specific warranty terms may be covered by the original seller or platform where the purchase was made.
For further assistance, you may visit the ALLIMITY brand page on Amazon:ALLIMITY Store

© 2024 ALLIMITY. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CW212JJV

More documents and user manuals: **https://manuals.plus/**