Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Oraimo OSV-102A

Oraimo Cordless Vacuum Cleaner OSV-102A User Manual

Model: OSV-102A

1. Introduction

Thank you for choosing the Oraimo Cordless Vacuum Cleaner OSV-102A. This versatile 6-in-1 stick vacuum is designed for efficient cleaning across various surfaces, including hard floors, carpets, tiles, and stairs. Its lightweight, self-standing design and powerful cyclonic suction make it an ideal tool for maintaining a clean home environment. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new vacuum cleaner.



Image 1.1: The Oraimo Cordless Vacuum Cleaner OSV-102A is suitable for hard floors, low-pile carpets, tiles, and marble surfaces.

2. Product Overview

2.1 Included Components

- Cordless stick vacuum
- Washable HEPA filters (x4)
- Crevice tool
- Brush tool

- Power adapter
- Accessorized storage bracket
- Welcome guide



Image 2.1: Overview of the Oraimo Cordless Vacuum Cleaner OSV-102A and its included accessories.

2.2 Key Features

- **Powerful Cyclonic Suction:** Equipped with a high-speed motor and two hyper suction modes for effective cleaning of dirt, debris, dust, and pet hair.
- **Detachable & Rechargeable Battery:** Provides up to 35 minutes of runtime, allowing for thorough cleaning of large areas. The battery is removable for convenient charging.
- **6-in-1 Multifunctional Use:** Easily converts between a stick vacuum and a portable handheld vacuum with various nozzles for deep cleaning of different surfaces and areas, including home and car interiors.

- **Easy to Operate & Store:** Features a retractable metal tube for height adjustment and a free-standing design for convenient storage. An accessory storage holder is included.
- **LED Motorized Floor Brush Head:** The brush head includes LED lights to illuminate dust and debris, and swivels 160 degrees for enhanced maneuverability in hard-to-reach areas.
- **High-Efficiency Filtration System:** Advanced multi-stage filtration captures 99.99% of particles, preventing secondary pollution.



Image 2.2: The lightweight design facilitates easy portability.



Image 2.3: The vacuum features a free-standing design for convenient storage.

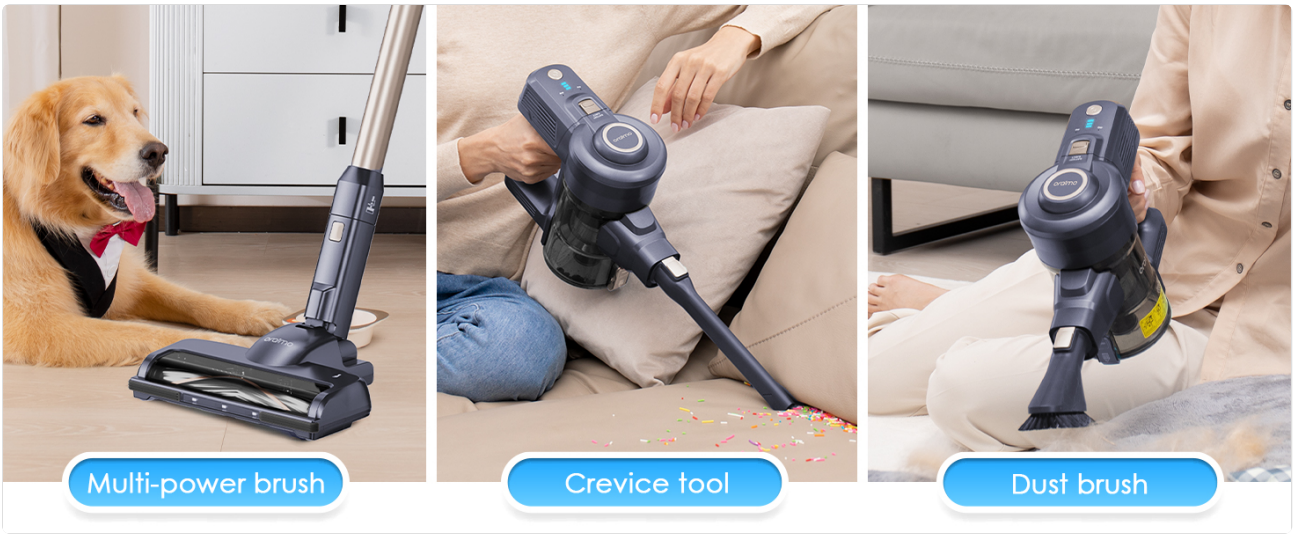


Image 2.4: Demonstrating the multi-power brush, crevice tool, and dust brush attachments.

3. Setup

3.1 Assembly

1. Unpack all components from the packaging.
2. Attach the extension wand to the main vacuum body until it clicks securely into place.
3. Connect the motorized floor brush head to the other end of the extension wand, ensuring it is firmly attached.
4. For handheld use, attach desired accessories (crevice tool or brush tool) directly to the main vacuum body.

3.2 Battery Charging

1. The battery is detachable. Remove the battery from the main unit by pressing the release button.
2. Connect the power adapter to the charging port on the battery.
3. Plug the power adapter into a wall outlet. The battery indicator lights will illuminate to show charging status.
4. Charge the battery fully before first use (approximately 2-3 hours). The indicator lights will show a full charge.

4. Operating Instructions

4.1 Power On/Off and Suction Modes

1. To power on, press the power button located on the handle.
2. The vacuum will start in the standard suction mode.
3. To switch to hyper suction mode, press the mode selection button. Press again to return to standard mode.
4. To power off, press the power button again.



Image 4.1: Control panel with power and suction mode buttons.

4.2 Using Attachments

- **Motorized Floor Brush Head:** Ideal for general cleaning on hard floors, carpets, and tiles. The LED lights illuminate debris for thorough cleaning.
- **Crevice Tool:** Use for narrow spaces, corners, and edges, such as between sofa cushions or car seats.
- **Brush Tool:** Suitable for delicate surfaces, upholstery, curtains, and pet hair removal.



Image 4.2: The 6-in-1 design allows for versatile cleaning applications.

4.3 Cleaning Different Surfaces

- **Hard Floors/Tiles:** Use the motorized floor brush head in standard suction mode. The LED lights will help identify dust.
- **Carpets (Low to Medium Pile):** Use the motorized floor brush head. For deeper cleaning or stubborn dirt, switch to hyper suction mode.
- **Stairs:** Convert to handheld mode with the brush tool or crevice tool for easier maneuverability.
- **Upholstery/Curtains:** Use the brush tool in handheld mode to gently remove dust and pet hair.



Image 4.3: Cleaning a hard floor with the motorized brush head.



Image 4.4: The LED motorized floor brush head illuminates hidden debris under furniture.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Oraimo Cordless Vacuum Cleaner.

5.1 Emptying the Dust Cup

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button on the main unit.
3. Press the button to open the bottom flap of the dust cup and empty its contents into a trash bin.
4. Close the flap securely until it clicks.

5.2 Cleaning Filters

The vacuum includes washable HEPA filters. It is recommended to clean them regularly, especially when suction power decreases.

1. Turn off the vacuum and detach the dust cup.
2. Remove the filter assembly from the dust cup.
3. Separate the HEPA filter and other filter components.
4. Rinse the filters under cold running water until the water runs clear. Do not use detergent.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the dust cup. Ensure they are completely dry to prevent damage to the motor.

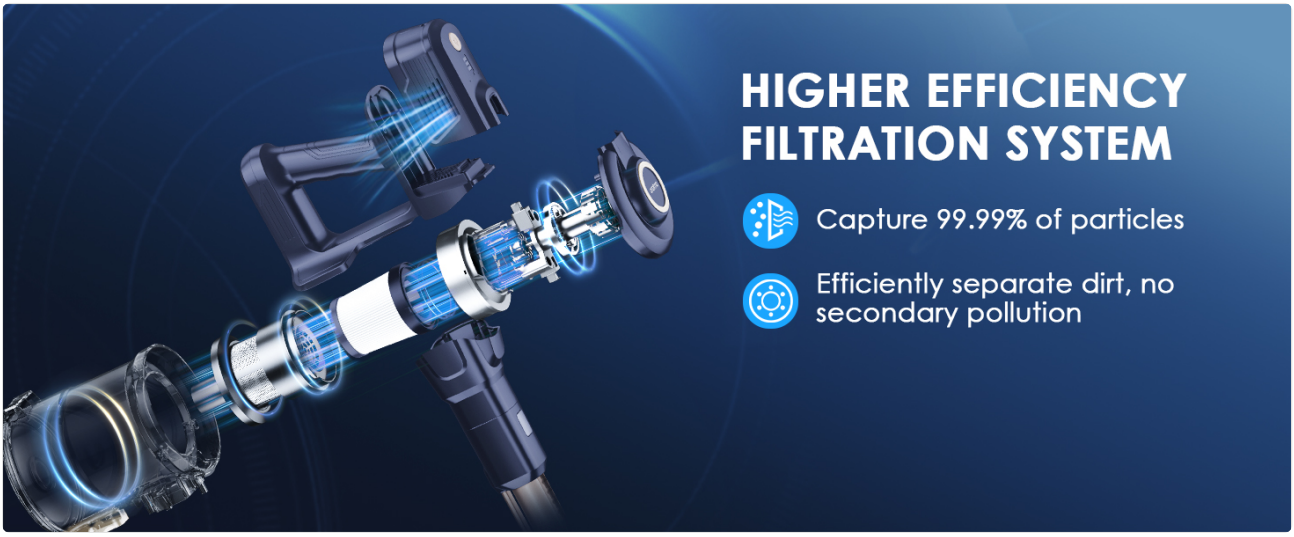


Image 5.1: The vacuum's high-efficiency filtration system.

5.3 Cleaning the Brush Roll

1. Ensure the vacuum is off and disconnected from the power source.
2. Detach the motorized floor brush head from the extension wand.
3. Locate the brush roll release mechanism (usually a latch or screw) on the side of the brush head.
4. Remove the brush roll. Use scissors or the provided cleaning tool to cut and remove any tangled hair or debris.
5. Clean the brush roll housing and ensure the brush roll spins freely.
6. Reinsert the brush roll and secure the release mechanism.

6. Troubleshooting

If you encounter issues with your Oraimo Cordless Vacuum Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted into the main unit.
Loss of suction power	Dust cup is full, filters are clogged, or there is a blockage in the hose/brush head.	Empty the dust cup. Clean or replace filters. Check for and remove any blockages.
Brush roll not spinning	Hair or debris tangled in the brush roll, or brush roll is not properly installed.	Clean the brush roll and remove any obstructions. Ensure it is correctly reinstalled.
Battery runtime is short	Battery not fully charged, or battery life has degraded over time.	Ensure battery is fully charged before use. If battery life significantly degrades, consider contacting support for a replacement.

7. Specifications

Feature	Detail
Brand	Oraimo
Model Name	OSV-102A
Special Feature	Cordless, Rechargeable Battery, 6-in-1 Multifunctional, LED Motorized Floor Brush Head
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	1000 Milliliters (1 Liter)
Recommended Uses	Carpet, Hard Floor, Tile, Marble, Stairs
Form Factor	Handheld, Stick
Color	Gray & Blue
Product Dimensions	17.32"L x 13.39"W x 7.28"H
Battery Type	Lithium-Ion
Battery Life	Up to 35 minutes
Item Weight	7.94 pounds
Number of Power Levels	2

8. Warranty and Support

Oraimo products are manufactured to high-quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in your product's welcome guide or visit the official Oraimo website. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CW2M7DHW

More documents and user manuals: **https://manuals.plus/**