GRIFEMA GB3002

GRIFEMA GB3002 Universal TV Floor Stand Instruction Manual

1. Introduction

Thank you for choosing the GRIFEMA GB3002 Universal TV Floor Stand. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before installation and retain them for future reference.

This universal TV floor stand is designed to accommodate most plasma, LCD, and LED televisions up to 85 inches, with a maximum weight capacity of 60 kg (132 lbs). It features adjustable height, swivel functionality, and two tempered glass shelves for media devices.



Image 1.1: Overview of the GRIFEMA GB3002 Universal TV Floor Stand with a television mounted.

2. Important Safety Information

WARNING: Failure to read and follow all instructions may result in personal injury, property damage, or voiding of the warranty. If you have any questions, please contact customer support.

- Do not exceed the maximum weight capacity of 60 kg (132 lbs) for the TV or 10 kg (22 lbs) for each shelf.
- Ensure your TV's VESA mounting pattern is compatible with the stand (200x200mm to 400x800mm).
- Always use two people to lift and position the TV onto the stand.
- Place the stand on a level, stable surface to prevent tipping.
- Keep children and pets away from the stand during assembly and operation.
- Check all connections and fasteners periodically to ensure they remain secure.

3. Package Contents

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or defective, do not proceed with assembly and contact customer service.

- Main support column and base
- TV mounting bracket and arms
- Two tempered glass shelves
- Hardware kit (various screws, washers, spacers for TV mounting and stand assembly)
- Assembly tools (e.g., Allen wrench)
- Instruction manual



Image 3.1: Illustration of TV mounting accessories included in the package.

4. Product Features

- **Universal Compatibility:** Supports most TVs up to 85 inches and 60 kg (132 lbs). Compatible VESA patterns include 200x200, 300x400, 400x100, 200x300, 400x400, 300x300, 200x400, 400x600, and 400x800 mm.
- **Adjustable Height:** The TV mounting height can be adjusted from 1284 mm to 1554 mm (approximately 50.5 to 61.2 inches) to achieve optimal viewing.
- **Swivel Function:** Allows for a ±30° swivel to the left and right, providing flexible viewing angles without moving the entire stand.
- **Integrated Shelves:** Two robust tempered glass shelves (350x260 mm and 700x400 mm) provide storage for

laptops, DVD players, gaming consoles, or other media equipment, each with a 10 kg (22 lbs) capacity.

- **Cable Management:** An integrated cable management system helps organize and conceal cables for a tidy appearance.
- **Space-Saving Design:** The stand allows for a minimal 25mm distance from the wall, optimizing room space.



Image 4.1: Key features of the GRIFEMA GB3002 stand, including cable management, media shelf, and tempered glass.

5. Setup and Assembly

Follow these steps carefully for proper assembly. It is recommended to have a second person assist with TV mounting.

1. **Unpack and Identify Parts:** Lay out all components and hardware. Refer to the package contents list to ensure everything is present.
2. **Assemble the Base:** Attach the main support column to the base plate using the provided screws and tools. Ensure it is securely fastened.

3. **Install Shelves:** Secure the tempered glass shelves to the main support column at your desired height using the designated brackets and screws.
4. **Attach TV Brackets to TV:** Identify the correct VESA screws and spacers for your TV. Attach the TV mounting arms to the back of your television. Ensure the arms are level and securely fastened.
5. **Mount TV to Stand:** With assistance, carefully lift the TV and hook the TV mounting arms onto the main mounting bracket on the stand. Secure the TV in place using the safety screws or locking mechanisms provided.
6. **Adjust Height:** Once the TV is securely mounted, adjust the height of the TV by loosening the height adjustment screws on the main column, moving the TV to the desired position, and then tightening the screws firmly.

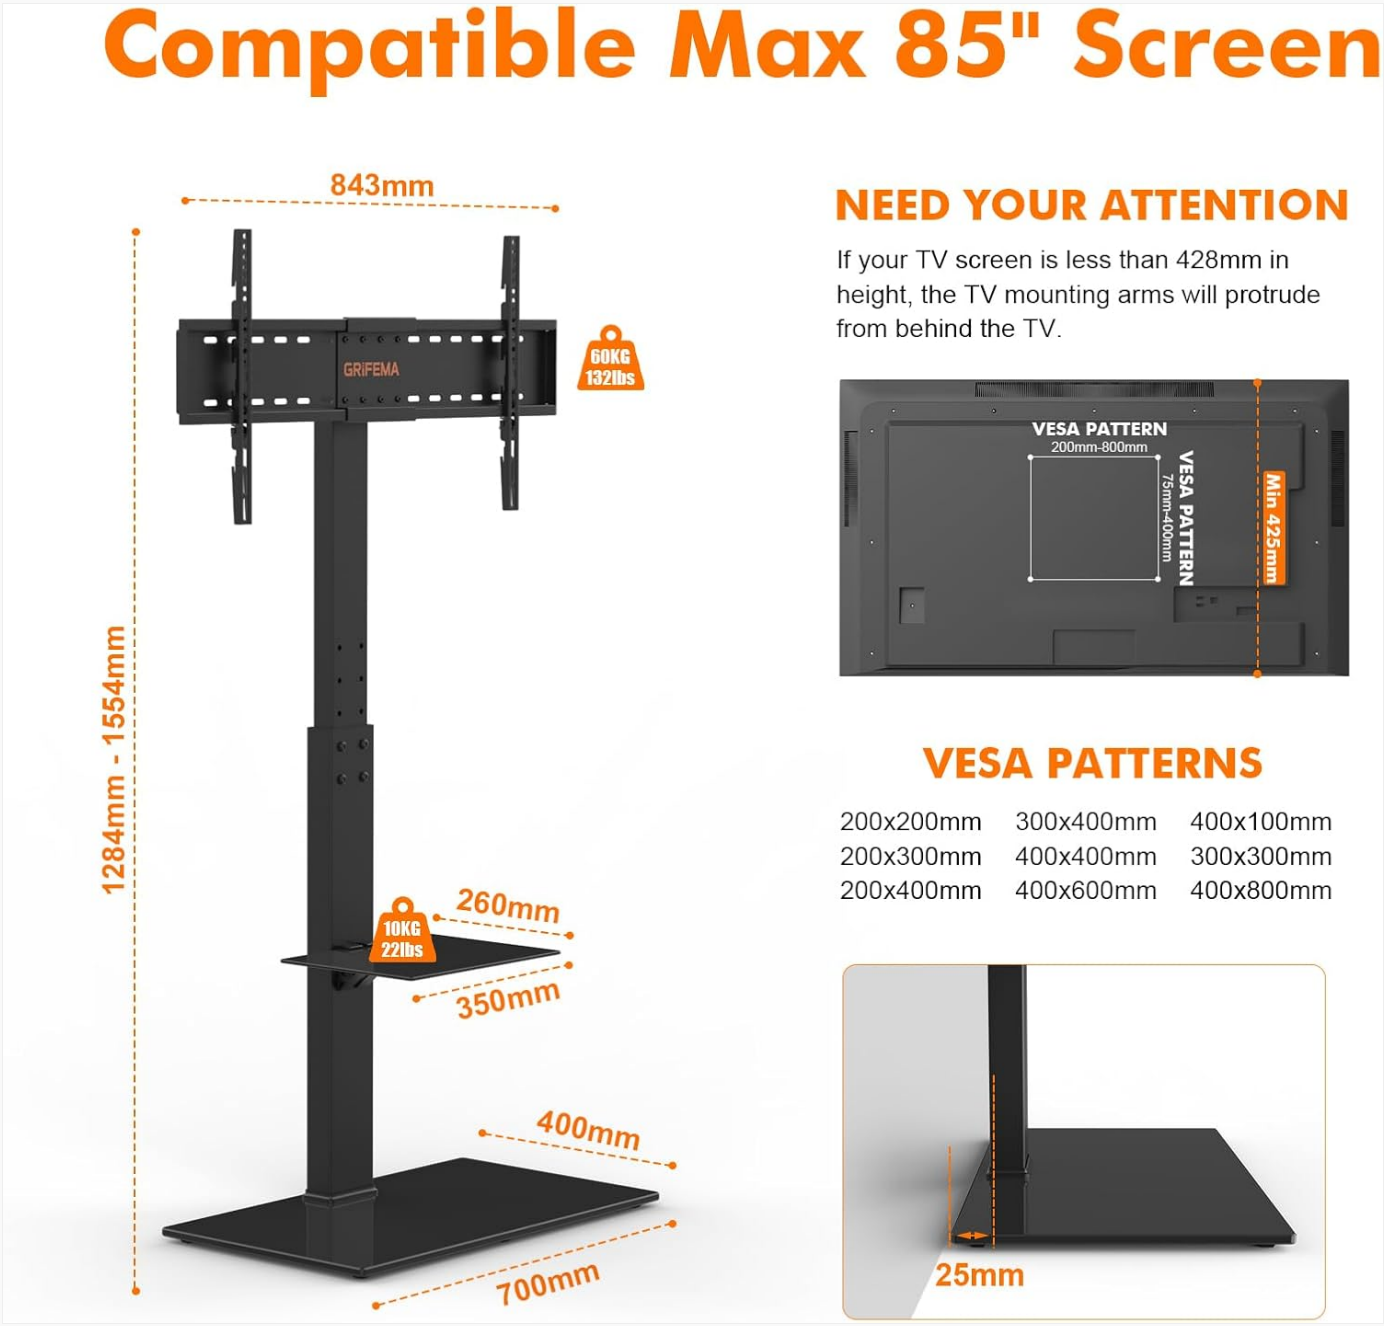


Image 5.1: Detailed dimensions and VESA compatibility information for TV mounting.



Image 5.2: Visual guide for height adjustment and VESA mounting options.

6. Operating Instructions

- **Height Adjustment:** To adjust the TV height, loosen the securing bolts on the main column, carefully slide the TV to the desired height, and then re-tighten the bolts firmly. Ensure the TV is level after adjustment.
- **Swivel Function:** Gently push the sides of the TV to swivel it ±30° left or right. Do not force the TV beyond its intended swivel range.
- **Cable Management:** Route all TV and media device cables through the designated cable management clips or channels on the back of the main column to maintain a neat and organized setup.



Image 6.1: Illustration of the ±30° swivel capability for optimal viewing angles.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the metal parts of the stand. For the tempered glass shelves, use a glass cleaner and a soft cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspections:** Periodically check all screws and bolts to ensure they are tight and secure. Re-tighten if necessary.
- **Stability:** Ensure the stand remains on a level surface. If the stand is moved, re-verify its stability before placing the TV back on it.

8. Troubleshooting

Problem	Possible Cause	Solution
TV is not level	Mounting arms uneven; stand on uneven surface	Adjust TV mounting arms; move stand to a level surface.
Stand feels unstable	Screws loose; TV too heavy; stand on uneven surface	Check and tighten all screws; ensure TV weight is within limits; move stand to a level surface.
TV does not fit mounting pattern	Incorrect VESA size	Verify your TV's VESA pattern against the stand's compatibility (200x200mm to 400x800mm).

9. Specifications

- **Model Number:** GB3002
- **Brand:** GRIFEMA
- **Material:** Metal, Tempered Glass
- **Color:** Black
- **Compatible TV Size:** Up to 85 inches
- **Maximum TV Weight Capacity:** 60 kg (132 lbs)
- **VESA Compatibility:** 200x200, 300x400, 400x100, 200x300, 400x400, 300x300, 200x400, 400x600, 400x800 mm
- **Height Adjustment Range:** 1284 mm - 1554 mm
- **Swivel Angle:** ±30°
- **Shelf Dimensions (Upper):** 350 mm x 260 mm
- **Shelf Dimensions (Lower):** 700 mm x 400 mm
- **Shelf Weight Capacity:** 10 kg (22 lbs) per shelf
- **Type of Movement:** Swivel
- **Mounting Type:** Floor Mount

10. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact GRIFEMA customer service directly. Please have your model number (GB3002) and purchase date available when contacting support.
Manufacturer: Ibergrif Griferias,S.L
Country of Origin: Spain

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question