Bellemave FST000067-T-AB1

Bellemave Twin Over Queen Bunk Bed Instruction Manual

Model: FST000067-T-AB1

Important Safety Information

Always use the guardrails to prevent falls. Be cautious around sharp edges during assembly and use. Assemble according to the instructions to ensure stability. Do not exceed the weight capacity of 250 lbs for the upper bed.

This bunk bed is designed for both kids and adults, providing a safe and sturdy sleeping solution. Proper assembly and adherence to weight limits are crucial for user safety.

Product Overview

The Bellemave Twin Over Queen Bunk Bed is a heavy-duty metal bed frame designed for durability and stability. It features a Twin XL size upper bunk and a Queen size lower bunk, making it suitable for various users. The frame is constructed from strong metal with an electrostatic powder coating for easy cleaning and long-lasting color.



Figure 1: Fully assembled Bellemave Twin Over Queen Bunk Bed in black finish.

Key features include:

- **Heavy Duty Metal Construction:** Provides exceptional durability and a strong, stable structure.
- **Easy to Clean Finish:** Electrostatic powder coating ensures environmental protection, non-toxicity, and resistance to fading.
- **Safety Angled Ladder:** Designed for safer and easier access to the upper bunk.
- **Integrated Guardrails:** Full-length guardrails on the upper bed enhance safety and prevent accidental falls.
- **Strong Slat Support:** 21 metal slats provide robust support for mattresses, with a 250 lbs capacity for the upper bed and unlimited for the lower bed.

Specifications

Attribute	Detail

Size	Twin XL over Queen Floor
Product Dimensions	82.4"L x 62.4"W x 53.7"H
Color	Black
Finish Type	Lacquered
Included Components	Guardrails, Slat, Ladders
Compatible With Mattress Size	twin, queen
Brand	Bellemave
Assembly Required	Yes
Manufacturer	Bellemave
UPC	733805306489
Item Weight	31 pounds
Target Audience	Kids and Adults
Country of Origin	Vietnam
Item Model Number	FST000067-T-AB1

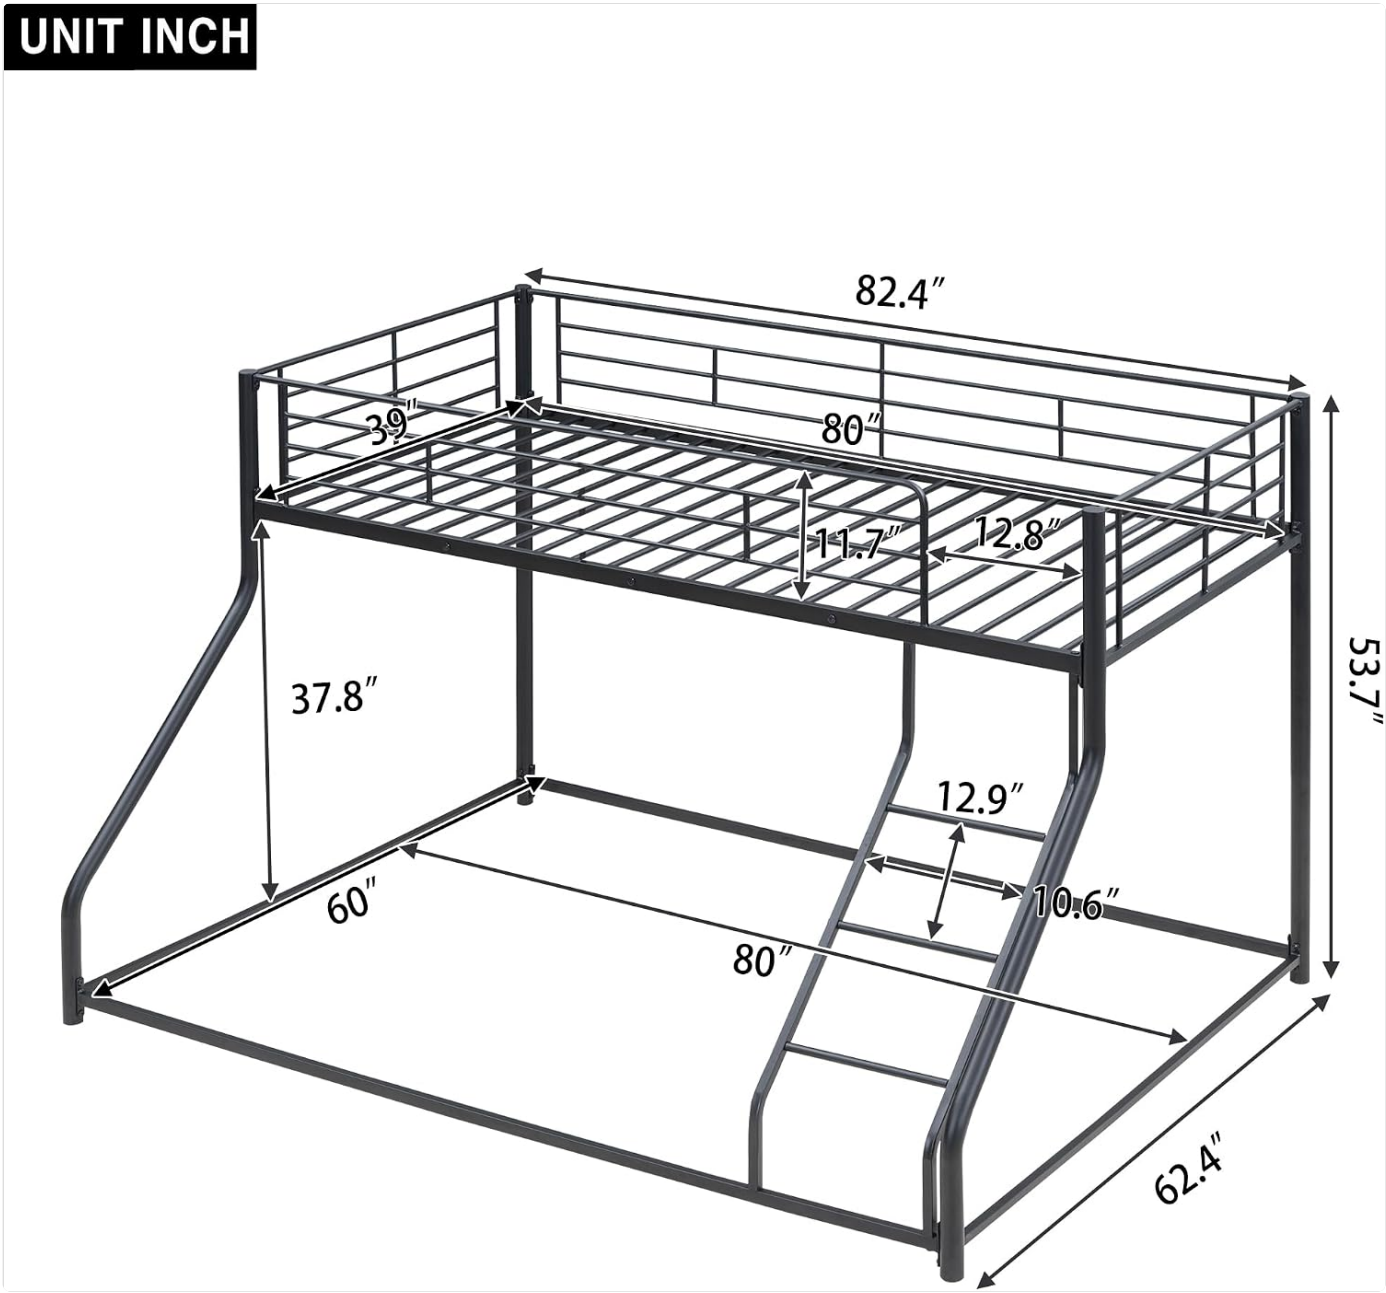


Figure 2: Dimensional drawing of the bunk bed, showing length, width, and height measurements.

Setup and Assembly

Assembly of the Bellemave Twin Over Queen Bunk Bed is required. It is recommended to have at least two adults for assembly. Ensure all parts are present before beginning. Refer to the included assembly instructions for detailed step-by-step guidance.

General Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Identify all hardware and components using the parts list.
- Do not fully tighten screws until all components are loosely assembled. This allows for easier alignment.
- Ensure all connections are secure before use.



Figure 3: Side profile of the bunk bed frame, illustrating the structure before mattress placement.



Figure 4: Front view of the bunk bed frame, highlighting the lower queen bed area and upper twin XL frame.

Operating Instructions

Once assembled, the bunk bed is ready for use. Ensure mattresses are placed correctly on both the upper and lower bunks. The upper bunk is designed for a Twin XL mattress, and the lower bunk for a Queen mattress.

Using the Ladder:

- Always use the integrated ladder to access the upper bunk.
- Face the ladder when climbing up or down.
- Ensure a firm grip on the ladder rungs.



Figure 5: Detail of the angled ladder and the protective guardrail on the upper bunk.

Weight Capacity:

- Upper Bunk: Maximum 250 lbs (113 kg).
- Lower Bunk: Unlimited weight capacity (floor level).

Do not allow jumping on the bed, especially the upper bunk, as this can compromise structural integrity and safety.

Maintenance and Care

Regular maintenance will ensure the longevity and safety of your Bellemave bunk bed.

- **Cleaning:** Wipe with a damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Hardware Check:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Inspection:** Regularly inspect the frame for any signs of wear, damage, or loose components. Address any issues promptly.



Figure 6: View of the robust metal slat system providing mattress support.

Troubleshooting

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose bolts or improper assembly.	Ensure all bolts are fully tightened. Review assembly instructions to confirm correct setup.
Squeaking noises.	Loose connections or friction between metal parts.	Tighten all bolts. Apply a small amount of silicone spray or wax to contact points if squeaking persists.
Difficulty climbing the ladder.	Ladder angle or user discomfort.	Ensure the ladder is securely attached and at the correct angle as per instructions. Practice climbing slowly.

Warranty and Support

For any questions regarding assembly, missing parts, or product defects, please contact Bellemave customer support. Refer to your purchase documentation for specific warranty details.

Contact Information:

- Visit the Bellemave Store on Amazon for more information and support resources.
- Refer to your product packaging or purchase receipt for direct customer service contact details.

© 2025 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question