GLOBE Electric D'Angelo 65000084

GLOBE Electric D'Angelo 65000084 Wall Sconce Instruction Manual

Model: D'Angelo 65000084

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your GLOBE Electric D'Angelo 65000084 Wall Sconce. Please read this manual thoroughly before installation and retain it for future reference.
The GLOBE Electric D'Angelo 65000084 is a versatile 1-Light Wall Sconce featuring an integrated LED reading light and USB-A/USB-C charging ports. It offers both plug-in and hardwired installation options.

Safety Information

- Always turn off the power at the main circuit breaker before beginning installation.
- Consult a qualified electrician if you are unsure about the installation process.
- Do not exceed the recommended wattage for the main light bulb (1x E26/Medium Base 60W Bulb, sold separately).
- Ensure all connections are secure and properly insulated.
- This fixture is designed for indoor use only.

Package Contents

Verify that all components are present before beginning installation:

- Wall Sconce Fixture (Matte Black with White Fabric Shade)
- Integrated LED Reading Light
- USB-A and USB-C Charging Ports
- Mounting Hardware
- Removable Black Braided Fabric Cord (for plug-in option)
- *Note: E26/Medium Base 60W Bulb is sold separately.*

Setup and Installation

Option 1: Plug-In Installation

1. **Prepare the Mounting Surface:** Choose a suitable location on a wall near an electrical outlet.
2. **Attach Mounting Hardware:** Secure the mounting bracket to the wall using the provided screws and anchors. Ensure it is level and firmly attached.
3. **Connect Fixture:** Attach the sconce fixture to the mounting bracket.
4. **Insert Bulb:** Screw in one E26/Medium Base 60W bulb (not included) into the main light socket.
5. **Plug In:** Insert the removable black braided fabric cord into the sconce and then into a standard electrical outlet.
6. **Adjust Cord Length:** The cord can be easily shortened for a cleaner appearance by wrapping excess cord behind the fixture or using cord management clips (not included).



Image: A woman reading under the light of the sconce, with an inset showing the plug connected to a wall outlet. This illustrates the plug-in installation method.



Image: A side-by-side comparison showing the sconce installed as a plug-in (with visible cord) and hardwired (with no visible cord), highlighting the versatility of installation.

Option 2: Hardwired Installation

1. **Turn Off Power:** **IMPORTANT: Ensure power is OFF at the main circuit breaker before starting.**
2. **Prepare Wiring:** Remove the existing fixture (if any) and expose the junction box wiring.
3. **Attach Mounting Hardware:** Secure the mounting bracket to the junction box using the provided screws.
4. **Make Electrical Connections:**
    - Connect the fixture's black wire to the house's black (live) wire.
    - Connect the fixture's white wire to the house's white (neutral) wire.
    - Connect the fixture's ground wire to the house's ground wire (or green screw on the mounting bracket).
    - Secure all connections with wire nuts (not included) and electrical tape.
5. **Mount Fixture:** Carefully tuck the wires into the junction box and attach the sconce fixture to the mounting bracket.
6. **Insert Bulb:** Screw in one E26/Medium Base 60W bulb (not included) into the main light socket.

7. **Restore Power:** Turn the power back on at the main circuit breaker.



Image: A side-by-side comparison showing the sconce installed as a plug-in (with visible cord) and hardwired (with no visible cord), illustrating the seamless look of hardwired installation.

Operating Instructions

- **Main Light (E26 Bulb):** The main light is controlled by an on/off pull chain switch located on the fixture. Pull the chain to turn the light on or off.
- **LED Integrated Reading Light:** The LED reading light features an adjustable gooseneck arm. It is controlled by a rocker switch located on the fixture. Flip the switch to turn the reading light on or off. The LED provides 2700 Kelvin (warm white) light at 120 Lumens.
- **USB Charging Ports:** The sconce includes fast-charging 2.1A combined USB-A and USB-C ports. Simply plug your compatible devices into these ports for charging. These ports are active when the sconce is powered.



Image: An exploded diagram highlighting the key features of the sconce: white fabric shade, matte black finish, USB-A and USB-C ports, main light pull switch, LED reading light rocker switch, adjustable gooseneck arm, and removable braided cord.

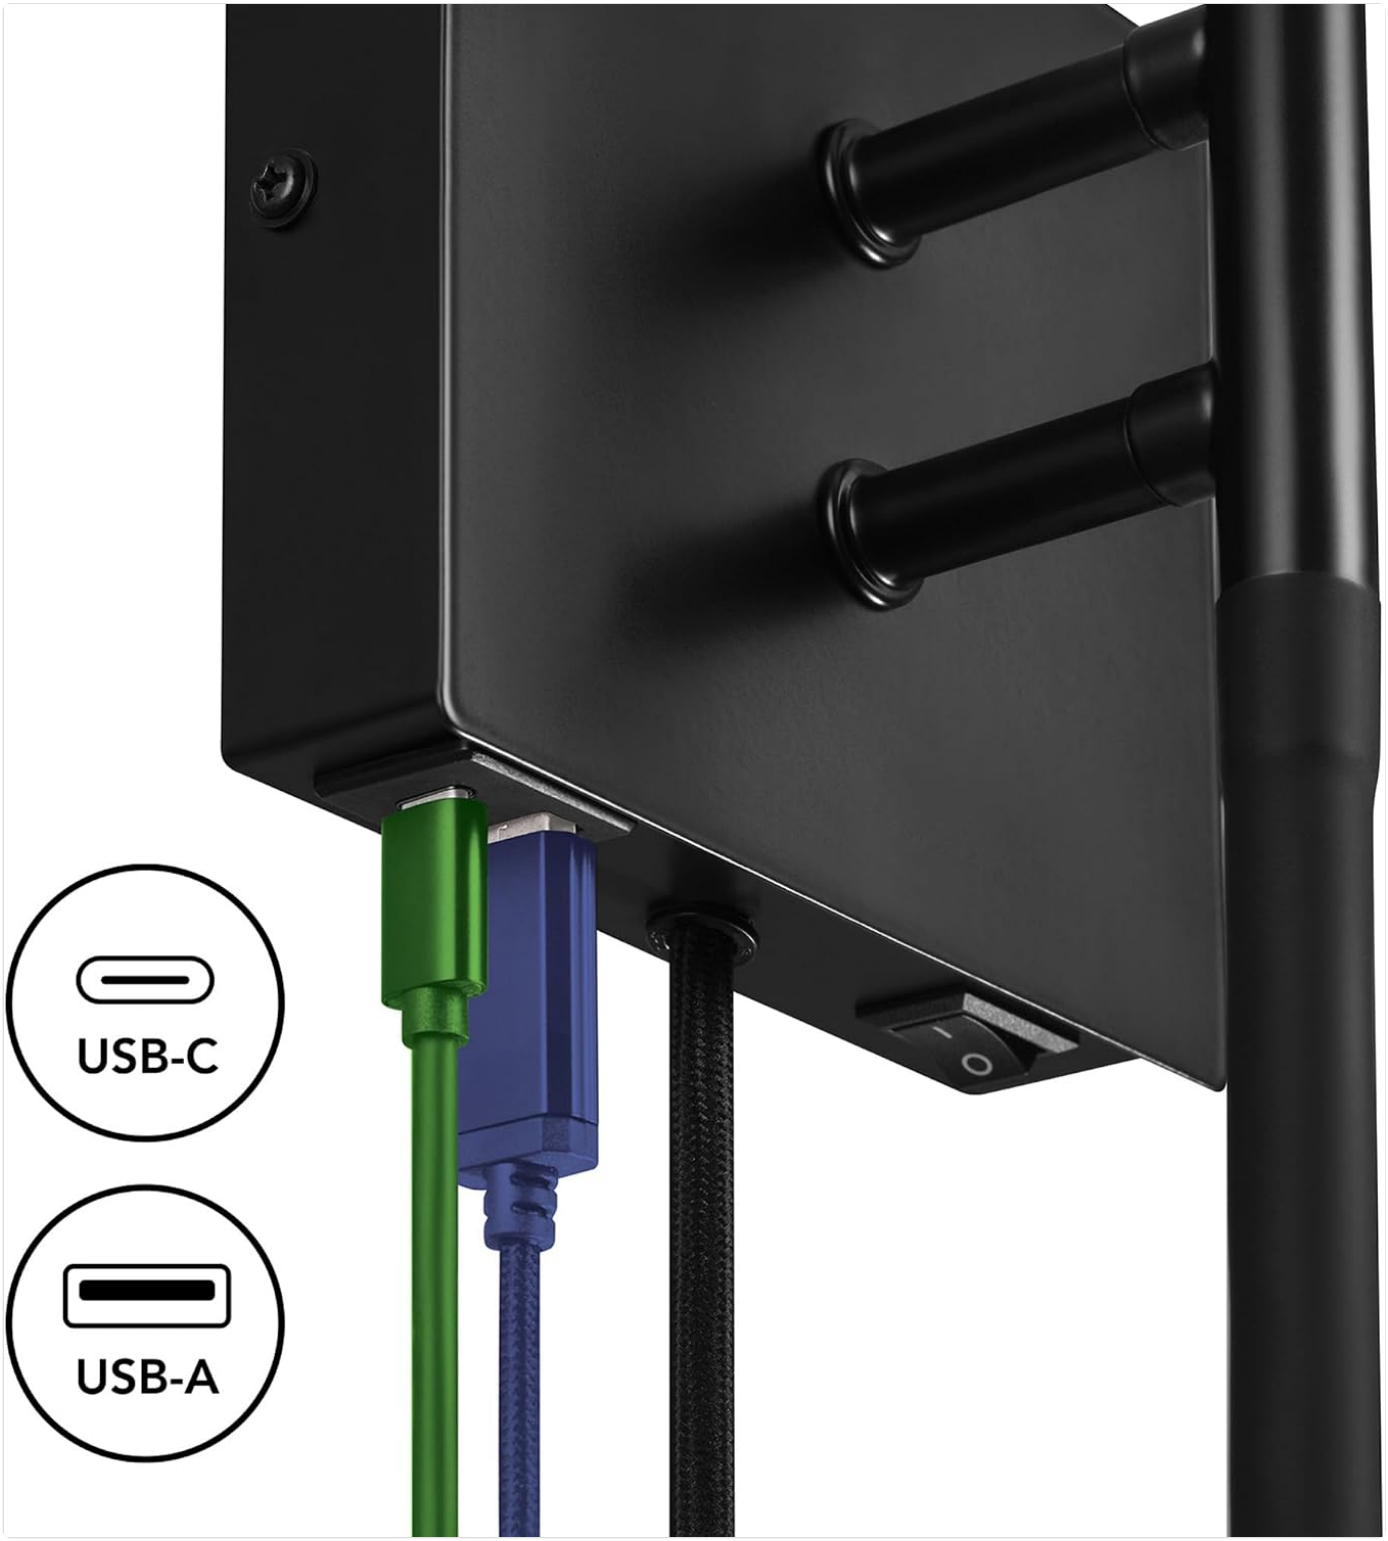


Image: A close-up view of the USB-C and USB-A charging ports on the sconce, with charging cables plugged in, demonstrating their function.



Image: A close-up of the adjustable gooseneck LED reading light, showing its illumination and flexibility.

Maintenance

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Bulb Replacement:** Ensure power is off before replacing the E26 bulb. Allow the bulb to cool completely before handling.
- **LED Reading Light:** The LED reading light is integrated and not user-replaceable.

Troubleshooting

Problem	Possible Cause	Solution
Main light does not turn on.	No power to the fixture. Bulb is loose or burnt out. Pull chain switch is faulty.	Check circuit breaker and wall switch. Tighten or replace the E26 bulb. Contact customer support if the switch is faulty.
LED reading light does not turn on.	No power to the fixture. Rocker switch is faulty.	Check circuit breaker and wall switch. Contact customer support if the switch is faulty.
USB ports are not charging devices.	No power to the fixture. Device cable is faulty. Device is not compatible with 2.1A charging.	Ensure the sconce is powered on. Try a different USB cable. Verify device charging requirements.

Specifications

Brand	GLOBE Electric
Model Name	D'Angelo
Item Model Number	65000084
Color	Matte Black, White Fabric Shade
Material	Iron (Fixture), Polyester (Shade)
Product Dimensions	6.25"L x 5.88"W x 20.25"H
Power Source	Hardwired/Plug-in
Voltage	120 Volts
Main Light Bulb Base	E26 (Medium Base)
Main Light Max Wattage	60W (Bulb not included)
LED Reading Light Wattage	2 Watts
LED Reading Light Brightness	120 Lumens
LED Reading Light Color Temperature	2700 Kelvin (Warm White)
USB Charging Ports	USB-A and USB-C (2.1A combined output)
Indoor/Outdoor Usage	Indoor
Item Weight	2.13 Pounds

UPC	058219846100



Image: A technical drawing showing the dimensions of the sconce in inches and centimeters, along with the cord length and hardwired option details.

Warranty Information

This product is sold without an explicit warranty. For any issues or concerns, please refer to the retailer's return policy or contact GLOBE Electric customer support.

Customer Support

For further assistance, please visit the GLOBE Electric store or contact their customer service department.

- **GLOBE Electric Store:** Visit Store

© 2024 GLOBE Electric. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question