Nokia TA-1563

Nokia 110 4G Mobile Phone User Manual

Model: TA-1563 | Brand: Nokia

Introduction

This manual provides essential information for the safe and efficient operation of your Nokia 110 4G mobile phone. Please read this manual carefully before using the device to ensure proper functionality and to understand its features.





Figure 1: Front view of the Nokia 110 4G mobile phone.

What's in the Box

Verify that all items are present in the product packaging:

- Nokia 110 4G Mobile Phone
- Power Adapter
- USB Cable
- Quick Start Guide

Your browser does not support the video tag.

Video 1: Product Overview. This video demonstrates the physical features of the Nokia 110 4G, including its compact design, dual SIM slots, VoLTE capability, wireless FM radio, torch, macro camera, and long battery life. It also shows the included accessories: power adapter, USB cable, and earphones.

Setup

1. Inserting the SIM Card(s) and Battery

1. Carefully remove the back cover of the phone.
2. If the battery is inserted, remove it by gently lifting it from the bottom edge.
3. Locate the SIM card slot(s). The Nokia 110 4G supports Dual SIM. Insert your SIM card(s) into the designated slot(s) with the gold contacts facing down and the cut corner aligned as shown in the diagram (refer to quick start guide for detailed diagram).
4. Insert the battery, ensuring the contacts align with the phone's terminals.
5. Replace the back cover, pressing firmly until it clicks into place.

2. Charging the Battery

- Connect the USB cable to the phone's micro-USB port.
- Connect the other end of the USB cable to the power adapter.
- Plug the power adapter into a wall outlet.
- The battery indicator on the screen will show the charging status. Allow the phone to fully charge before first use.



Figure 2: Rear view of the Nokia 110 4G, illustrating the camera and the phone's compact form factor.

Operating Your Phone

Power On/Off

- To power on, press and hold the Power key until the phone vibrates and the screen lights up.
- To power off, press and hold the Power key, then select "Power off" from the options.

Making Calls

- From the home screen, enter the phone number using the keypad.
- Press the Call key (green button) to initiate the call.
- To end a call, press the End Call key (red button).

Sending Messages

- Navigate to "Menu" > "Messages".
- Select "Create message" or "New message".
- Enter your message using the keypad.
- Add the recipient's number or select from contacts.
- Select "Send".

Camera

The phone features a rear 1.0MP camera with macro mode.

- Navigate to "Menu" > "Camera".
- Frame your shot using the display.
- Press the center navigation key to capture the photo.





Figure 3: Close-up view of the Nokia 110 4G's rear camera.

FM Radio

The Nokia 110 4G supports both wireless and wired FM radio.

- Navigate to "Menu" > "FM Radio".
- Select "Auto tune" to scan for available stations.
- Use the navigation keys to switch between stations.

Music Player

Load up to 8,000 of your favorite tracks using a microSD card (sold separately).

- Ensure a microSD card with music files is inserted.
- Navigate to "Menu" > "Music".
- Select "All songs" or browse by artist/album.
- Use the navigation keys to play, pause, skip tracks.

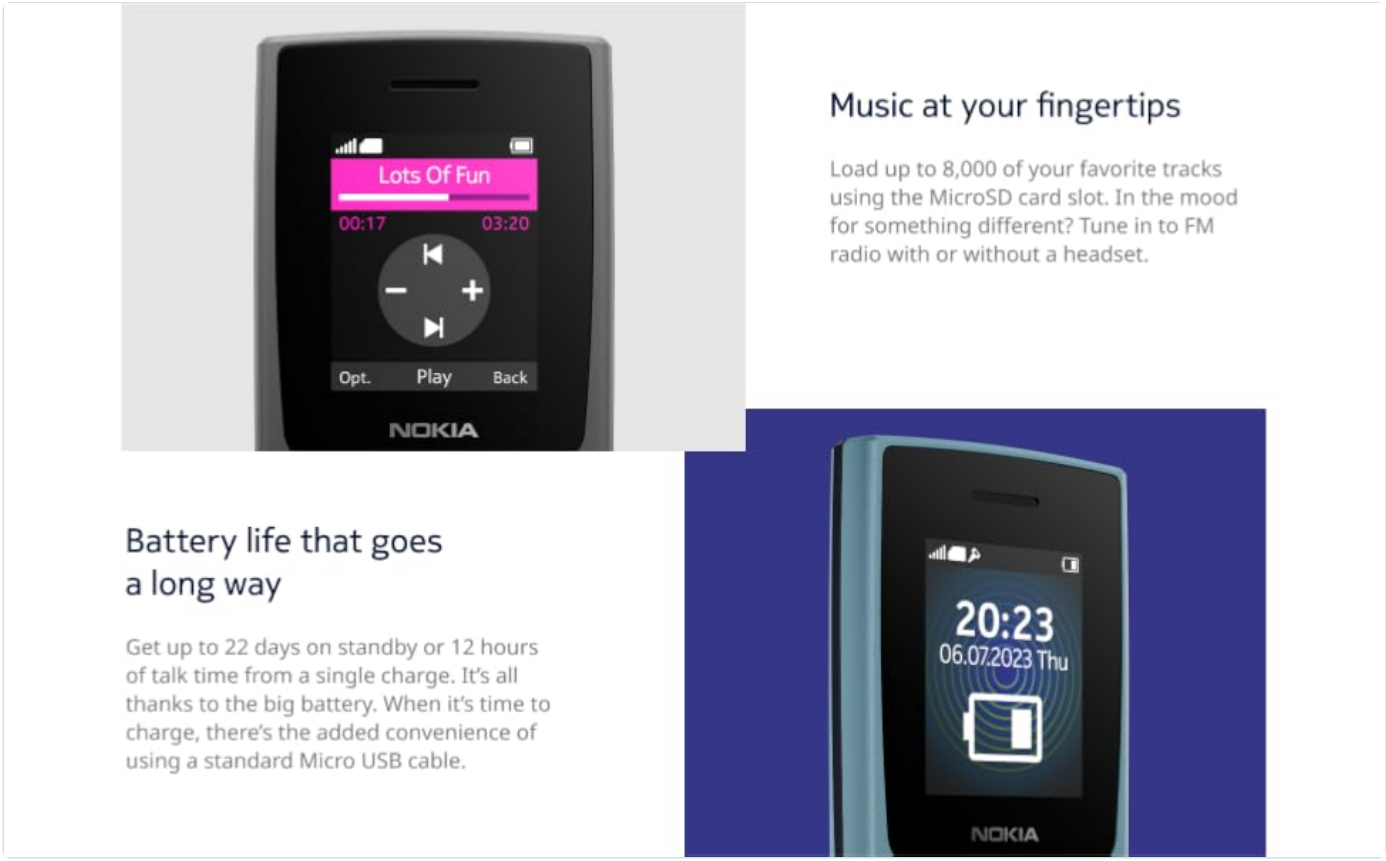


Figure 4: The Nokia 110 4G displaying its music player interface.

Torch

- To activate the built-in torch, press and hold the '0' key on the keypad.
- Repeat the action to turn it off.

Games

The phone comes with pre-loaded games for entertainment.

- Navigate to "Menu" > "Games".
- Select a game from the list to start playing.

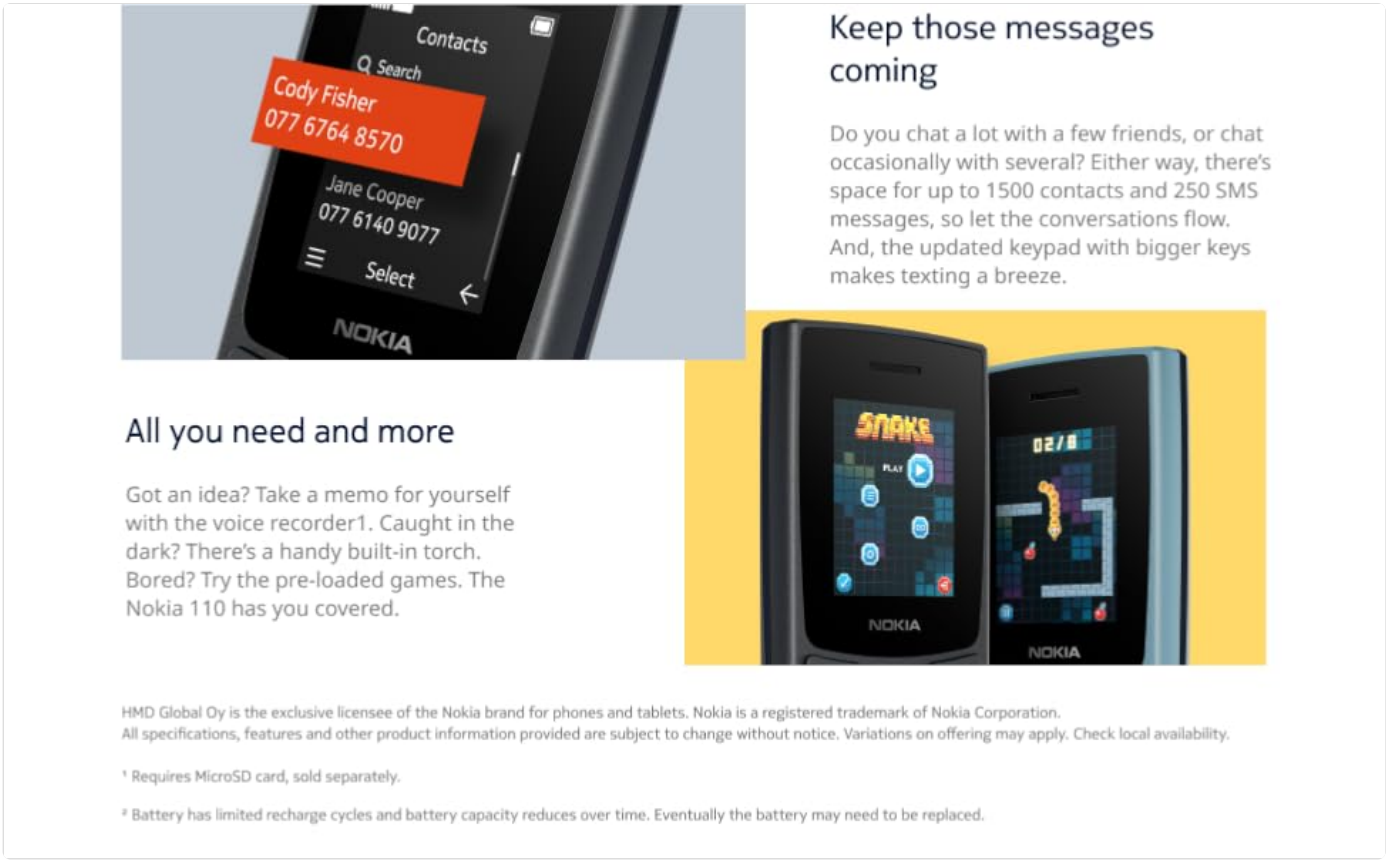


Figure 5: The Nokia 110 4G displaying a pre-loaded game.

Connectivity

- **4G VoLTE:** Supports high-definition voice calls over 4G networks. Ensure your carrier supports VoLTE for optimal call quality.
- **Bluetooth:** For connecting to compatible wireless accessories like headsets. Navigate to "Menu" > "Settings" > "Connectivity" > "Bluetooth" to enable and pair devices.
- **USB:** Use the provided USB cable to connect your phone to a computer for file transfer or charging.

Maintenance

Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not puncture, damage, or disassemble the battery.
- Use only Nokia-approved chargers and cables.
- If the battery capacity significantly reduces over time, it may need to be replaced by a qualified service center.

Cleaning Your Phone

- Use a soft, lint-free cloth to clean the phone's surface.
- Do not use harsh chemicals or abrasive materials.
- Keep the charging port and headphone jack free of dust and debris.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Phone does not power on.	Battery is drained or not properly inserted.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No network signal, incorrect SIM insertion, or incompatible carrier.	Check network signal strength. Reinsert SIM card. Verify carrier compatibility (e.g., not compatible with AT&T/Cricket/Verizon).
Charging issues.	Loose cable connection, faulty charger/cable, or dirty port.	Ensure cable is securely connected. Try a different outlet or charger. Clean the charging port.
Poor call quality.	Weak signal or network congestion.	Move to an area with better network coverage.

Specifications

Feature	Detail
Model Name	Nokia 110 4G
Item Model Number	TA-1563
Operating System	Series 30+
Display Size	1.8 Inches
Resolution	160 x 120
Camera	Rear 1.0MP with macro mode
Battery Capacity	1450 mAh Lithium Polymer
Talk Time	Up to 8 Hours
Memory Storage Capacity	128 MB (Expandable with 32 GB card support)
RAM Memory Installed Size	512 MB
Product Dimensions	4.78 x 1.97 x 0.57 inches
Item Weight	3.28 ounces
Connectivity	4G VoLTE, Bluetooth, USB
Special Features	Basic Phone, Dual SIM, Expandable Memory, Wireless FM Radio, Torch

Safety Information

Please read these simple guidelines. Not following them may be dangerous or illegal.

- **Switch off in restricted areas:** Switch off the device when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas.
- **Road safety first:** Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

- **Interference:** All wireless devices may be susceptible to interference, which could affect performance.
- **Qualified service:** Only qualified personnel may install or repair this product.
- **Batteries, chargers, and other accessories:** Use only batteries, chargers, and other accessories approved by HMD Global Oy for use with this device. Do not connect incompatible products.
- **Keep your device dry:** Your device is not water-resistant. Keep it dry.
- **Protect your hearing:** To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Warranty and Support

Your Nokia 110 4G mobile phone comes with a limited manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Nokia support website. For technical support, troubleshooting assistance, or to inquire about service, please contact Nokia customer support through their official channels. Keep your proof of purchase for warranty claims.

© 2025 Nokia. All rights reserved. Nokia and the Nokia logo are trademarks of Nokia Corporation.
Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question