PayLessHere SL Track Full Body Massage Chair

PayLessHere SL Track Full Body Massage Chair User Manual

Model: SL Track Full Body Massage Chair

1. Safety Information

Please read all safety instructions carefully before operating the massage chair. Retain this manual for future reference.

- Always assemble the chair according to the provided instructions. Ensure all components are securely fastened before use.
- Be cautious when using the zero-gravity and reclining features to avoid injury. Ensure no obstructions are present in the chair's movement path.
- Keep the chair away from heat sources, direct sunlight, and damp environments to prevent damage.
- Do not use the chair if the power cord is damaged. Contact customer support for replacement or repair.
- This product is intended for adult use. Keep children and pets away from the chair, especially during operation.
- Do not stand on the chair or use it for purposes other than massage and relaxation.
- If you experience any discomfort or pain during a massage, discontinue use immediately.
- Consult a physician before using this product if you have pre-existing medical conditions, are pregnant, or have a pacemaker.

2. Product Overview

The PayLessHere SL Track Full Body Massage Chair is designed to provide a comprehensive and relaxing massage experience. Key features include:



Image: The PayLessHere SL Track Full Body Massage Chair, showcasing its brown and beige faux leather design in an upright position.

SL Track System

The advanced SL track system allows the massage rollers to extend from your neck down to your thighs, providing a full-body massage that follows the natural curve of your spine.



Image: A diagram showing the "Longer SL Track" and how the massage mechanism covers the neck, shoulder, back, waist, hip, and thigh areas.

Zero Gravity Reclining

Experience a feeling of weightlessness with the zero-gravity recline function. This position elevates your legs slightly above your heart, reducing pressure on your spine and promoting circulation.



Image: A person reclining in the massage chair in the zero-gravity position, with a graphic indicating "ZERO GRAVITY POSITION" and "Release the pressure of whole body."

Full Body Airbag Massage

Strategically placed airbags provide compression massage to various body parts, including shoulders, arms, and legs, to relieve tension and improve circulation.

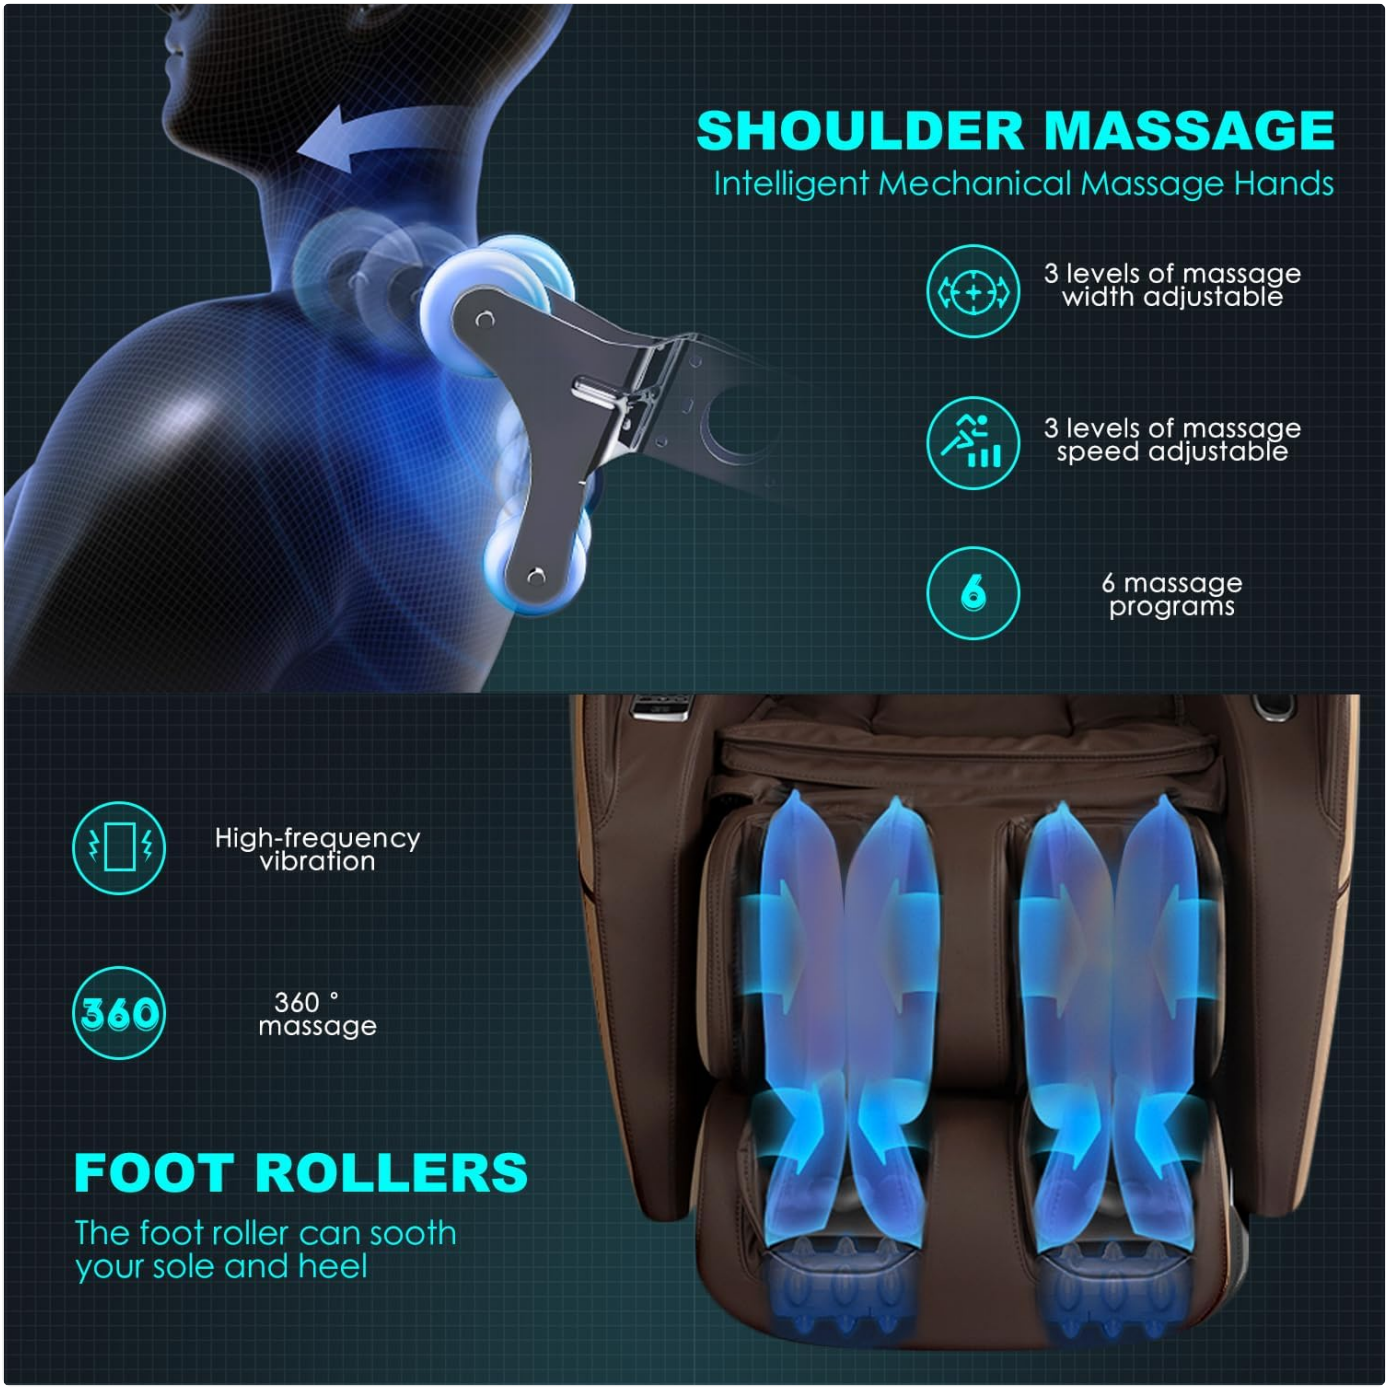


Image: A diagram highlighting the "AIRBAG MASSAGE" areas, including shoulder airbags, arm airbags, leg airbags, and foot massage rollers, with a heat symbol on the backrest.

Back Heat Therapy

Integrated heating elements in the lower back region provide gentle warmth at approximately 45°C (113°F), helping to soothe muscles, relieve stiffness, and enhance the massage effect.

Computerized Body Scanning

The chair features smart body scan technology that automatically detects your body size and the length of your spine. This allows for a personalized massage experience, adjusting the massage intensity and range to fit your unique physique.

Bluetooth Speaker & USB Charger

Connect your device via Bluetooth to enjoy your favorite music during your massage. A built-in USB charger allows you to conveniently charge your electronic devices.

Foot Rollers

The footrest includes specialized rollers that provide a soothing massage to the soles and heels of your feet, targeting pressure

points for ultimate relaxation.



Image: A split image showing the "SHOULDER MASSAGE" mechanism with adjustable width and speed, and the "FOOT ROLLERS" with high-frequency vibration and 360° massage capabilities.

3. Setup Instructions

Assembly is required for this massage chair. Please follow these general steps. Refer to the separate assembly guide included in your packaging for detailed, model-specific instructions.

1. **Unboxing:** Carefully remove all components from the packaging. Check against the parts list in your assembly guide to ensure all parts are present.
2. **Base Assembly:** Assemble the main base of the chair according to the instructions. This typically involves attaching the side panels and securing them.
3. **Backrest Attachment:** Connect the backrest to the main base. Ensure all electrical connections are properly seated before securing the backrest.
4. **Footrest Installation:** Attach the footrest assembly to the main chair body. Verify that the connecting cables are properly routed and connected.

5. **Armrest Placement:** Secure the armrests to the chair.
6. **Power Connection:** Once fully assembled, place the chair in its desired location, ensuring adequate space for reclining. Connect the power cord to the chair and then to a grounded electrical outlet.
7. **Initial Check:** Before first use, sit in the chair and gently test the recline and basic functions to ensure smooth operation.

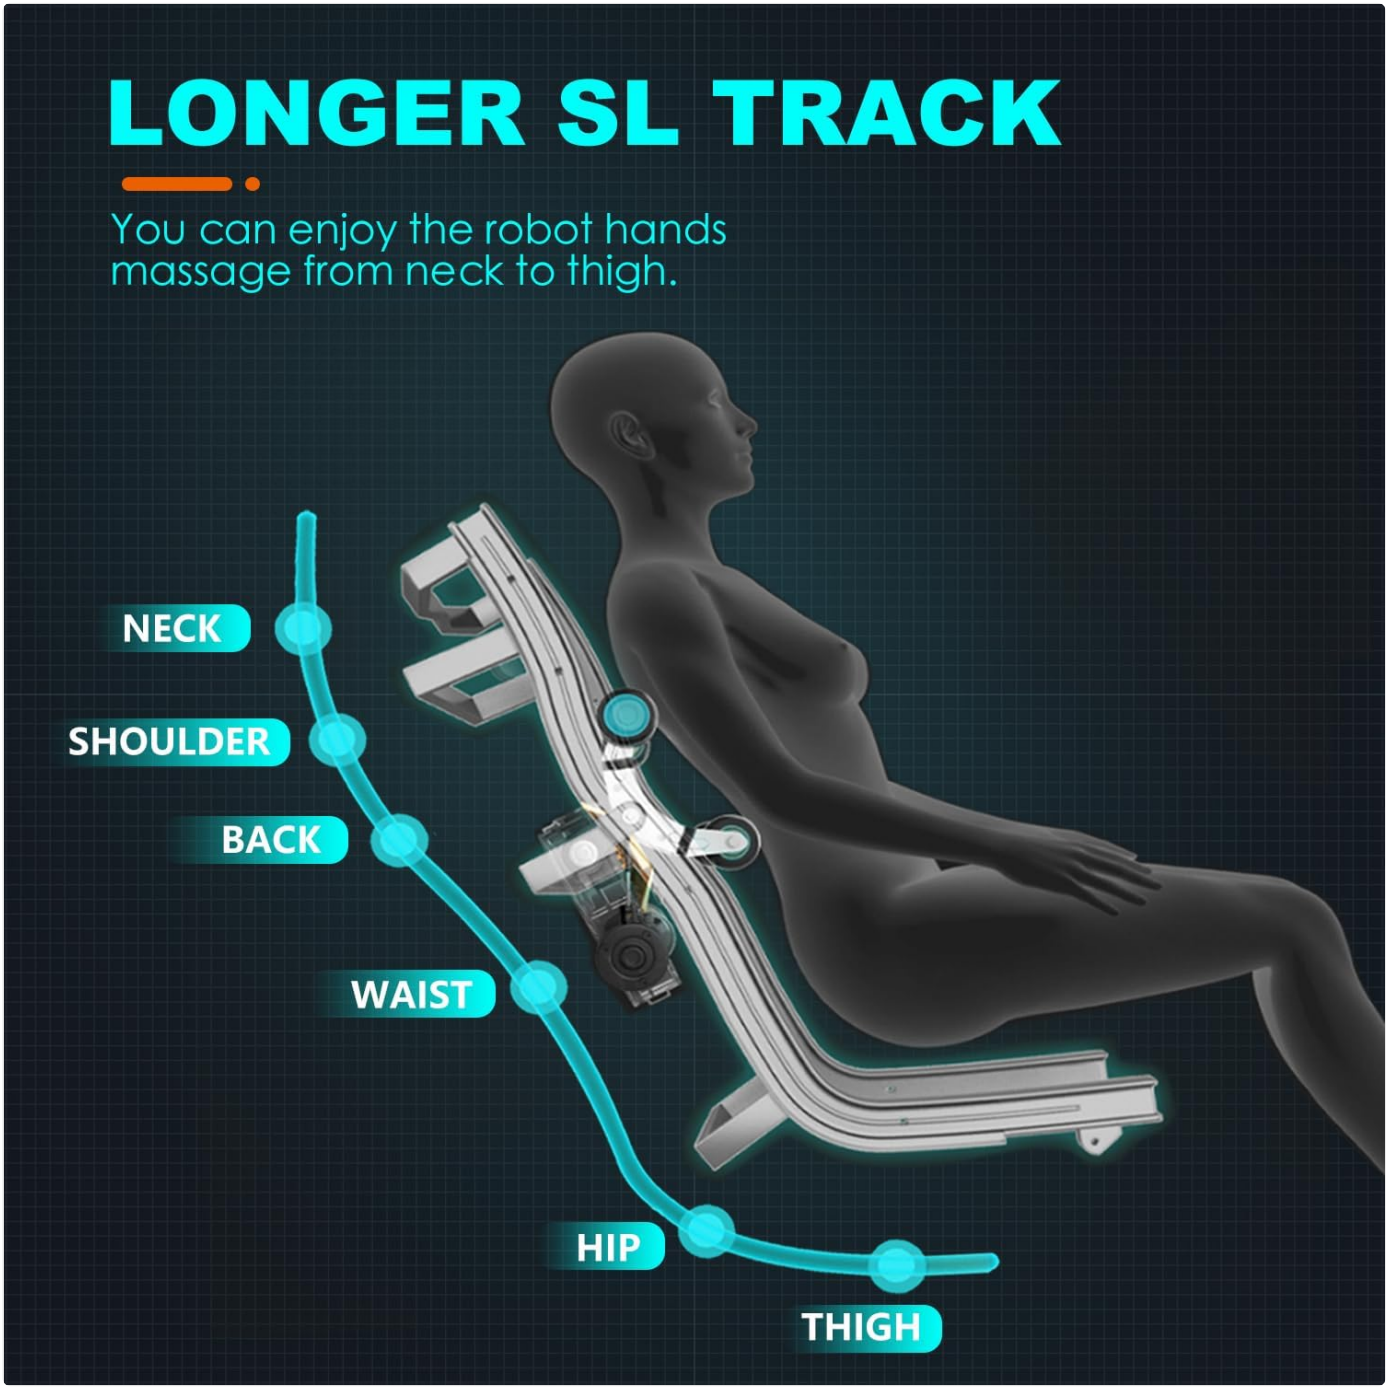


Image: "SIZE INFORMATION" diagram showing the chair's dimensions: 41.7" upright height, 29.1" upright width, 33.1" full recline height, and 65" full recline length.

4. Operating Instructions

Familiarize yourself with the control panel (typically located on the armrest) to operate the chair's functions.

Power On/Off

Press the **Power** button to turn the chair on or off. The chair will typically perform a body scan upon startup.

Auto Programs

The chair offers 8 pre-set auto massage programs:

- Fast Massage
- Comfortable Massage
- Easy Massage
- Whole Body Massage
- Shoulder and Neck Massage
- Back and Waist Massage
- Traction Massage
- Exercise Recovery

Select your desired program using the dedicated buttons on the control panel.

Manual Massage Settings

Customize your massage with manual settings:

- **Massage Scope:** Choose from five different massage scopes (e.g., kneading, tapping, shiatsu).
- **Massage Strength:** Adjust the intensity with 3 levels of massage strength.
- **Massage Width:** For shoulder and back massage, adjust the width of the rollers (3 levels).
- **Massage Speed:** Control the speed of the massage rollers (3 levels).

Zero Gravity Function

Press the **Zero Gravity** button to recline the chair into the zero-gravity position. Multiple zero-gravity stages may be available; press the button repeatedly to cycle through them.

Back Heat Therapy

Activate the back heat function using the **Heat** button on the control panel. The heat will gently warm the lower back area.

Bluetooth Speaker

To use the Bluetooth speaker:

1. Ensure the massage chair is powered on.
2. Enable Bluetooth on your mobile device.
3. Search for available devices and select "Massage Chair" (or similar name) to pair.
4. Once paired, audio from your device will play through the chair's speakers.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your massage chair.

- **Cleaning:** For general cleaning, wipe the chair's surface with a soft, damp cloth. For stains, use a mild soap solution and spot clean. Do not use harsh chemicals or abrasive cleaners.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.
- **Storage:** When not in use for extended periods, unplug the chair and store it in a cool, dry place away from direct sunlight.
- **Moving the Chair:** If you need to move the chair, ensure it is in the upright position and unplugged. Use caution and seek assistance if necessary due to its weight.

6. Troubleshooting

If you encounter any issues with your massage chair, please refer to the following common solutions:

Problem	Possible Cause	Solution
Chair does not power on.	Power cord not properly connected; power outlet not working; power switch off.	Ensure power cord is securely plugged into both the chair and a working wall outlet. Check the power switch on the chair. Test the outlet with another device.
Massage rollers are not moving.	Chair is in standby mode; program not selected; safety sensor activated.	Press the power button to ensure the chair is fully on. Select an auto program or manual massage setting. Ensure no obstructions are preventing roller movement.
Bluetooth speaker not connecting.	Bluetooth on device is off; chair not in pairing mode; incorrect device selected.	Ensure Bluetooth is enabled on your device. Power cycle the chair. Re-scan for devices and select the correct chair name.
Unusual noise during operation.	Loose component; foreign object; normal operational sound.	Check for any loose parts or objects. Some operational sounds (e.g., motor, air pump) are normal. If the noise is loud or unusual, discontinue use and contact support.

If the problem persists after attempting these solutions, please contact customer support.

7. Specifications

Feature	Detail
Brand	PayLessHere
Model Name	SL Track Full Body Massage Chair
Colour	Brown
Material	Faux Leather, Foam
Product Dimensions (D x W x H)	165D x 74W x 105H Centimetres (65 x 29.1 x 41.3 inches approx.)
Item Weight	150 Pounds (68 kg approx.)
Back Style	Wing Back
Special Feature	Reclining, Zero Gravity, Airbag Massage, Bluetooth Speaker, Foot Roller, USB Charger, Heat Therapy, Body Scanning
Product Care Instructions	Spot Clean
Recommended Uses	Relaxing
Assembly Required	Yes
Reclining Position Count	2 (Zero Gravity stages)
Indoor/Outdoor Usage	Indoor

8. Warranty and Support

Warranty Information

This PayLessHere massage chair comes with a **90-day manufacturer's warranty** from the date of purchase. This warranty

covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.
The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

Customer Support

For technical assistance, warranty claims, or any questions regarding your PayLessHere SL Track Full Body Massage Chair, please contact our customer support team.
Please refer to the contact information provided with your purchase or visit the official PayLessHere website for support details.

© 2023 PayLessHere. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question