Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GOJOOASIS GJ-GYM-PT

GOJOOASIS Chicken Activity Play Set User Manual

Model: GJ-GYM-PT

Introduction Safety Components Setup Operation Maintenance Troubleshooting Specifications Warranty Support

1. Introduction

This manual provides instructions for the assembly, operation, and maintenance of your GOJOOASIS Chicken Activity Play Set, Model GJ-GYM-PT. This product is designed to offer a stimulating environment for poultry and other birds, promoting natural behaviors such as perching, climbing, and foraging.

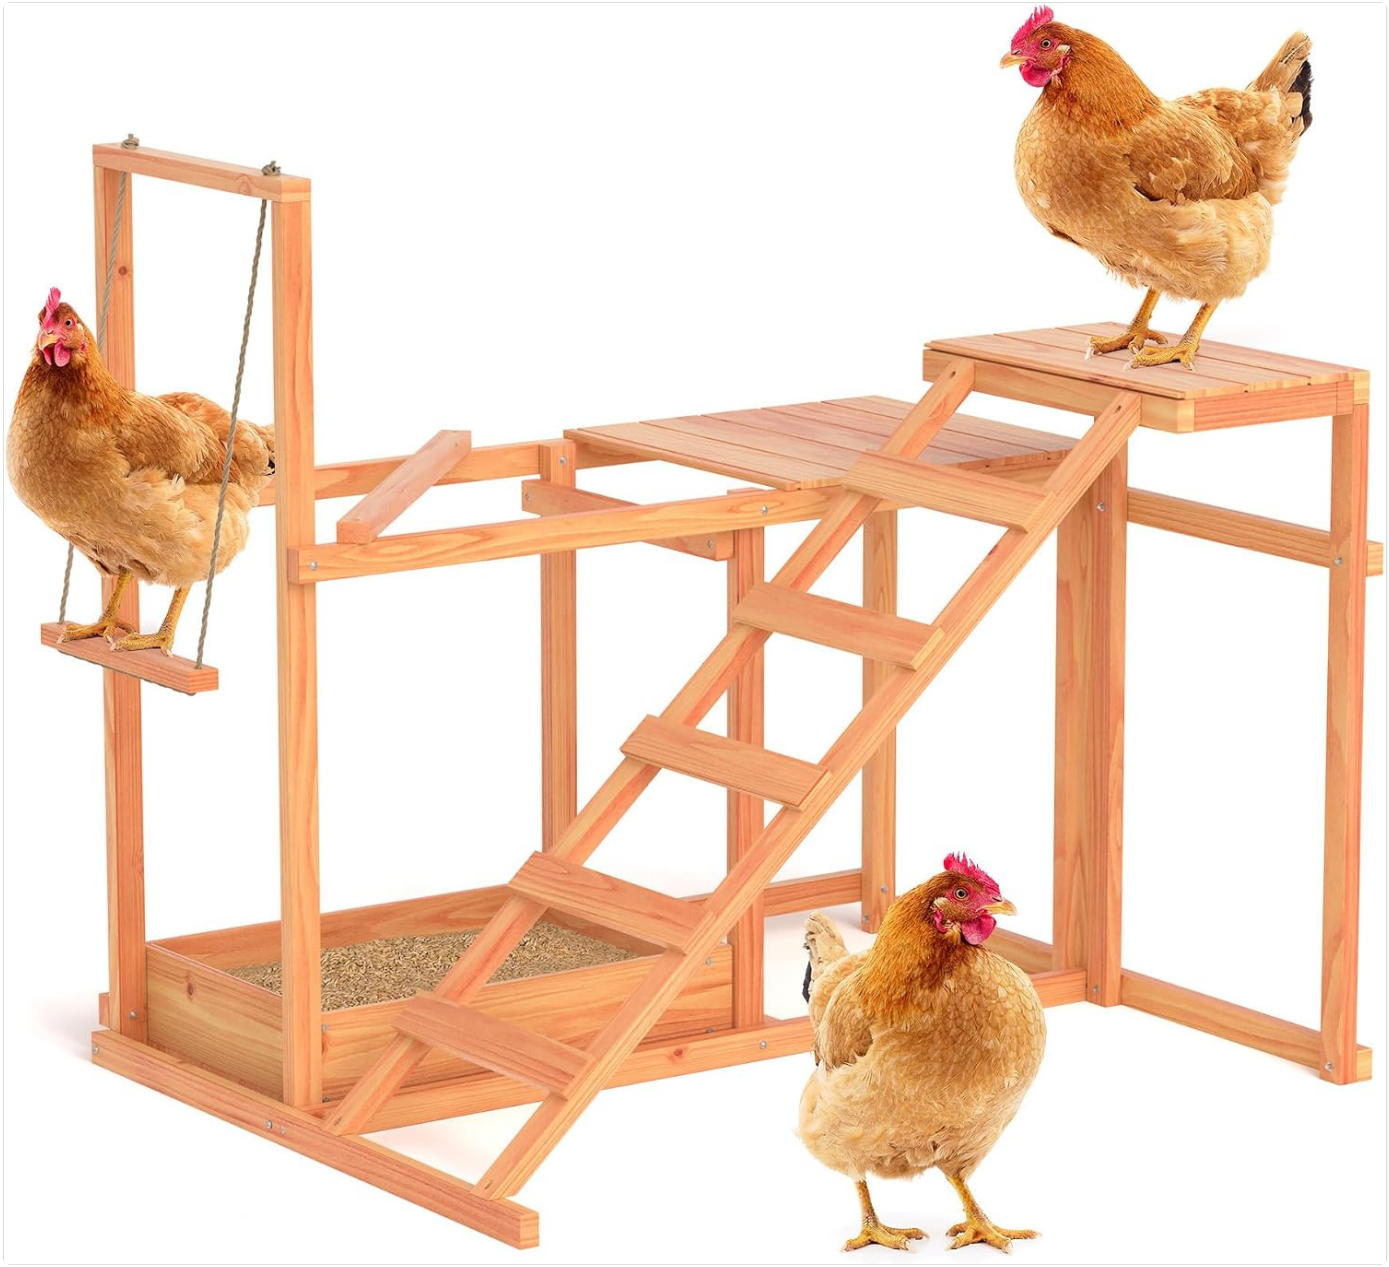


Image 1.1: The GOJOOASIS Chicken Activity Play Set, featuring multiple levels, a ramp, and a swing, with chickens utilizing the structure.

2. Safety Information

- Ensure all components are securely fastened before allowing animals to use the play set.
- Regularly inspect the play set for any loose parts, splinters, or damage. Repair or replace as necessary.
- Place the play set on a stable, level surface to prevent tipping.
- Keep small children and pets supervised when near the play set.
- This product is intended for animal use only.

3. Package Contents and Features

Before assembly, verify that all parts are present and undamaged. The GOJOOASIS Chicken Activity Play Set includes the following main components:

- Natural fir wood frame components
- Multiple perching platforms
- Staggered wooden ladder/ramp

- Chicken swing
- Integrated food storage area (or activity box)
- Assembly hardware (screws, bolts, etc.)



Image 3.1: Key features of the play set, including the swing, food box, wider stairs, and resting platforms.

4. Setup and Assembly Instructions

Assembly requires careful attention to detail. It is recommended to lay out all components and hardware before beginning. A Phillips head screwdriver and possibly a drill with a small pilot bit may be helpful.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Refer to the included parts list (if available) to identify each piece.
2. **Assemble Base Structure:** Begin by connecting the main base frame pieces. Ensure all connections are flush and stable.
3. **Attach Vertical Supports:** Secure the vertical support beams to the base.
4. **Install Platforms and Ramp:** Mount the perching platforms and the climbing ramp according to the design. Ensure the ramp is securely attached to prevent movement.
5. **Attach Swing:** Connect the swing mechanism to its designated frame. Verify it swings freely and securely.
6. **Integrate Food Storage:** Place the food storage box into its designated slot.
7. **Final Tightening and Inspection:** Once all components are assembled, go back and tighten all screws and bolts. Inspect the entire structure for stability and any sharp edges or splinters. Sand down any rough areas if necessary.

Important Note on Assembly:
Some users have reported challenges with pre-drilled holes not aligning or being absent for certain screws. If you encounter this, carefully use a small drill bit to create pilot holes before inserting screws to prevent wood splitting and ensure a secure fit. Do not force screws into un-drilled wood.

Image 4.1: The assembled play set in an outdoor environment, demonstrating its intended use.

5. Operating Instructions and Placement

The GOJOOASIS Chicken Activity Play Set is designed for use in chicken coops or outdoor lawn areas. It provides various activity options for poultry and other birds.

- **Placement:** Position the play set on a flat, stable surface within your chicken coop or a secure outdoor area. Ensure it is not easily tipped over.
- **Encouraging Use:** You can encourage your chickens to use the play set by placing treats or feed on the platforms or in the designated food storage area.
- **Activity Benefits:** The staggered perches and ramp provide opportunities for climbing and exercise, which can help trim beaks and nails naturally. The swing offers an additional enrichment activity.
- **Suitability:** While suitable for various breeds, smaller chickens and younger birds may utilize all features, such as the swing, more readily than larger breeds.



Image 5.1: A rooster demonstrating use of the top platform within a coop environment.

6. Maintenance

Proper maintenance will extend the life of your play set and ensure the safety of your animals.

- **Cleaning:** Wipe clean with a damp cloth as needed. Avoid using harsh chemicals.
- **Moisture Protection:** Avoid getting the product excessively wet. Prolonged exposure to moisture can damage the wood.
- **Storage:** Store indoors when not in use, especially during inclement weather, to protect the wood from elements.
- **Inspection:** Periodically check all joints and connections for tightness. Re-tighten screws as necessary. Inspect wood for splinters or signs of wear and tear.

7. Troubleshooting

Problem	Possible Cause	Solution
Difficulty with assembly, screws not fitting.	Misaligned or missing pilot holes; incorrect screw type.	Ensure you are using the correct hardware for each step. If pilot holes are missing or misaligned, carefully drill a small pilot hole before inserting the screw. Do not force screws.
Wood splintering during assembly.	Forcing screws without pilot holes; natural wood characteristics.	Always use pilot holes. If splinters occur, gently sand them down to prevent injury to animals.
Play set feels unstable after assembly.	Loose connections; uneven placement surface.	Re-tighten all screws and bolts. Ensure the play set is placed on a firm, level surface.
Animals not using certain features (e.g., swing, food box).	Lack of familiarity; size of animal; preference.	Encourage use with treats. Some features may be better suited for smaller birds or specific breeds. Observe animal behavior to understand preferences.

8. Product Specifications

Model: GJ-GYM-PT

Brand: GOJOOASIS

Material: Natural Fir Wood

Overall Dimensions (L x W x H): 34.5" x 27.5" x 31.5"

Recommended Use: Outdoor, within chicken coops or on lawns.

Suitable For: All breeds and ages of chickens, medium to large parrots.

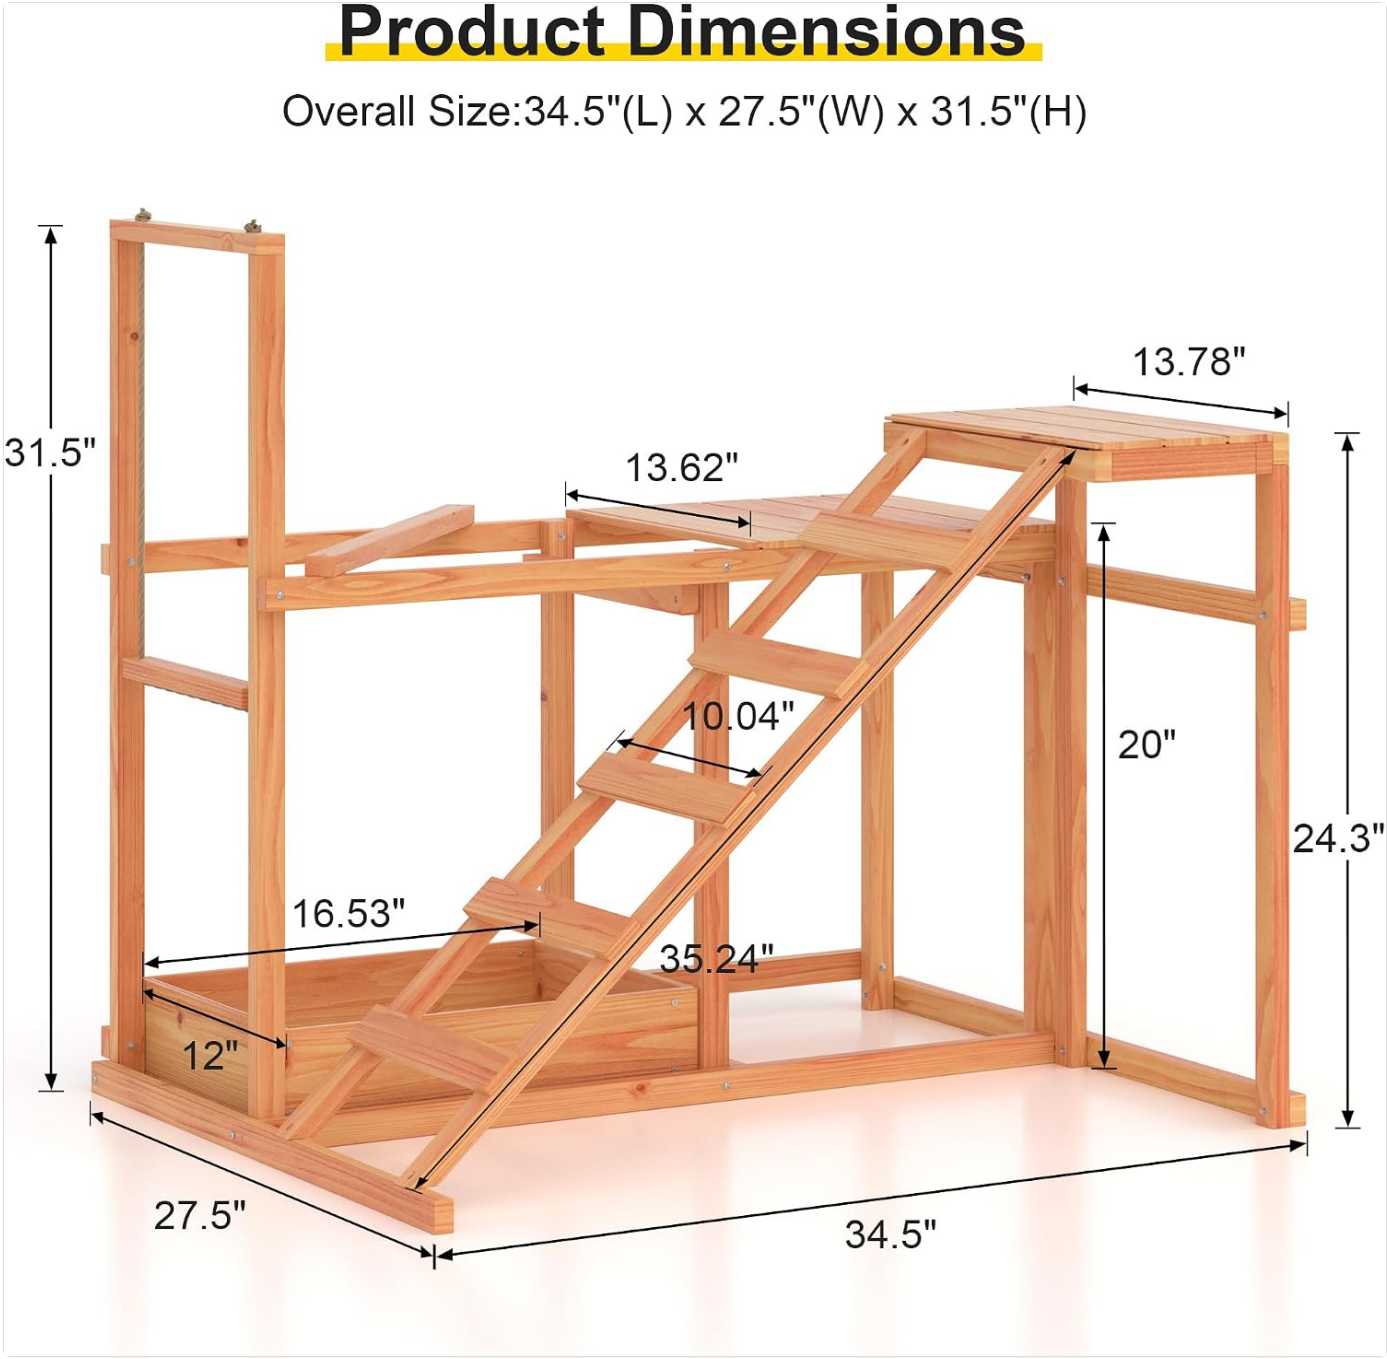


Image 8.1: Dimensional overview of the play set.

9. Warranty Information

This GOJOOASIS product is covered by a manufacturer's warranty for**30 days from the date of purchase**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, neglect, accidents, unauthorized modifications, or normal wear and tear.
To make a warranty claim, please retain your proof of purchase and contact customer support.

10. Customer Support

For assistance with assembly, missing parts, or any other inquiries regarding your GOJOOASIS Chicken Activity Play Set, please contact our customer support team.
You can typically find contact information on the retailer's website where you purchased the product or by visiting the official GOJOOASIS brand store:
Visit the GOJOOASIS Store on Amazon
Please have your model number (GJ-GYM-PT) and date of purchase ready when contacting support.

© 2024 GOJOOASIS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CX89JFBR

More documents and user manuals: **https://manuals.plus/**