Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BOSCH DWBA98J60I

Bosch Serie 4 DWBA98J60I Wall-Mounted Cooker Hood User Manual

Model: DWBA98J60I

1. Important Safety Information

Please read these instructions carefully before installation and use of your Bosch cooker hood. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the rating plate. Disconnect power before any installation, maintenance, or cleaning. Do not use if the power cord is damaged.
- **Installation:** Installation must be performed by a qualified technician in accordance with local regulations. Ensure adequate ventilation in the room when the cooker hood is used simultaneously with appliances burning gas or other fuels.
- **Fire Hazard:** Do not flambé under the cooker hood. Never leave frying pans unattended during use, as overheated oil can ignite. Clean grease filters regularly to prevent grease build-up, which is a fire hazard.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.

2. Setup and Installation

The Bosch DWBA98J60I is a wall-mounted cooker hood designed for air extraction only. Proper installation is crucial for optimal performance and safety.

2.1 Dimensions and Mounting

The cooker hood has product dimensions of 1D x 58W x 61H Centimeters. It is designed for wall mounting.



Image: Full view of the Bosch DWBA98J60I cooker hood installed on a wall above a cooking hob.

2.2 Installation Height

Ensure the correct distance between the cooker hood and the cooking surface. The minimum distance from the upper edge of the pan support to the hood should be at least 650 mm.

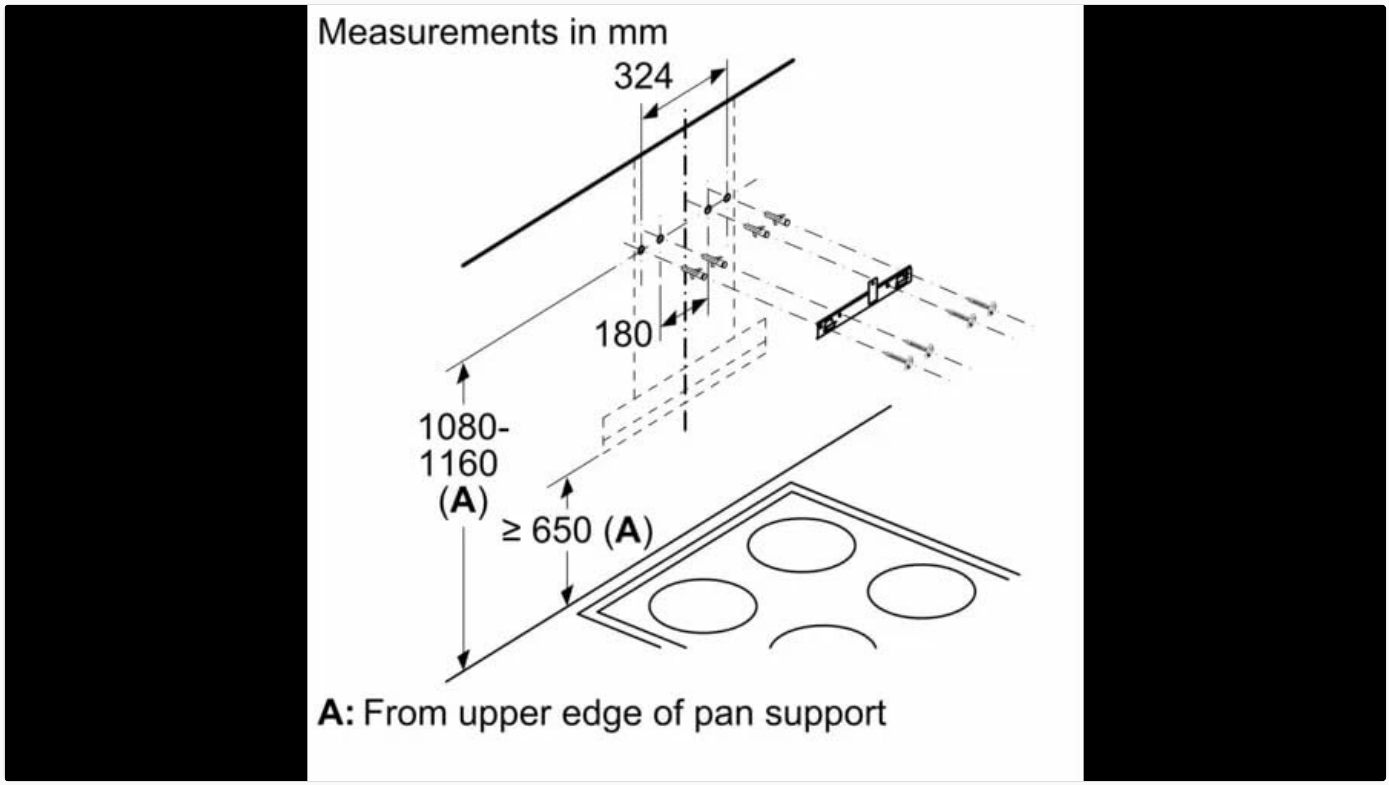


Image: Diagram illustrating the recommended installation height (A) from the upper edge of the pan support, which should be at least 650 mm.

2.3 Exhaust Air Outlet

The diameter of the air outlet is 180 mm. The motor is integrated into the hood chimney. Ensure the exhaust air ducting is correctly installed and sealed.

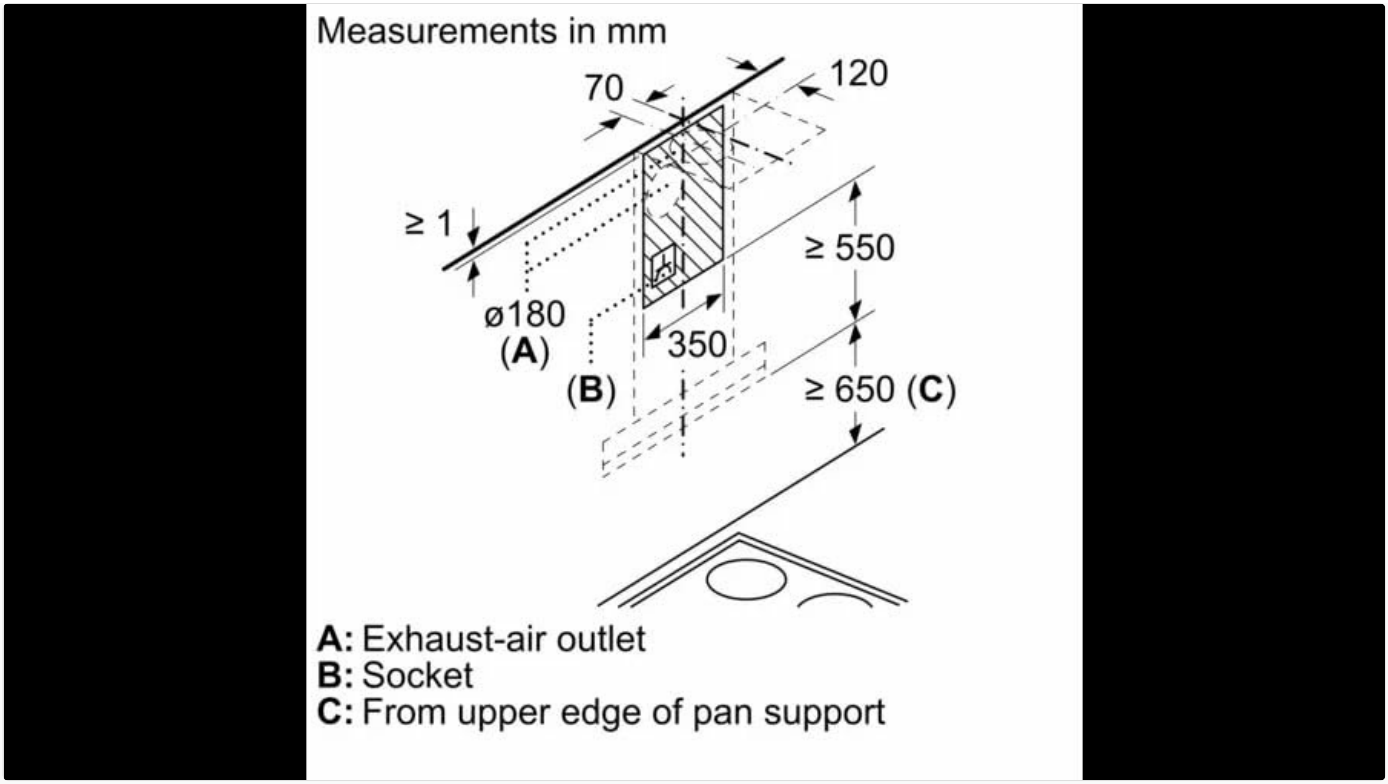


Image: Technical drawing detailing the exhaust air outlet (A) with a diameter of 180 mm, and the position of the socket (B) and minimum distance from the pan support (C).

2.4 Overall Hood Dimensions

Refer to the diagram below for detailed measurements of the cooker hood unit.

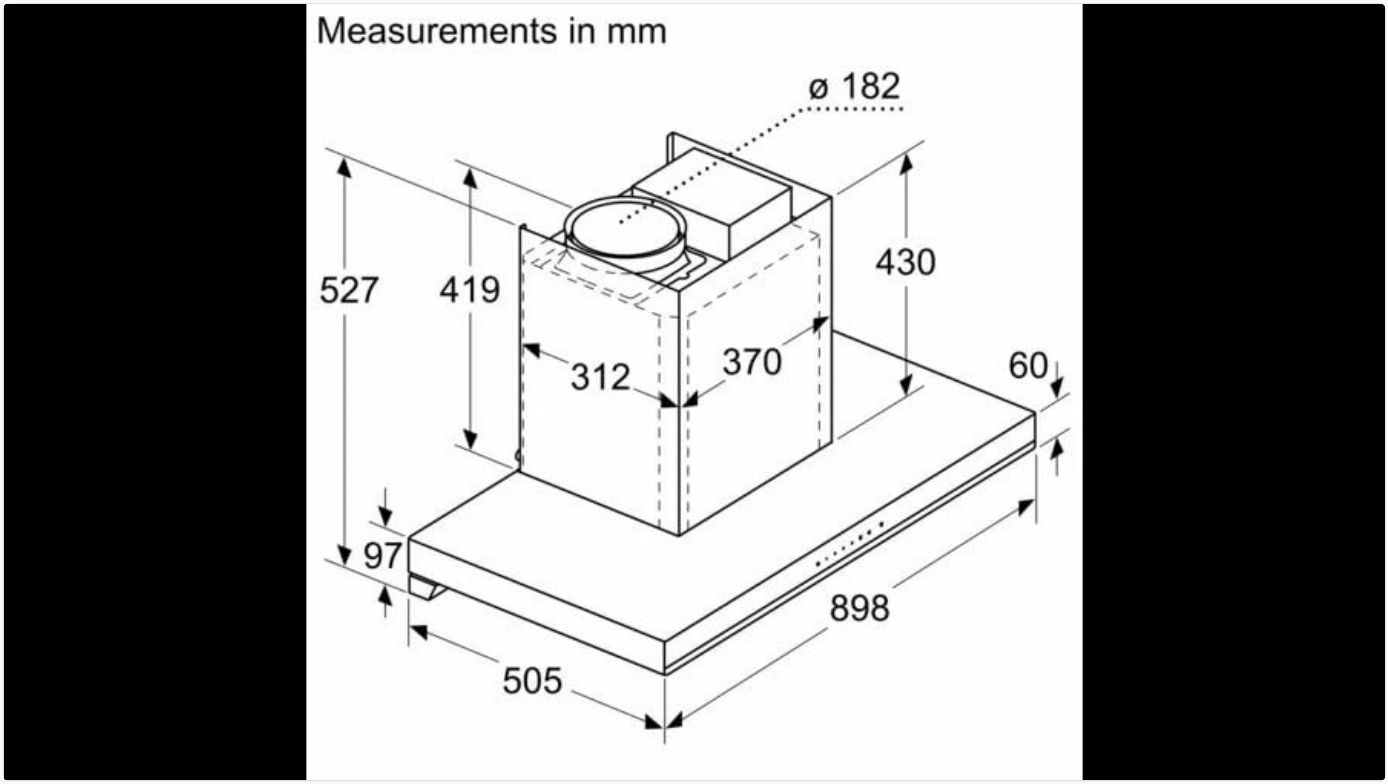


Image: Detailed technical diagram showing the overall dimensions of the cooker hood in millimeters, including width, depth, and height components.

3. Operating Instructions

The Bosch DWBA98J60I cooker hood features touch controls and LED lighting for ease of use.

3.1 Control Panel

The hood is operated via a touch control panel located on the front. The controls typically include power on/off, fan speed selection, and light control.



Image: Close-up view of the touch control panel on the cooker hood, showing buttons for power, fan speeds (1, 2, 3), intensive mode, and lighting.

3.2 Fan Speed Selection

Select the appropriate fan speed based on the intensity of cooking fumes. Lower speeds are suitable for simmering, while higher speeds are for frying or grilling. An intensive mode may be available for strong odors.

3.3 LED Lighting

The cooker hood is equipped with LED lighting to illuminate your cooking area. Press the light button on the control panel to turn the lights on or off.



Image: Underside view of the cooker hood, highlighting the mesh filters and the integrated LED lighting strip.

4. Maintenance

Regular maintenance ensures the longevity and efficient operation of your cooker hood.

4.1 Cleaning Mesh Filters

The cooker hood uses mesh filters to trap grease. These filters should be cleaned regularly, typically every 3-4 weeks depending on usage, to maintain optimal performance and prevent fire hazards.

- **Removal:** Carefully unlatch and remove the mesh filters.
- **Cleaning:** Wash the filters by hand in hot soapy water or in a dishwasher. Ensure they are completely dry before re-installing.
- **Re-installation:** Insert the dry filters back into their slots, ensuring they are securely latched.

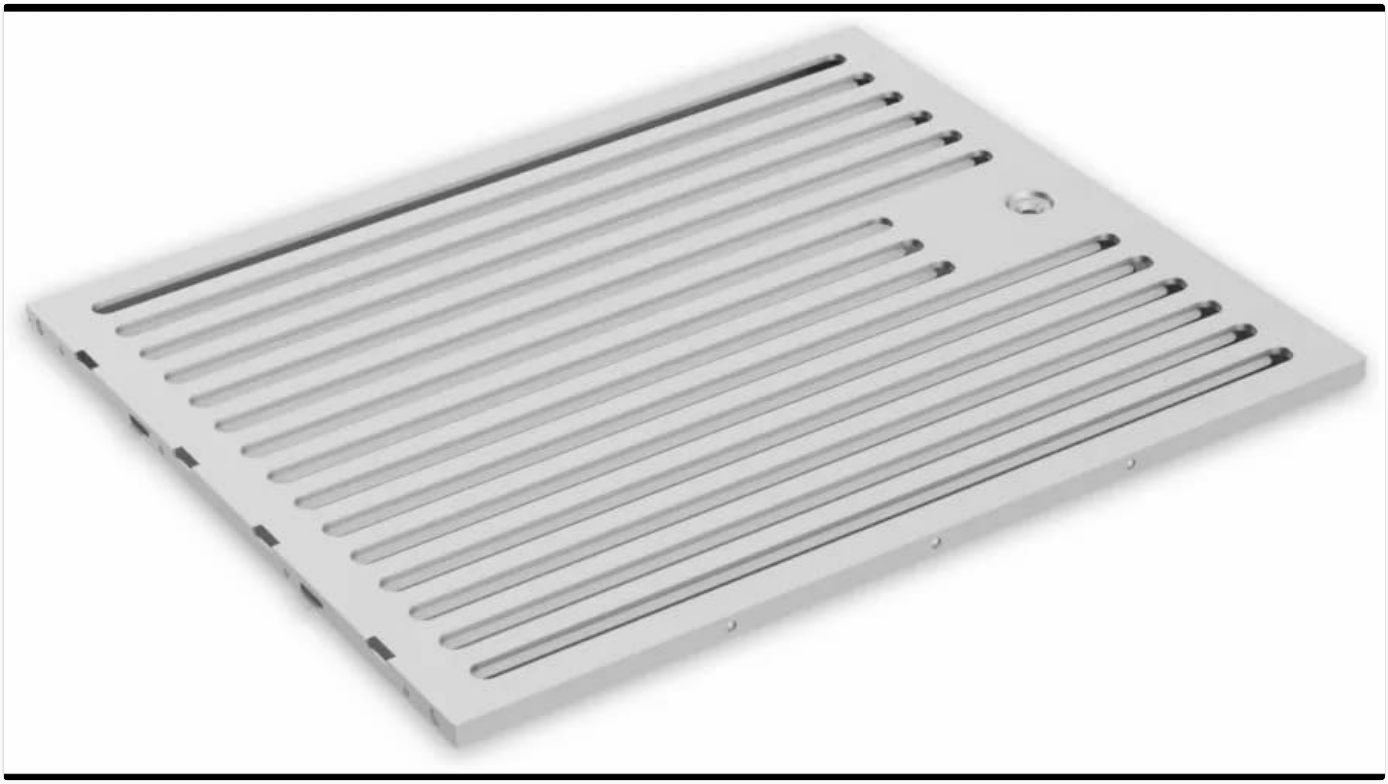


Image: Close-up view of a single mesh filter, highlighting its construction for trapping grease.

4.2 Cleaning the Exterior

Clean the exterior surfaces of the cooker hood with a soft cloth and a mild, non-abrasive cleaning agent. Avoid using harsh chemicals or abrasive pads that could damage the finish.

4.3 LED Lighting Replacement

LED lights are designed for long life. If replacement is necessary, contact qualified service personnel. Do not attempt to replace them yourself unless specifically instructed in a service manual.

5. Troubleshooting

If you encounter issues with your cooker hood, refer to the following common problems and solutions before contacting service.

- **Hood does not turn on:** Check if the power cord is securely plugged in and if there is power to the outlet. Check the circuit breaker.
- **Poor suction:** Ensure the mesh filters are clean and not clogged. Check for any obstructions in the exhaust ducting. Verify that the fan speed is set appropriately for the cooking task.
- **Unusual noise:** Check if the mesh filters are correctly installed and secured. Ensure there are no loose parts or foreign objects inside the hood.
- **Lights not working:** Check if the light button has been pressed. If individual LED lights are out, they may require professional replacement.

If the problem persists after performing these checks, contact customer support.

6. Specifications

Feature	Specification

Feature	Specification
Brand	BOSCH
Model Number	DWBA98J60I
Product Dimensions (D x W x H)	1D x 58W x 61H Centimeters
Colour	BLACK
Special Feature	LED Lighting
Finish Type	Painted
Noise Level	70 Decibels
Mounting Type	Wall Mount
Controls Type	Touch
Voltage	230 Volts
Filter Type	Mesh
Ventilation Type	Ducted/Vented (Air extraction only)
Frequency	50 Hz
Vent Hood Design	Wall Mounted Canopy Hood
Diameter of Air Outlet	180 mm
Number of Motors	1
Motor Location	Integrated motor in hood chimney

7. Warranty Information

This Bosch DWBA98J60I cooker hood comes with a**2-year warranty on the product**. Please retain your purchase receipt and warranty card for any warranty claims. The warranty covers manufacturing defects under normal use conditions.
For detailed terms and conditions, refer to the warranty card included with your product.

8. Customer Support

For technical assistance, service requests, or inquiries regarding your Bosch cooker hood, please contact the manufacturer:

Manufacturer: Crompton Greaves Consumer Electricals Limited

Address: Equinox Business Park, Tower 3, 1st Floor, LBS Marg, Kurla(West), Mumbai - 400070, India

When contacting support, please have your model number (DWBA98J60I) and purchase details ready.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CXDX9BZM

More documents and user manuals: **https://manuals.plus/**