KAER K24G-11-LZ-1500-1

KAER Large Gun Safes for Home - Rifle, Pistol & Shotgun Cabinet

Model: K24G-11-LZ-1500-1 | Brand: KAER

Introduction

This instruction manual provides detailed information for the safe and proper use, assembly, and maintenance of your KAER Large Gun Safe. This product is designed to securely store rifles, pistols, shotguns, and related accessories, offering enhanced security for your firearms and valuables. Please read this manual thoroughly before installation and operation to ensure optimal performance and safety.



Image: The KAER Large Gun Safe, illustrating its dual cabinet design with one side open to reveal rifle and accessory storage, and the other side closed, highlighting the electronic lock and emergency key access.

Safety Information

Your safety and the security of your firearms are paramount. Adhere to the following safety guidelines:

- **Secure Mounting:** Ensure proper mounting to the floor or wall to prevent tipping. This safe must be securely anchored to a stable surface.
- **Weight Limit:** Do not exceed the weight limit of 15 rifles and other accessories. Overloading can compromise the safe's stability and security.
- **Child Safety:** Keep the safe locked at all times and store keys and access codes in a secure location, out of reach of children and unauthorized users.
- **Firearm Safety:** Always ensure firearms are unloaded before storing them in the safe. Follow all local and national laws regarding firearm storage.
- **Emergency Access:** Familiarize yourself with both the digital password and emergency key access methods. Store emergency keys separately from the safe.

Package Contents

The KAER gun safe is shipped in two separate packages (Package A and Package B). Please verify that all components are present upon delivery:

- 1 x Rifle Gun Safe (Main Cabinet - Package A)
- 1 x Accessory Cabinet (Package B)
- 2 x Gun Cabinet Keys (for main safe)
- 2 x Drawer Keys (for internal drawer)
- 4 x M6 Expansion Screws (for mounting)
- 1 x Glove
- 1 x Screwdriver
- 1 x Instruction Manual (this document)

Setup and Assembly

Assembly is required for this gun safe. Two people are recommended for easier and safer assembly. The safe consists of two main units (Package A and Package B) that can be linked together or used separately.

Dimensions and Capacity



Image: Detailed dimensions of the KAER gun safe, indicating its capacity for 15-20 rifles and showing internal measurements for rifle storage and accessory shelves.

- **Package A Product Size:** 15.7"D x 18"W x 59"H
- **Package B Product Size:** 15.7"D x 14.5"W x 59"H
- **Combined Product Size:** 15.74"D x 32.67"W x 59"H
- Can hold handguns and up to 15 rifles.
- Interior equipped with 5 removable shelves for customizable storage.

Assembly Steps

Follow the visual guide below for step-by-step assembly. Use the provided screwdriver and gloves for convenience.

Image: A six-step diagram illustrating the assembly process of the gun safe, from initial component layout to final structural assembly.

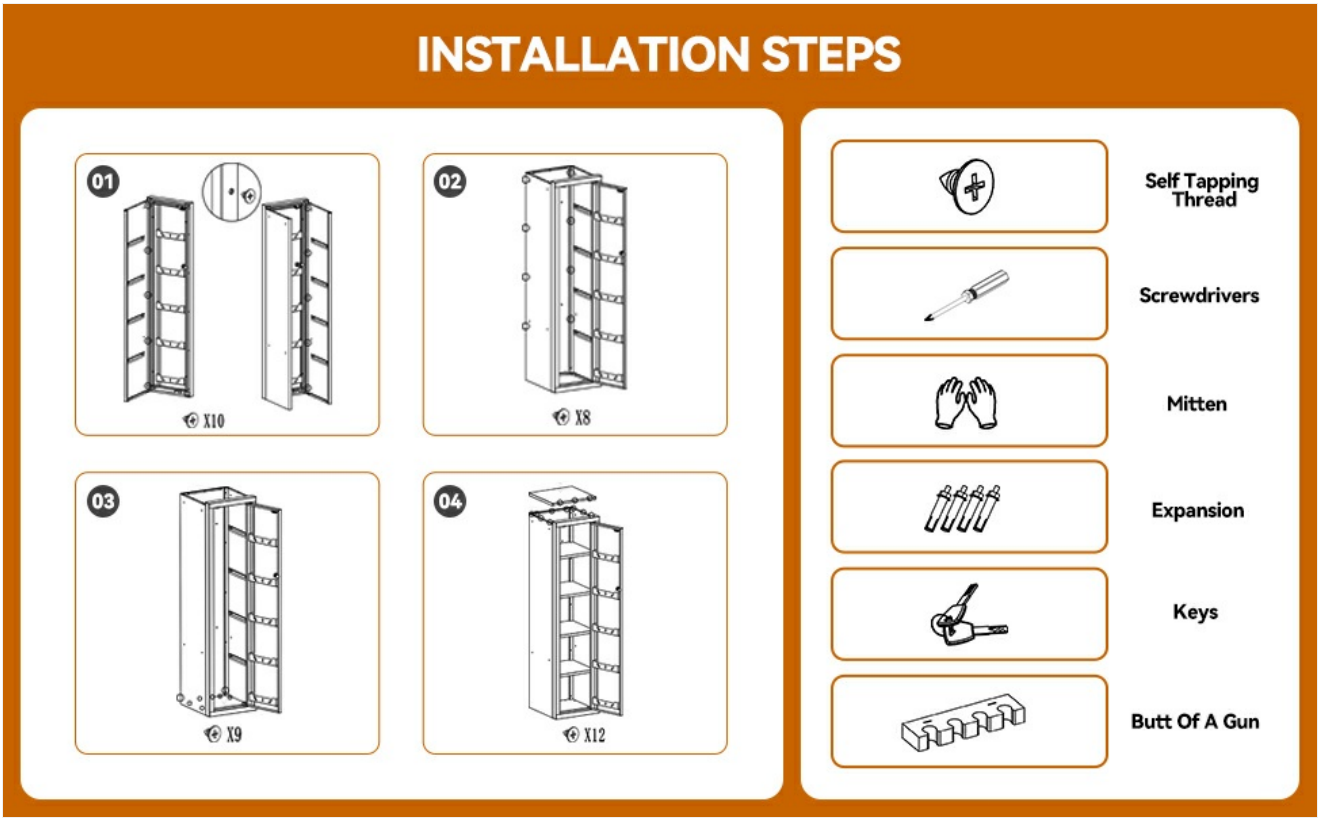


Image: A diagram detailing the tools and components included for assembly, such as self-tapping screws, screwdrivers, mittens, expansion bolts, and keys.

Anchoring the Safe

For maximum security, it is highly recommended to bolt the gun safe to the floor or a wall using the provided M6 expansion screws. This prevents unauthorized removal or tipping.

Image: A three-step diagram illustrating the process of anchoring the gun safe to a wall or floor using expansion bolts for enhanced security.

Operating Instructions

Unlocking Methods

Your KAER gun safe offers two primary methods for unlocking:

1. **Digital Password:** Create your own 3-12 digit combination. Enter the code on the electronic keypad, then turn the door handle to open.
2. **Emergency Key:** In case of battery depletion or forgotten password, use the provided emergency keys. Insert the key into the hidden lock, turn, and then turn the door handle.



Image: A visual guide demonstrating the two unlocking methods for the safe: using a digital password (3-12 digits) and using the emergency key.

External Battery Compartment: When the internal battery is low, you can use the external battery compartment to temporarily power the electronic lock and access the gun cabinet.

Silent Mode and Alarm

The electronic lock features a silent mode and an alarm function:

- **Silent Mode:** Press "11#" on the keypad to switch between silent and non-quiet modes.
- **Password Error Prompt:** If an incorrect password is input, the keypad will sound a beep for 4 times. The alarm sound can only be eliminated after entering the correct password.



Image: An illustration explaining the silent mode feature, activated by pressing "11#", and the password error prompt, which triggers an alarm after multiple incorrect entries.

Interior Features

The safe's interior is designed for versatile storage:

- **Removable Shelves:** The 5 removable shelves allow you to customize the interior space to accommodate various firearm lengths and accessories.
- **Removable Rifle Rack:** Securely holds rifles in place.
- **Drawers:** A bottom drawer provides additional secure storage for bullets, important documents, jewelry, or other small valuables.
- **Pistol Pouch:** Convenient storage for handguns.
- **Magnetic Lamp:** Provides interior illumination.



Image: A detailed breakdown of the safe's interior features, including removable shelves, a removable rifle rack, secure drawers, a pistol pouch, and a magnetic lamp for illumination.

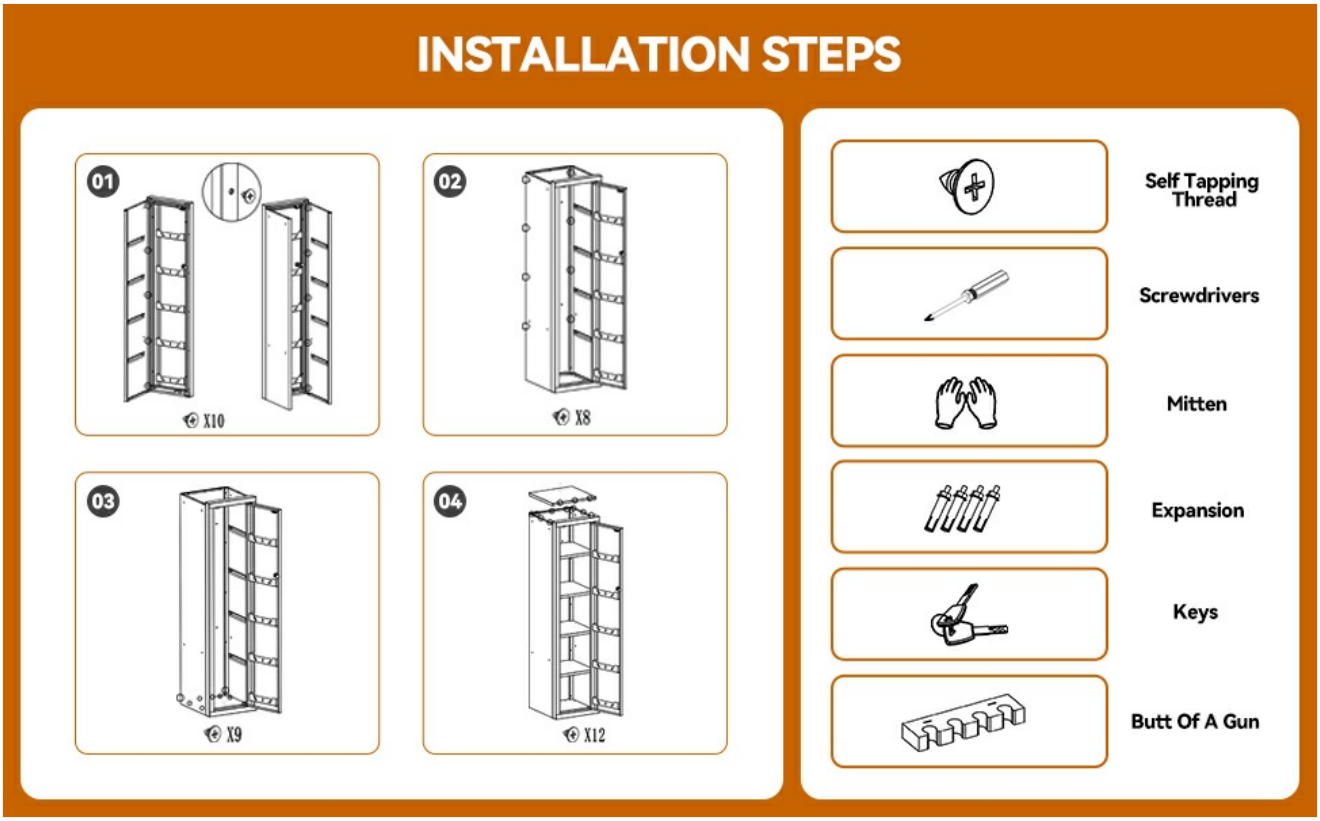


Image: Three views of the safe's interior, demonstrating its flexibility: non-partitioned, with removable shelves highlighted, and fully configured with rifles and accessories.

Maintenance

Regular maintenance ensures the longevity and reliable operation of your gun safe:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, dry cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.
- **Battery Replacement:** The electronic lock requires 4 AA batteries. Replace batteries annually or when the low battery indicator appears. Always use new, high-quality batteries.
- **Lubrication:** Periodically apply a small amount of lubricant to the door hinges and locking bolts to ensure smooth operation.
- **Key Storage:** Store emergency keys in a secure, separate location away from the safe. Do not store them inside the safe.

Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered, low batteries, electronic malfunction.	Re-enter code carefully. Replace batteries. Use emergency key to open.
Keypad does not respond.	Dead batteries.	Replace batteries. Use external battery compartment for temporary power.

Problem	Possible Cause	Solution
Alarm sounds repeatedly.	Incorrect password attempts.	Enter the correct password to silence the alarm.

Specifications

Feature	Detail
Brand	KAER
Model Number	K24G-11-LZ-1500-1
Product Dimensions	15.74"D x 32.67"W x 59"H
Color	Black
Material	Alloy Steel
Lock Type	Electronic Keypad (Digital Password) & Key
Special Feature	Quick Access, Removable Shelves, Internal Drawer
Mounting Type	Floor Mount, Wall Mount
Number of Shelves	5 (removable)
Assembly Required	Yes
UPC	759357461209

Warranty and Support

Warranty: This product comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.
Customer Support: For any questions, technical assistance, or warranty inquiries, please contact KAER customer support through the retailer's platform or the official KAER website. Ensure you have your model number and purchase details ready when contacting support.