TAZPI TASS24

TAZPI TASS24 Dual Zone Wine and Beverage Refrigerator 24-inch User Manual

Model: TASS24

1. Introduction

This manual provides essential information for the safe and efficient operation of your TAZPI TASS24 Dual Zone Wine and Beverage Refrigerator. Please read these instructions thoroughly before installation and use, and retain them for future reference.

The TAZPI TASS24 is a 24-inch dual-zone refrigerator designed for both wine and beverage storage. It features independent temperature control for each zone, a seamless stainless steel door, automatic interior lighting, and a rapid, quiet cooling system. It can be installed as a built-in unit or used freestanding.



Image 1.1: Front view of the TAZPI TASS24 Dual Zone Wine and Beverage Refrigerator.

2. Safety Information

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces immediately after plugging in the unit.

- Ensure the appliance is properly grounded.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not allow children to play with, operate, or crawl inside the appliance.

3. Setup and Installation

3.1 Unpacking

- Remove all packaging materials, including foam and adhesive tape.
- Inspect the appliance for any damage. Report any damage to your retailer immediately.
- Keep packaging materials out of reach of children.

3.2 Placement

Your TAZPI TASS24 refrigerator is designed for both built-in and freestanding installation. Ensure the chosen location meets the following criteria:

- **Clearance:** Allow adequate space for air circulation around the unit. The front heat dissipation design requires unobstructed airflow from the front grille.
- **Level Surface:** Place the unit on a strong, level surface to prevent vibrations and ensure proper door sealing. Adjust the leveling feet if necessary.
- **Temperature:** Avoid direct sunlight or heat sources (e.g., ovens, radiators). The ambient temperature should be between 60°F (16°C) and 90°F (32°C).
- **Dimensions:** For built-in installation, ensure the cabinet opening matches the unit's dimensions: 34.25 inches (H) x 23.42 inches (W) x 22.63 inches (D).



Image 3.1: Installation options and dimensions for built-in or freestanding use.



Image 3.2: Front heat dissipation design for seamless integration into cabinetry.

3.3 Electrical Connection

- Before plugging in, allow the unit to stand upright for at least 2-4 hours to allow refrigerant fluids to settle.
- Connect the appliance to a dedicated, grounded 115V AC, 60Hz electrical outlet. Do not use extension cords or adapter plugs.

3.4 Door Handle Installation

The unit comes with two types of door handles: a modern style and a curved French handle. Choose your preferred style and attach it using the provided screws. Ensure the handle is securely fastened.



Image 3.3: Available door handle styles for customization.

4. Operating Instructions

4.1 Smart Touch Control Screen

The refrigerator features an intuitive touch control screen located on the top panel of each door. Use these controls to adjust temperature settings and manage the interior light.

4.2 Dual Zone Temperature Control

This unit has two independent cooling zones:

- **Left Zone (Beverage):** Temperature range 35-50°F (2-10°C). Ideal for sodas, beer, juice, and other beverages.
- **Right Zone (Wine):** Temperature range 41-64°F (5-18°C). Suitable for red wine, white wine, champagne, and cocktails.

To adjust the temperature, press the 'Up' or 'Down' arrows on the respective zone's control panel. The display will flash the desired temperature and then revert to the current internal temperature. You can switch between Celsius and Fahrenheit using the dedicated button.



Image 4.1: Independent temperature control for beverage and wine zones.



Image 4.2: Recommended temperature ranges for various drinks in each zone.

4.3 Sensor Light

The interior LED light automatically illuminates when the door is opened and turns off when the door is closed. This feature assists in selecting items without needing to manually activate a light switch.

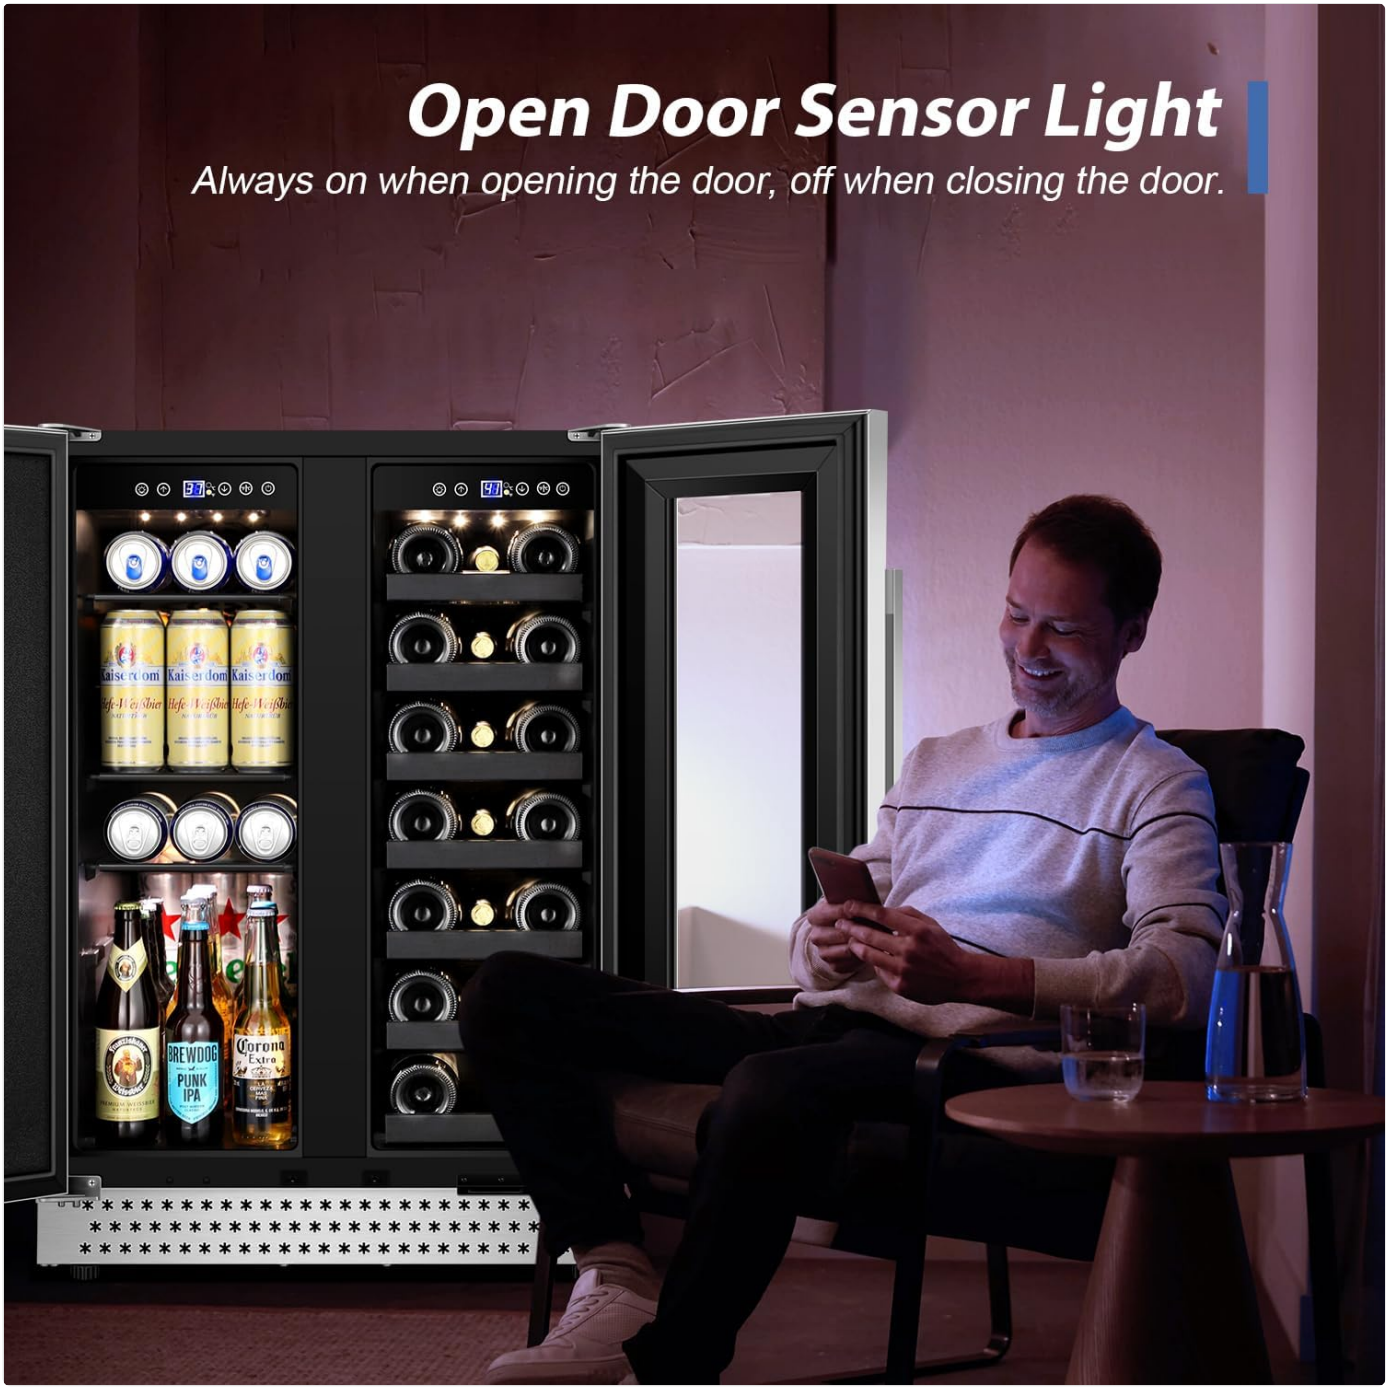


Image 4.3: Automatic sensor light activation upon door opening.

4.4 Temperature Memory Function

In the event of a power failure, the refrigerator's smart temperature memory function will restore the previously set temperatures once power is reinstated. This helps prevent spoilage of stored items.

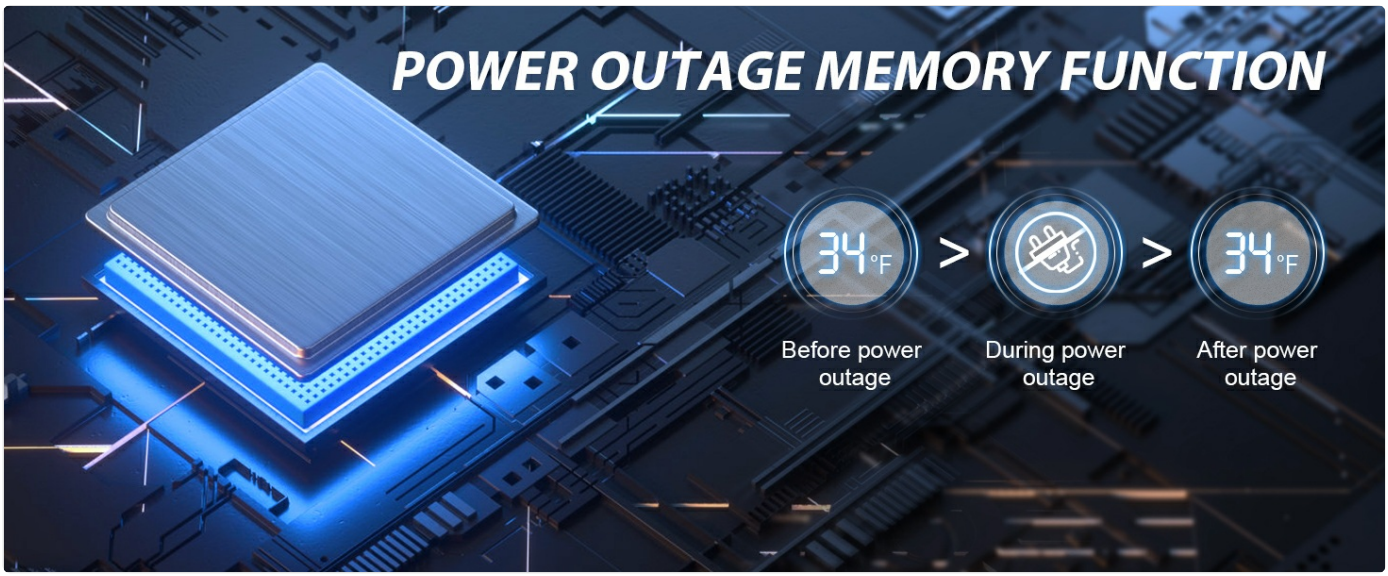


Image 4.4: The refrigerator retains temperature settings after a power interruption.

4.5 Shelf Adjustment and Capacity

The unit includes 3 glass shelves and 7 metal shelves, which are adjustable to accommodate various bottle and can sizes. The total capacity is up to 88 cans and 21 standard wine bottles.



Image 4.5: Interior shelving for organized storage of beverages and wine.



Image 4.6: Visual representation of the refrigerator's storage capacity and shelf types.

5. Maintenance and Cleaning

5.1 Cleaning the Interior

- Always unplug the unit before cleaning.
- Wash the interior surfaces with a solution of warm water and baking soda (2 tablespoons of baking soda to 1 quart of water).
- Clean shelves and racks with a mild detergent solution.
- Wipe dry with a soft cloth.

5.2 Cleaning the Exterior

- Clean the exterior with a mild detergent and warm water.
- For stainless steel surfaces, use a stainless steel cleaner and polish.
- Do not use abrasive cleaners or sharp objects.

5.3 Defrosting

The TAZPI TASS24 features an automatic defrost system, eliminating the need for manual defrosting under normal operating conditions.

6. Troubleshooting

Review this section before calling for service. It may save you time and expense. This section contains common issues that are not a result of defective materials or workmanship.

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Temperature set too high; door not closed properly; excessive door openings; warm items added; poor ventilation.	Adjust temperature setting; ensure door is sealed; reduce door openings; allow new items to cool; ensure proper clearance for airflow.
Vibrations.	Appliance not level.	Adjust leveling feet.
Noise.	Normal operation sounds (compressor, fan); loose components.	This unit operates quietly at approximately 38 dB. If unusual noise, check for loose items inside or contact support.
Door does not close properly.	Appliance not level; gasket dirty or damaged; shelves out of position.	Level the unit; clean or replace gasket; reposition shelves.
Touch buttons unresponsive.	Temporary electronic glitch; moisture on panel.	Unplug unit for 5 minutes and plug back in; ensure control panel is dry and clean.

7. Specifications

Feature	Specification
Model	TASS24
Dimensions (D x W x H)	22.64 x 23.43 x 34.25 inches
Item Weight	115 pounds
Capacity	4.2 Cubic Feet (approx. 88 cans / 21 bottles)
Voltage	115 Volts
Wattage	70 watts
Annual Energy Consumption	163 Kilowatt Hours Per Year
Installation Type	Freestanding / Built-In
Defrost System	Automatic
Noise Level	Approximately 38 dB
Door Material	Stainless Steel and Glass
Shelf Type	Glass and Wire
Number of Shelves	10 (3 Glass, 7 Metal)

8. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official TAZPI website. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question