Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Andoer cd456de9-8520-42fb-911b-eb79ed4b2728

Andoer Mini WiFi Action Camera L11 User Manual

1. Introduction and Overview

This manual provides essential instructions for the safe and effective operation of your Andoer Mini WiFi Action Camera, model L11. This compact device is designed for capturing high-quality video and photos in various environments, offering portability and versatile mounting options.

Key features include 1080P/30fps video recording, a 0.96-inch LCD screen, a 140-degree wide-angle lens, and built-in WiFi connectivity for seamless integration with a dedicated mobile application. Its magnetic body allows for easy attachment to metal surfaces, and the included accessories expand its mounting capabilities.



Image 1: The Andoer Mini WiFi Action Camera highlighting its key features like 1080P resolution, 0.96-inch screen, 400mAh battery, 140-degree wide angle, and clip design.



Image 2: The camera being used for camping, cycling, climbing, and other sports, demonstrating its versatility as a portable video recorder.

2. Package Contents

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x Andoer Mini WiFi Action Camera (L11)
- 1 x Protective Cover
- 1 x 1/4-inch Adapter Mount
- 1 x Back Clip Mount
- 1 x Card Reader
- 1 x Type-C Cable
- 1 x User Manual

3. Setup

3.1 Charging the Battery

Before first use, fully charge the camera's built-in 400mAh battery. Connect the camera to a USB power source (5V, current ≥1A) using the provided Type-C cable. The charging indicator light will typically show the charging status and turn off or change color when fully charged.

3.2 Inserting a Memory Card

The camera supports TF (Micro SD) cards up to 128GB. Insert the TF card into the designated slot with the contacts facing the correct direction until it clicks into place. Ensure the camera is powered off before inserting or removing the memory card.

3.3 Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

3.4 WiFi Connectivity

To utilize the WiFi features, download the specified mobile application (refer to the included quick start guide or packaging for app name). Enable WiFi on your camera and connect your smartphone to the camera's WiFi network. This allows for live view, remote control, and file transfer.



Image 3: Demonstrating the WiFi live view feature, where the camera's feed is displayed on a smartphone screen.

4. Operating Instructions

4.1 Recording Video

With the camera powered on, press the Record button (usually indicated by a camera or record icon) to start video recording. The camera will record in 1920x1080P resolution at 30 frames per second in AVI format. A recording indicator (e.g., a flashing light or on-screen icon) will confirm recording is active. Press the Record button again to stop recording. The camera supports a 3-minute loop video function.

4.2 Taking Photos

Switch to photo mode (if applicable, refer to specific button functions in the quick start guide). Press the Shutter button to capture a still image. Photos are saved in JPG format.



Image 4: Illustrates the camera's ability to easily capture moments, showing icons for photo, video, and audio recording.

4.3 Audio Recording

The camera can record audio in WAV format. This function may be integrated with video recording or available as a standalone mode. Consult the quick start guide for specific button presses to activate audio recording.

4.4 Motion Detection

The camera features a motion detection mode. When enabled, the camera will automatically begin recording when motion is detected within its field of view. This feature is useful for security or surveillance applications. Activate motion detection through the camera's menu or the connected mobile app.

4.5 Using the 0.96-inch LCD Screen

The integrated 0.96-inch color display allows for real-time viewing of your recordings, playback, and menu navigation. Use the navigation buttons (if present) to scroll through options and confirm selections.

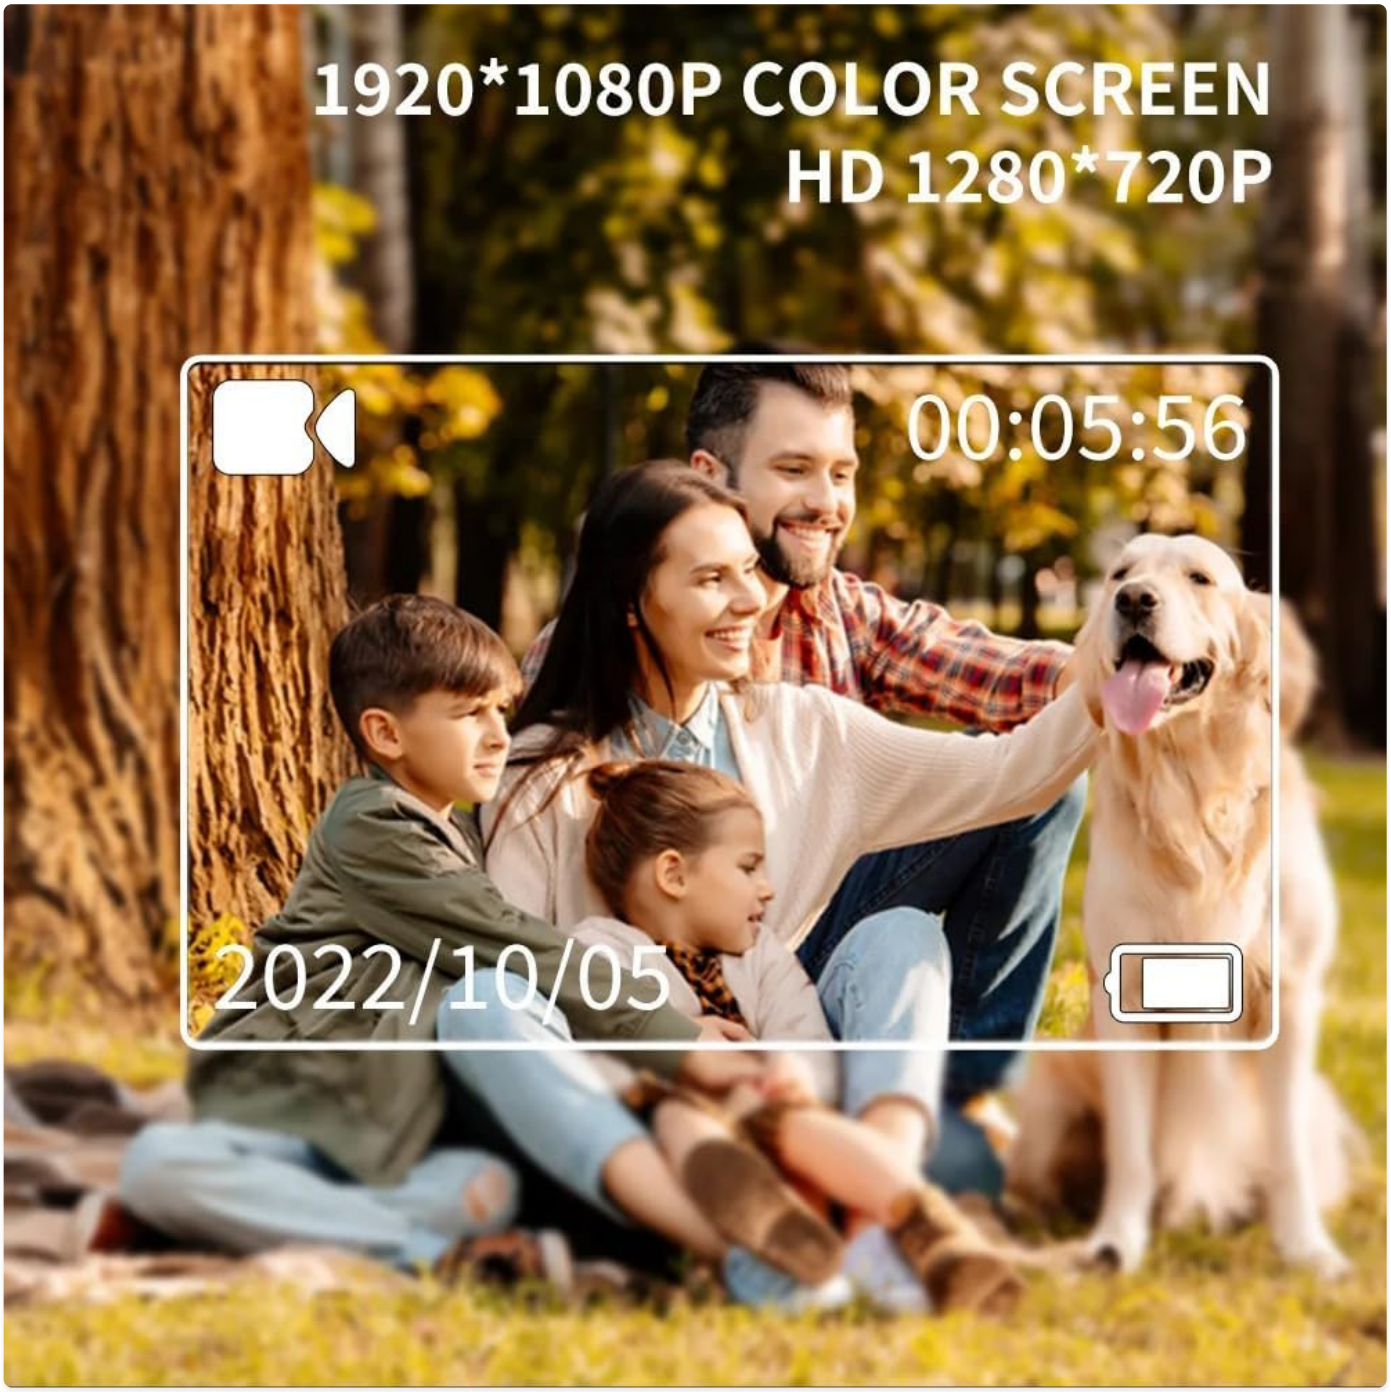


Image 5: The camera's screen displaying a 1920x1080P video, indicating clear resolution and color display.

4.6 Mounting Options

- **Magnetic Mount:** The camera's body is magnetic, allowing it to be securely attached to smooth metal surfaces.
- **1/4-inch Adapter Mount:** Use the included 1/4-inch adapter mount to attach the camera to standard tripods, selfie sticks, or other compatible accessories.
- **Back Clip Mount:** The back clip mount allows for attachment to clothing, backpacks, or other thin edges for hands-free recording.



Image 6: Illustrates the camera's 140-degree wide-angle lens, capturing a broad perspective of the environment.

4.7 File Management

To access recorded files, connect the camera to a computer using the Type-C cable, or remove the TF card and use the provided card reader. Files can also be transferred wirelessly via the mobile application.



Image 7: Depicts the ease of saving files from the camera, showing a filmstrip of captured moments.

5. Maintenance

5.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches. Do not use abrasive cleaners.

5.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the camera regularly, even if not in use, to maintain battery health.
- Do not expose the camera to extreme temperatures, as this can degrade battery performance.

5.3 Storage

Store the camera in a cool, dry place away from direct sunlight. The optimal operating temperature range is -25°C to +75°C, and working humidity should be around 30%.

6. Troubleshooting

If you encounter issues with your camera, please refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged. Connect to a power source and try again.
- **Cannot record:** Check if a TF card is inserted correctly and has sufficient free space. Format the TF card if necessary (this will erase all data).
- **WiFi connection issues:** Ensure the camera's WiFi is enabled. Restart both the camera and your smartphone. Verify you have the correct mobile application installed.
- **Poor image/video quality:** Clean the camera lens. Ensure adequate lighting.
- **Camera freezes:** Press and hold the Power button for an extended period (e.g., 10-15 seconds) to force a shutdown, then restart the camera.

If problems persist, please contact Andoer customer support for further assistance.

7. Specifications

Feature	Specification
Machine Type	L11
Lens Angle	140 degrees
TFT Display	0.96 inches Color Display
Video Resolution	1920 * 1080P
Video Frame Rate	30fps
Battery Capacity	400mAh
Video File Format	AVI
Photo Format	JPG
Loop Video Duration	3 minutes
Recording File Format	WAV
Working Humidity	30%
Operating Temperature	-25°C to +75°C
Power Supply	USB voltage 5V, current ≥1A
Memory Card Support	TF card, up to 128GB
Connectivity Technology	USB, Wi-Fi
Photo Sensor Technology	CMOS
Camcorder Type	Action Camera

Item Weight	4.3 ounces
Package Dimensions	3.94 x 2.36 x 1.97 inches

8. Warranty and Support

Andoer products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the warranty card included in your package or visit the official Andoer website. For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact Andoer customer service through their official channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CY1RL7GQ

More documents and user manuals: **https://manuals.plus/**