TEETHEORY GEHP206AB

TEETHEORY Rotating Electric Toothbrush

Model: GEHP206AB | Brand: TEETHEORY

Introduction

Thank you for choosing the TEETHEORY Rotating Electric Toothbrush. This manual provides essential information for the safe and effective use of your new toothbrush. Please read these instructions carefully before first use and keep them for future reference.

What's Included

- 1 x TEETHEORY Electric Toothbrush Handle
- 8 x DuPont Toothbrush Heads
- 1 x Protective Bristle Cover
- 1 x USB Charging Cable
- 1 x Instruction Manual



Image: All components included in the TEETHEORY Electric Toothbrush package, showing the toothbrush handle, 8 brush heads, USB cable, and protective cover.

Setup

1. **Attach Brush Head:** Align the brush head with the metal shaft on the toothbrush handle and push down firmly until it clicks into place.

2. **Initial Charge:** Before first use, fully charge the toothbrush. Refer to the 'Charging' section for detailed instructions.



Image: A visual guide demonstrating the correct method for attaching a new brush head to the toothbrush handle.

Operating Instructions

Your TEETHEORY electric toothbrush features 3 high-performance modes and a smart timer to ensure effective cleaning.

- **Power On/Off:** Press the power button once to turn the toothbrush on or off.
- **Change Modes:** With the toothbrush on, press the mode button (M) to cycle through the available modes:
  - **Whitening Mode:** Vibrates at 40,000 strokes per minute to break down stains and remove plaque.
  - **Cleaning Mode:** Provides a thorough clean, reaching deep into interdental spaces to remove dirt and reduce oral bacteria.
  - **Sensitive Mode:** Offers a gentle cleaning experience, ideal for users with sensitive teeth and gums.
- **Smart Timer:** The toothbrush includes a built-in 2-minute smart timer, which is the dentist-recommended brushing time. It also features a 30-second quadrant reminder, pausing briefly to signal when to move to a different section of your mouth.



Image: A close-up of the toothbrush handle highlighting the power and mode buttons, along with indicators for Whitening, Clean, and Sensitive modes.

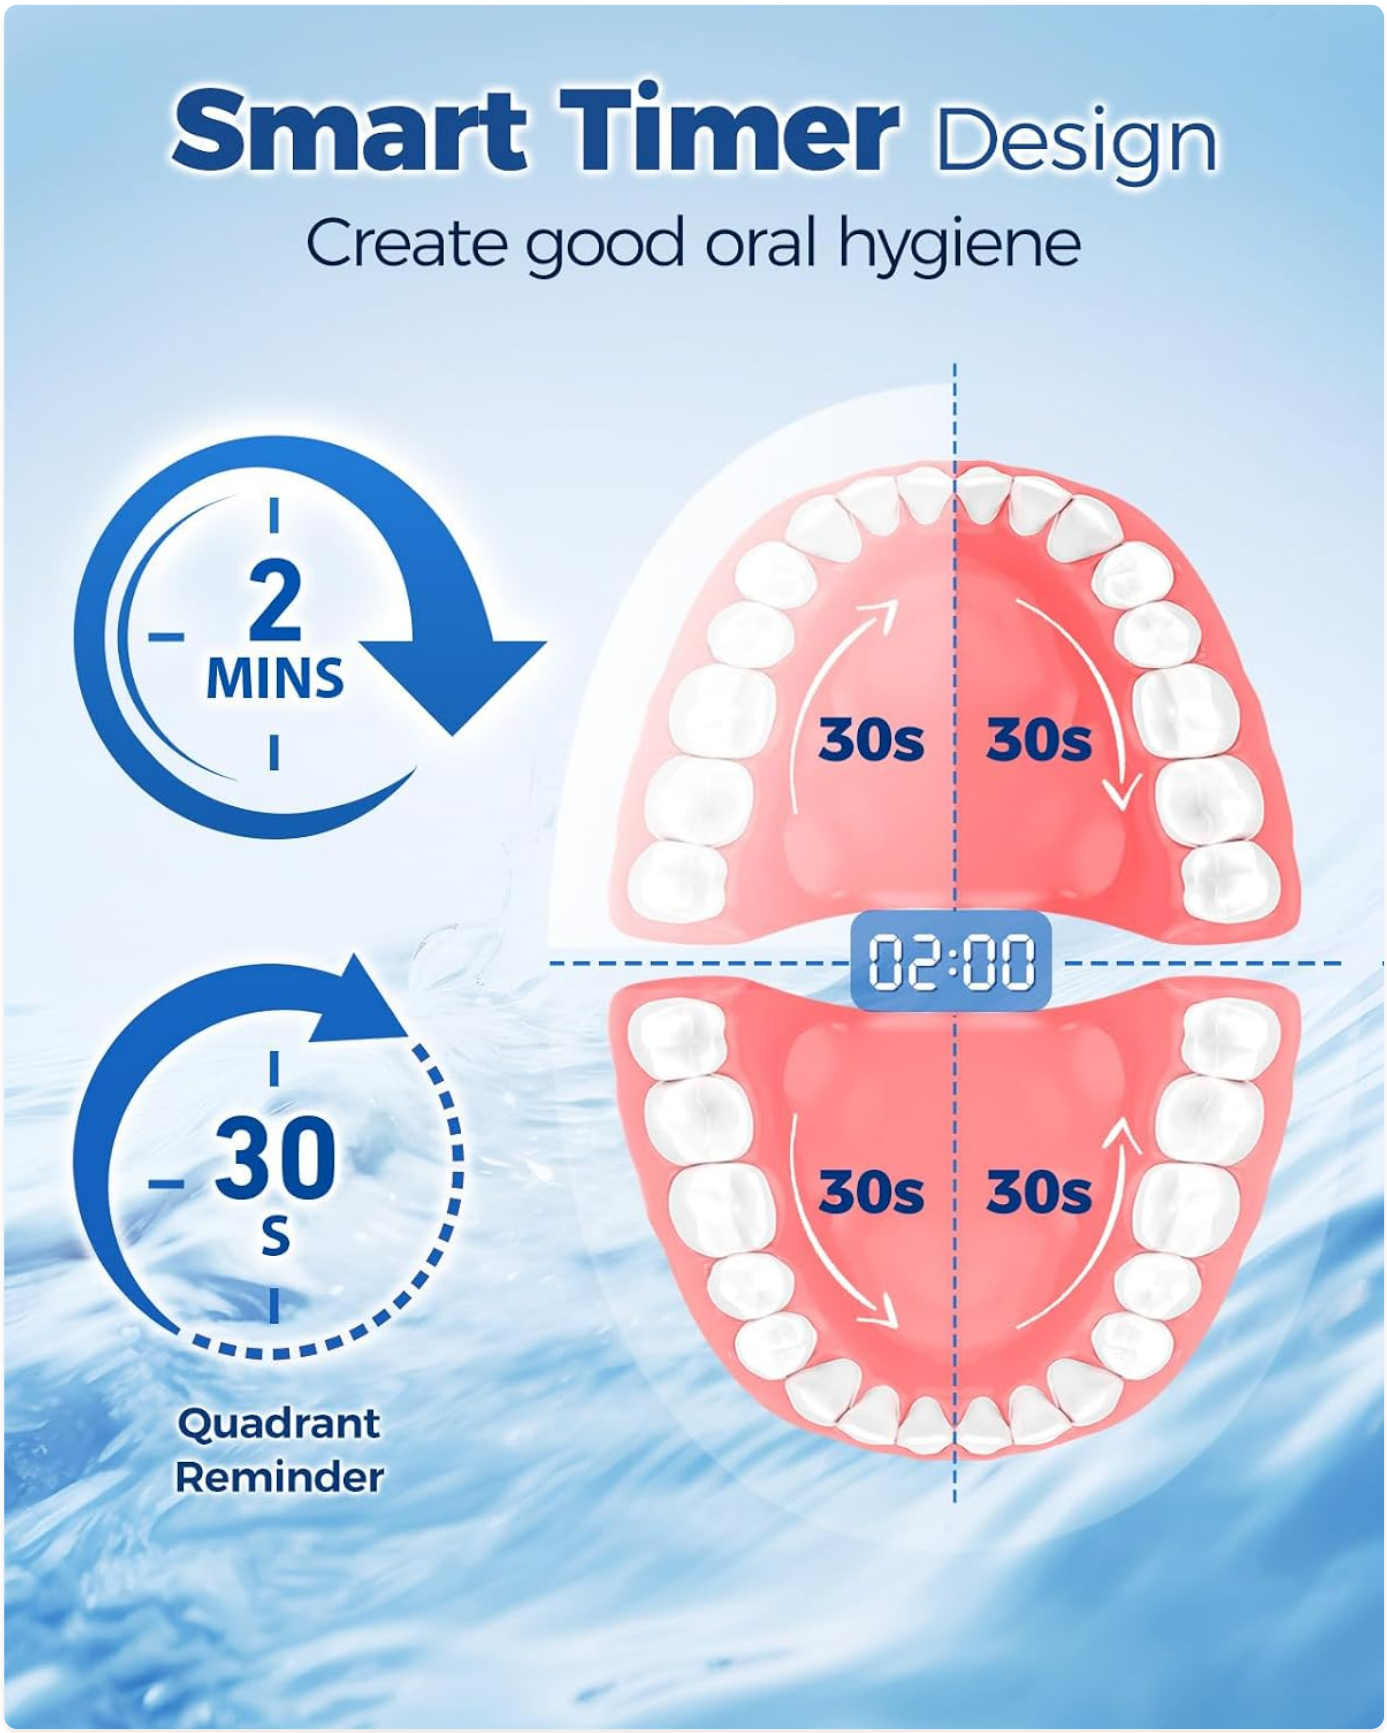


Image: A visual representation of the smart timer feature, showing how it guides users to brush each quadrant of their mouth for 30 seconds, totaling 2 minutes.

Charging

The toothbrush is equipped with a long-lasting rechargeable battery.

- **Charging Port:** The USB charging port is located at the bottom of the toothbrush handle, protected by a waterproof cover.

- **Connect:** Open the waterproof cover and insert the provided USB charging cable. Connect the other end to a compatible USB power source (e.g., wall adapter, computer).
- **Charging Indicator:** The indicator light will show the charging status.
- **Battery Life:** A full charge provides approximately 45 days of use (based on 2 minutes, twice a day).



Image: The toothbrush handle connected to a USB charging cable, illustrating the charging process.

Maintenance

- **Brush Head Replacement:** Replace the brush head every 3 months, or sooner if bristles become frayed. The toothbrush comes with 8 DuPont brush heads, providing over 2 years of supply. Different colored collars on the brush heads can help distinguish between family members' heads.
- **Cleaning the Handle:** Rinse the toothbrush handle under running water after each use. Wipe it dry with a soft cloth.
- **Waterproof Rating:** The toothbrush is IPX7 waterproof, allowing for safe use in the bath or shower. Ensure the charging port cover is securely closed when exposed to water.



Image: Eight individual brush heads are displayed, emphasizing the long-term supply included with the product.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Low battery or not charged.	Charge the toothbrush fully using the provided USB cable.
Brush head does not rotate.	Incorrectly attached brush head or internal issue.	Ensure the brush head is securely attached. If the issue persists, contact customer support.
Reduced vibration intensity.	Low battery.	Recharge the toothbrush.
Toothpaste splatters during use.	Toothbrush turned on before placing in mouth.	Always place the brush head in your mouth before turning on the toothbrush.

Specifications

- **Model Number:** GEHP206AB
- **Power Source:** Battery Powered
- **Operation Mode:** Automatic
- **Number of Modes:** 3 (Whitening, Cleaning, Sensitive)
- **Vibrations Per Minute:** Up to 40,000 vpm
- **Battery Life:** Up to 45 days on a full charge
- **Waterproof Rating:** IPX7
- **Bristle Material:** Nylon (DuPont)
- **Handle Material:** Plastic
- **Item Weight:** 0.22 Kilograms
- **Package Dimensions:** 9.09 x 4.37 x 1.73 inches

Important Safety Information

- Replace brush head every 3 months.
- Do not use for purposes other than oral hygiene.
- Keep out of reach of children under 3 years old.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official TEETHEORY website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question