Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Crosseagle SK601

Digital Voice Activated Recorder

MODEL: SK601

Brand: Crosseagle

1. Introduction

The Crosseagle SK601 Digital Voice Activated Recorder is a compact and powerful audio recording device designed for clarity and convenience. With its high-fidelity recording capabilities and extensive storage, it is an ideal tool for professionals, students, and anyone needing reliable audio capture.

1.1. What's in the Box

- Voice Recorder
- USB Cable
- 64GB TF Memory Card (Pre-installed in the Recorder)
- Headphones
- User Manuals

2. Setup

2.1. Initial Charging

Before first use, fully charge the device using the provided USB-C cable connected to a computer or a compatible USB power adapter. The battery indicator on the screen will show charging status.

2.2. Inserting TF Card

The 64GB TF card comes pre-installed in the recorder. To access or replace it, gently push the card into its slot until it clicks, then release to eject. Ensure the recorder is powered off before inserting or removing the TF card.




L
R
08:21
Recording
00:38:50
1536kbps
64
GB



Image: Digital Voice Recorder with 64GB TF card inserted.

2.3. Basic Controls Overview

Familiarize yourself with the main buttons:

- **REC (Record):** Press to start recording.
- **D/STOP (Stop):** Press to stop recording or playback, and to save the current recording.
- **PLAY/PAUSE:** Press to play or pause recordings.
- **M (Menu):** Access settings and options.
- **VOL+/- (Volume):** Adjust playback volume.
- **NO/OFF (Power Switch):** Slide to turn the device on or off.



Image: Easy-to-use controls on the voice recorder.

3. Operating

3.1. Recording Audio

To start recording, slide the power switch to 'ON'. Once the device is ready, press the **REC** button. The screen will display 'recording' and the timer will begin. To stop and save the recording, press the **D**/**STOP** button. The file will be automatically saved.

3.1.1. Voice Activated Recording (VAR)

The voice activation feature allows the recorder to start recording automatically when sound is detected and pause when there is silence, saving memory space. You can adjust the sensitivity levels (1-7) to suit your environment.

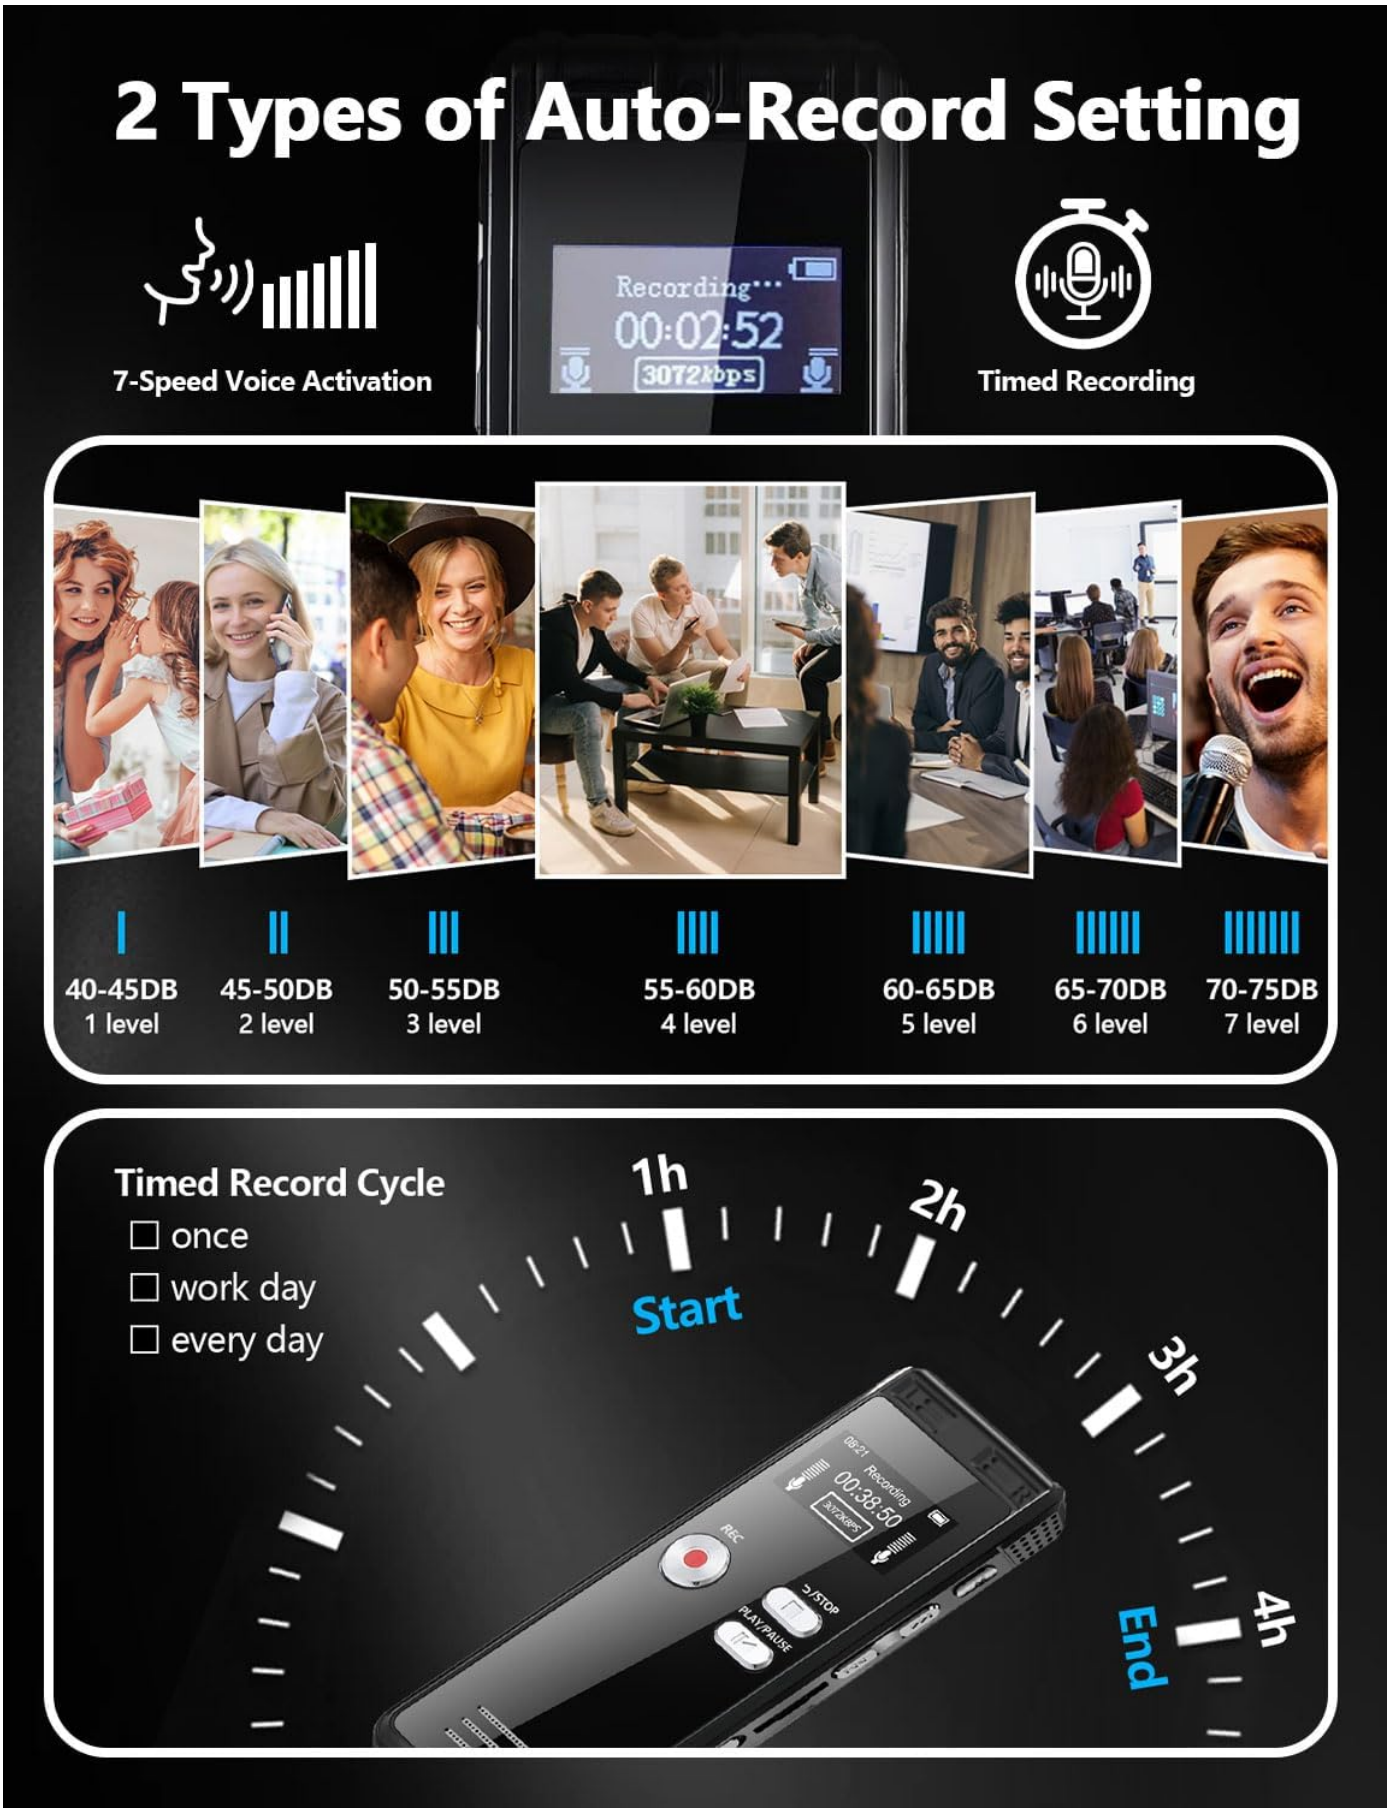


Image: Two types of auto-record settings: 7-speed voice activation and timed recording.

For a visual guide on recording and voice activation settings, please refer to the videos below:

Video: How to turn on, record, save, find, and delete recordings.

Video: Detailed guide on Voice Activated Recorder Operating Methods.

3.2. Playback

To play a recording, navigate to the 'Recordings' menu and select the desired file. Press the **PLAY/PAUSE** button to start playback. Use the **VOL+/-** buttons to adjust the volume.

3.2.1. A-B Repeat Function

The A-B repeat function allows you to repeatedly play a specific segment of an audio file. During playback, press the 'A/B' button (located on the side) at the start point (A) and again at the end point (B) of the desired segment. The recorder will then loop this section.

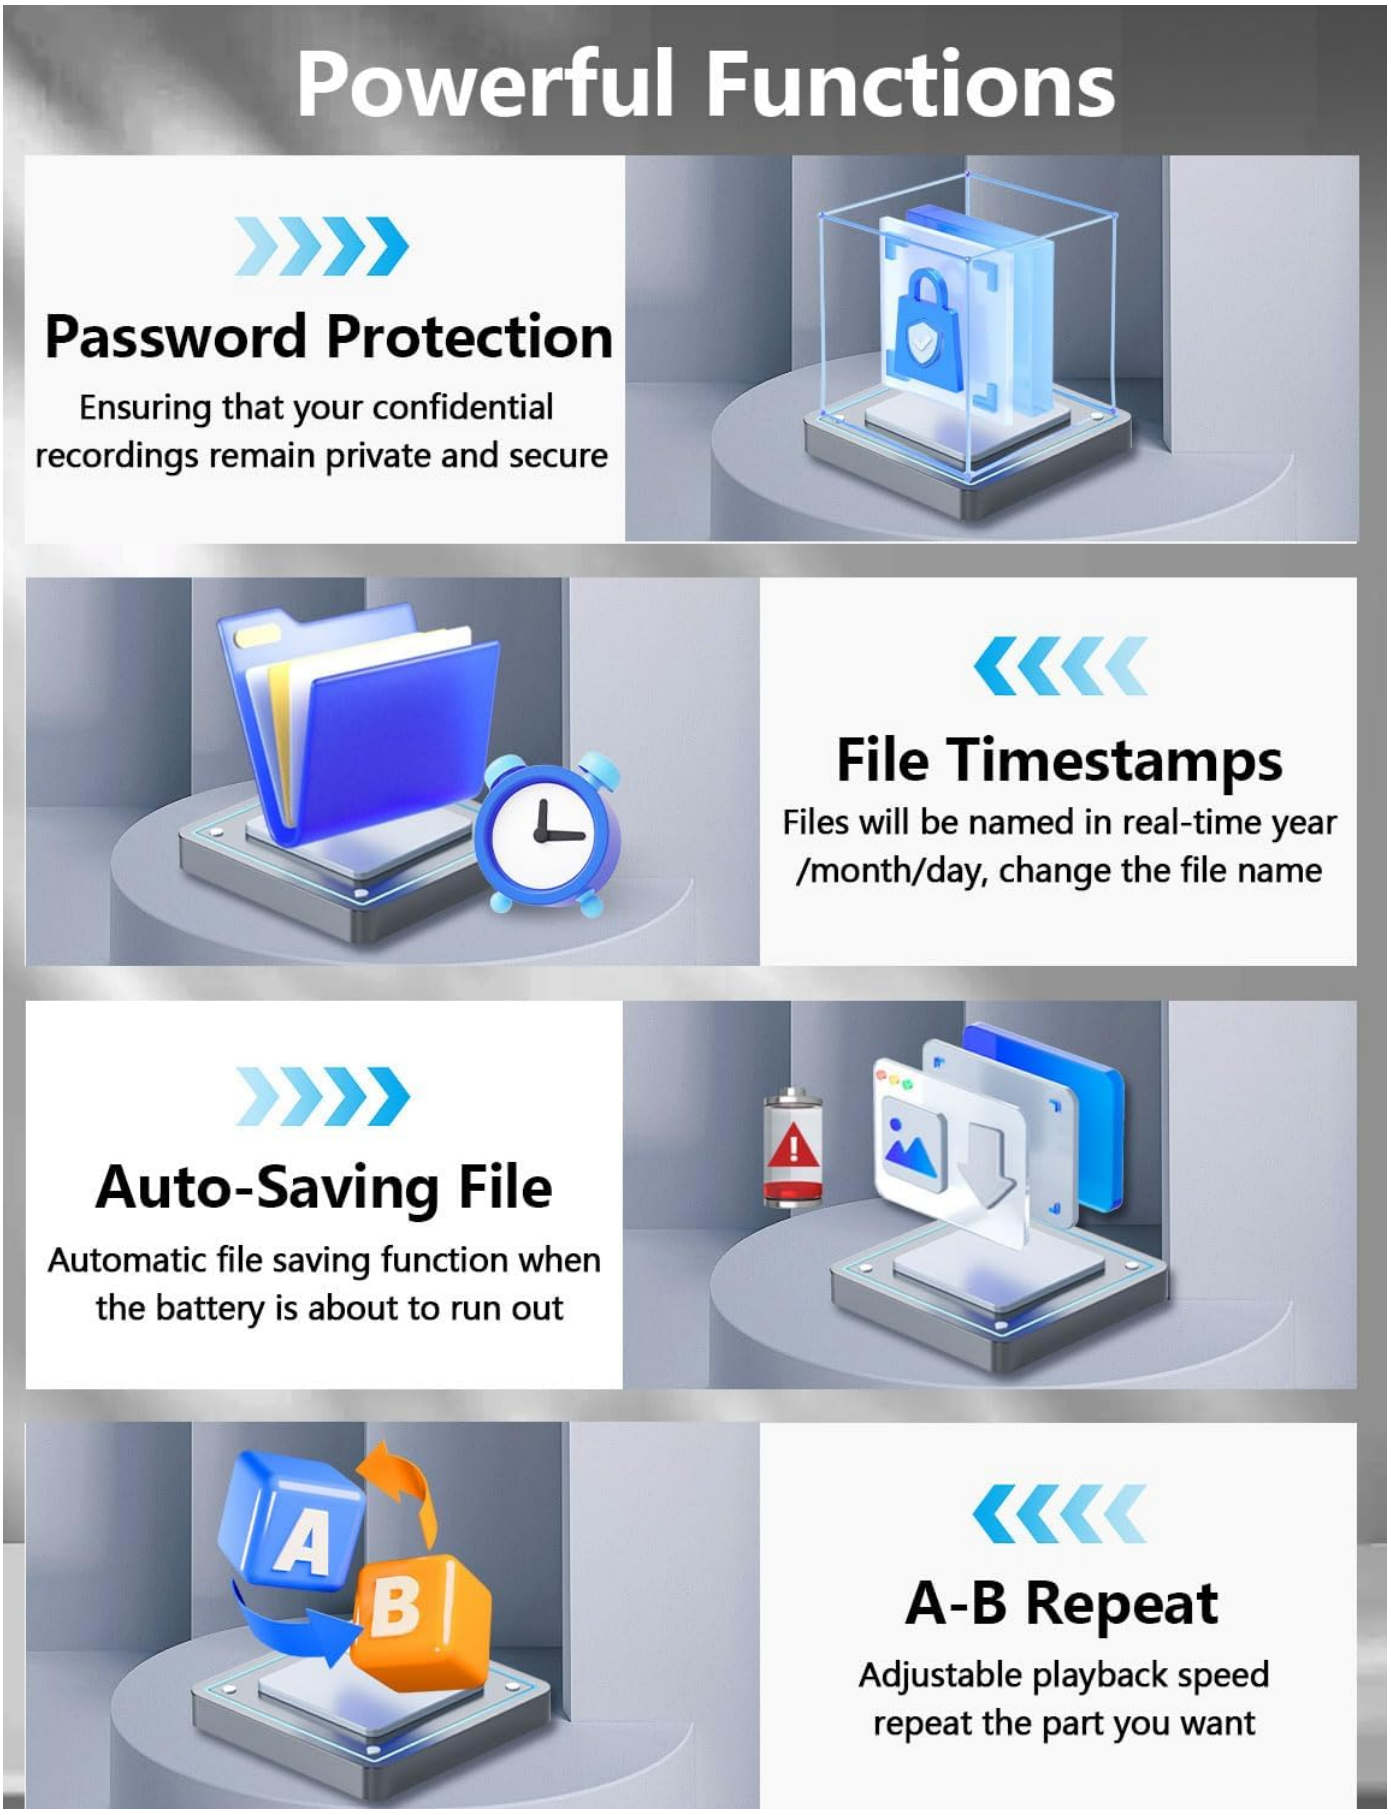


Image: Powerful functions including A-B Repeat, Password Protection, and Intelligent Save.

3.3. File Management

The recorder offers several file management features:

- **Auto-Saving:** Recordings are automatically saved when the battery is low to prevent data loss.
- **Password Protection:** Set a password to protect your confidential recordings from unauthorized access.
- **File Timestamps:** Files are named with real-time year/month/day/hour/minute/second for easy organization.
- **Transfer to Computer:** Easily transfer files to Mac or Windows computers using the USB-C cable.



Image: USB-C Port for easy connection and file management.

3.4. Setting Date and Time

To ensure accurate timestamps on your recordings, set the correct date and time through the device's menu. Navigate to 'Set' then 'Date and Time' to adjust.

Video: Comprehensive Recorder Operation Guide, including setting date and time.

---

4. Maintenance

4.1. Battery Care

The recorder features a 500mAh rechargeable Lithium Polymer battery, providing up to 100 hours of continuous recording. For optimal battery life, avoid fully discharging the device regularly and store it in a cool, dry place when not in use for extended periods.

4.2. Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Keep the microphone and speaker grilles free from dust and debris.

---

5. Troubleshooting

If you encounter issues with your recorder, try the following:

- **No Power:** Ensure the battery is charged. Connect to a power source and try turning it on again.
- **Recording Issues:** Check if the TF card is properly inserted and has sufficient free space. Ensure the microphone is not obstructed.
- **Poor Audio Quality:** Verify recording settings (e.g., 3072Kbps HD). Ensure the environment is not excessively noisy. Consider adjusting voice activation sensitivity.
- **Device Unresponsive:** Try sliding the power switch to 'OFF' and then 'ON' again to perform a soft reset.

---

6. Specifications

Feature	Detail
Model Number	SK601
Memory Storage Capacity	64 GB (TF Card Included)
Audio Storage Hours	Up to 4552 hours (at 32kbps)
Recording Quality	3072Kbps HD
Battery Life (Continuous Recording)	Up to 100 hours (at 32kbps)
Battery Type	1 Lithium Polymer battery (included)
Microphone Form Factor	Built-In Dual MIC

Audio Format	WAV
Headphones Jack	3.5 millimeters
Hardware Interface	USB 2.0 (USB-C)
Product Dimensions	0.28 x 0.39 x 0.98 inches
Item Weight	3.17 ounces

7. Warranty and Support

For warranty information and technical support, please refer to the contact details provided in your User Manual or visit the official Crosseagle website. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CY2656MV

More documents and user manuals: **https://manuals.plus/**