BuTure Pro B0CY2MLRB6

BuTure Pro Cordless Vacuum Cleaner User Manual

Model: B0CY2MLRB6

1. Introduction

Thank you for purchasing the BuTure Pro Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using your vacuum cleaner.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).

- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
- Do not use an appliance that is damaged or modified.
- Do not expose a battery pack or appliance to fire or excessive temperature.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions.
- Servicing must be performed by a qualified repair person using only identical replacement parts.

3. Package Contents

Carefully unpack all components and check against the list below. If any items are missing or damaged, contact customer support.



Image: All included accessories and main unit.

- Main Unit (Motor & Dust Cup Assembly)
- Telescopic Extension Pipe
- Main Brush Head with LED Lights
- Crevice Tool
- Round Brush
- Detachable Battery
- Charging Adapter
- Wall Mount Bracket
- Spare Filters (3 pieces)
- Cleaning Tool
- User Manual

4. Product Overview

4.1 Key Features

- **Powerful Suction:** Up to 38KPa suction power with a 450W motor.
- **Long Runtime:** Up to 55 minutes of continuous operation (in low power mode).
- **Automatic Mode:** Automatically adjusts suction power based on floor type and debris size.
- **2-in-1 Design:** Easily converts from stick vacuum to handheld cleaner.

- **LED Touch Screen:** Displays battery level, suction mode, and alerts for brush tangle or pipe blockage.
- **Detachable Battery:** Convenient for charging and replacement.
- **V-shaped Anti-tangle Roller:** Designed to prevent hair tangling.
- **LED Headlights:** Illuminates dark areas to reveal hidden dust.
- **Large Dust Cup:** 1.5L capacity with one-touch emptying.
- **Multi-stage Filtration:** Captures 99.9% of micron-sized particles.

4.2 Components and Controls



Image: Main unit with telescopic pipe and brush head.



Image: LED touch screen showing battery, mode, and status indicators.



Image: Main brush head with V-shaped roller and LED lights in action.



Image: Diagram illustrating the multi-stage filtration system.

The vacuum cleaner features an intuitive LED touch screen display. This screen provides real-time information on the battery charge level, current suction mode (Auto, Low, Medium, High), and alerts for potential issues like brush roller tangles or pipe blockages. The main brush head is equipped with bright LED lights to illuminate dust and debris in dimly lit areas, ensuring thorough cleaning. Its V-shaped roller design helps prevent hair from tangling, making maintenance easier.

5. Setup

5.1 Assembly

1. **Attach the Telescopic Pipe:** Insert the telescopic pipe into the main unit until it clicks securely into place.
2. **Attach the Main Brush Head:** Connect the main brush head to the other end of the telescopic pipe until it clicks. For handheld use, attach accessories directly to the main unit.
3. **Install the Battery:** Slide the detachable battery into the slot on the main unit until it locks.



Image: Different attachments including the telescopic pipe, crevice tool, and round brush.

5.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately.

1. Connect the charging adapter to a power outlet.
2. Plug the charging cable into the charging port on the battery (either on the main unit or detached).
3. The LED screen will indicate charging status. A full charge typically takes approximately 4 hours.



Image: Detachable battery unit.



Image: Charging adapter.

5.3 Wall Mount Installation

The included wall mount bracket allows for convenient storage and charging.

1. Choose a suitable location near a power outlet.
2. Mark the drilling points for the bracket.
3. Drill holes and secure the bracket to the wall using the provided screws and anchors.
4. Hang the vacuum cleaner on the bracket.

6. Operating Instructions

6.1 Power On/Off and Suction Modes

1. **Power On:** Press the power button on the main unit to turn on the vacuum cleaner. It will start in the default suction mode.
2. **Change Suction Mode:** Tap the mode button on the LED touch screen to cycle through the available suction modes:
    - **Auto Mode:** Automatically adjusts suction power based on the floor type and amount of debris.
    - **Low Mode:** For light cleaning and extended runtime (up to 55 minutes).
    - **Medium Mode:** For everyday cleaning tasks.
    - **High Mode:** For deep cleaning and stubborn dirt (up to 38KPa).
3. **Power Off:** Press the power button again to turn off the vacuum cleaner.



Image: Automatic mode adapting to carpet, wood, and tile floors.



Image: LED color screen showing battery, touch operation, pipe blockage, and brush tangle status.

6.2 Using Attachments

Select the appropriate attachment for your cleaning needs:

- **Main Brush Head:** Ideal for floors, carpets, and large areas. The LED lights illuminate dust, and the V-shaped roller prevents hair tangles.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas like car interiors or between sofa cushions.
- **Round Brush:** Suitable for delicate surfaces, upholstery, keyboards, and shelves.
- **Telescopic Pipe:** Extends reach for high ceilings, curtains, or under furniture.



Image: Vacuum cleaner in stick mode, cleaning a floor.



Image: Handheld mode with crevice tool for car seats and round brush for keyboards.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

Empty the 1.5L dust cup regularly, especially when the MAX line is reached.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom cover and empty the contents.
3. Close the dust cup cover securely until it clicks.



Image: One-touch dust cup emptying.

7.2 Cleaning Filters

The vacuum cleaner features a multi-stage filtration system including HPEA, sponge, micro-multi-cone, stainless, and host sponge filters. These filters are washable.

1. Twist and remove the dust cup from the main unit.
2. Remove all filters from the dust cup assembly.
3. Rinse the filters under running water until the water runs clear.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum cleaner with wet filters.
5. Reassemble the filters and dust cup, then attach it back to the main unit.



Image: Set of three spare filters.

7.3 Cleaning the Brush Roller

Periodically check the main brush roller for tangled hair or debris.

1. Turn off the vacuum cleaner and detach the main brush head.
2. Locate the release tab or screw on the side of the brush head and open the cover to access the roller.
3. Remove the V-shaped brush roller.
4. Use the provided cleaning tool or scissors to cut and remove any tangled hair or fibers.
5. Reinsert the brush roller and close the cover securely.

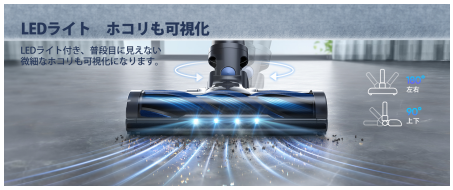


Image: LED lights on the brush head making dust visible.

8. Troubleshooting

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely inserted.
Low suction power.	Dust cup is full, filters are clogged, or there is a blockage in the pipe/brush head.	Empty the dust cup. Clean or replace filters. Check for and remove any blockages in the telescopic pipe or brush head.
Brush roller not spinning.	Hair or debris tangled around the brush roller, or a blockage.	Turn off the vacuum, remove the brush head, and clean the brush roller of any obstructions.
Unusual noise during operation.	Foreign object caught in the brush head or pipe.	Turn off the vacuum and inspect the brush head and pipe for any foreign objects. Remove them carefully.
Battery not charging.	Charger not properly connected or faulty.	Ensure the charger is securely plugged into both the outlet and the battery. Try a different outlet. If the issue persists, contact customer support.

9. Specifications

Feature	Detail
Brand	BuTure Pro
Model	B0CY2MLRB6
Suction Power	Up to 38KPa
Motor Wattage	450 W
Runtime	Up to 55 minutes (Low mode)
Dust Cup Capacity	1.5 L
Form Factor	Handheld / Stick

Feature	Detail
Noise Level	68 dB
Recommended Surface	Carpet, Hard Floors, Tile
Charging Time	Approx. 4 hours

10. Warranty and Support

10.1 Warranty Information

This BuTure Pro Cordless Vacuum Cleaner comes with a**3-year quality warranty**, which includes a 1-year manufacturer's warranty plus a 2-year extended warranty. Please retain your proof of purchase for warranty claims.



Image: Warranty details and product in use.

10.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact our customer support team:

- **Via Amazon:** Go to "Account Service" > "Orders" > Find your order > "Seller" > "Ask a question".
- **Via Brand Email:** Refer to the contact information provided in your purchase documentation or on the official BuTure Pro website.

© 2024 BuTure Pro. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question