**GODOX VB30**

# GODOX VB30 Li-ion Battery Pack Instruction Manual

Model: VB30

## 1. Product Overview

The GODOX VB30 is a high-capacity Li-ion battery pack designed for select GODOX camera flashes and speedlites. It provides reliable power for extended shooting sessions and features versatile charging options, including a built-in USB-C port.

**Key Features:**

- **Multiple Charging Methods:** Charge via the integrated Type-C port or the original GODOX VC26 charger.
- **High Capacity:** Offers approximately 500 full-power flashes, ensuring ample shooting time.
- **Wide Compatibility:** Compatible with GODOX V1, V1Pro, V100, and V860III series camera flashes.

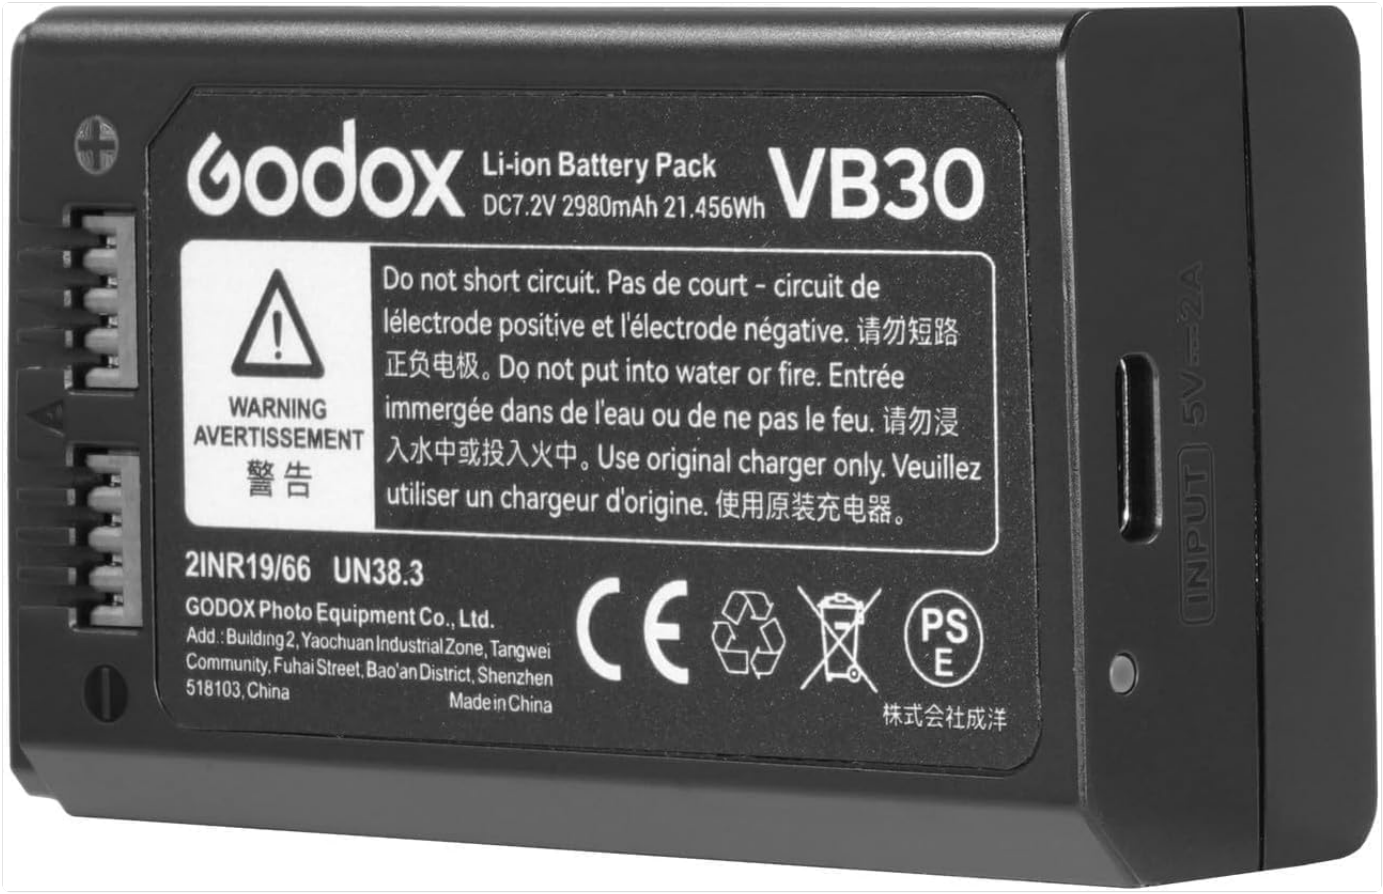



Image 1.1: Top view of the GODOX VB30 Li-ion Battery Pack, showing the GODOX logo, model number VB30, battery specifications (DC7.2V 2980mAh 21.456Wh), and warning labels.

## 2. Compatibility

The GODOX VB30 battery pack is compatible with the following GODOX flash models:

- GODOX V1Pro-C, V1Pro-N, V1Pro-S, V1Pro-O, V1Pro-F
- GODOX V1S, V1C, V1N, V1O, V1F
- GODOX V100-C, V100-N, V100-S, V100-O, V100-F
- GODOX V860III-C, V860III-N, V860III-S, V860III-O, V860III-F

Ensure your flash model is listed above for proper function and safety.

## 3. Charging the Battery

The VB30 battery offers two convenient charging methods:

### 3.1. Charging via USB-C Port

The battery can be charged directly using a standard USB-C cable. This method allows for charging the battery while it is inserted in a compatible flash unit or when removed.

1. Locate the USB-C input port on the side of the VB30 battery.
2. Connect a USB-C cable to the battery's port.
3. Connect the other end of the USB-C cable to a compatible 5V==2A USB power adapter (not included).
4. The charging indicator light on the battery (or flash, if inserted) will show the charging status.




Image 3.1: Side view of the GODOX VB30 battery, highlighting the USB-C input port and its 5V==2A input specification.

## 3.2. Charging with the GODOX VC26 Charger

For external charging, the VB30 battery can be charged using the dedicated GODOX VC26 charger (sold separately).

1. Insert the VB30 battery into the GODOX VC26 charger.
2. Connect the VC26 charger to a power source.
3. The indicator light on the VC26 charger will display the charging status.




Image 3.2: Illustration of the two charging methods: direct USB-C charging and charging with the VC26 external charger.

### 3.3. Charging Demonstration Video

Your browser does not support the video tag.

Video 3.1: A short demonstration showing how to charge the GODOX VB30 battery using both the integrated USB-C port while in the flash unit and externally with the VC26 charger.

## 4. Battery Maintenance and Safety

Proper maintenance ensures the longevity and safe operation of your VB30 battery.

- **Storage:** For long-term storage (over 3 months), charge the battery to approximately 60% capacity.
- **Recharge Cycle:** If the battery has not been used for over 3 months, perform a full recharge before use.
- **Charging:** Always use the original GODOX VC26 charger or a compatible 5V==2A USB-C power adapter.
- **Safety Warnings:**

- Do not short circuit the positive and negative electrodes.
- Do not immerse in water or expose to fire.
- Keep away from small children.





Image 4.1: Close-up of the GODOX VB30 battery showing important safety warnings and specifications.

## 5. Troubleshooting

If you encounter issues with your GODOX VB30 battery, consider the following common solutions:

- **Battery Not Charging:**
  - Ensure the USB-C cable or VC26 charger is properly connected to both the battery and the power source.
  - Verify that the power adapter is functioning correctly and provides the specified 5V==2A output for USB-C charging.
  - Check for any visible damage to the battery, cable, or charger.
- **Flash Not Powering On:**
  - Confirm the battery is fully charged.
  - Ensure the battery is correctly inserted into the flash unit.
  - Test with another known-good battery if available.
- **Reduced Performance:**
  - If the battery has been stored for a long period, perform a full charge and discharge cycle.
  - Operating in extremely cold temperatures can temporarily reduce battery performance.

If problems persist, please contact GODOX customer support.

## 6. Specifications

| Feature | Detail |
|---|---|
| **Model** | VB30 |
| **Battery Type** | Lithium Ion |
| **Voltage** | DC 7.2V |
| **Capacity** | 2980 mAh (21.456 Wh) |
| **Charging Input** | USB-C: 5V==2A |
| **Item Weight** | 4.6 ounces |
| **Package Dimensions** | 3.07 x 1.89 x 1.26 inches |
| **Recommended Use** | Camera Flash |

## 7. Warranty and Support

GODOX products are designed and manufactured to high-quality standards. For warranty information and technical

support, please refer to the official GODOX website or contact your local distributor.

**Manufacturer Contact Information:**

- **Company:** GODOX Photo Equipment Co., Ltd.
- **Address:** Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China
- **Email:** godox@godox.com
- **Tel:** +8675529609320 (8062)
- **Fax:** +86755257023423

Please retain your proof of purchase for warranty claims.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question