GRIFEMA GH2001-10

GRIFEMA GH2001-10 Magnetic Fly Screen Door Instruction Manual

Model: GH2001-10 | Size: 100 x 220cm

1. Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your GRIFEMA GH2001-10 Magnetic Fly Screen Door. Please read these instructions carefully before installation and retain them for future reference. This product is designed to provide a hands-free entry and exit while keeping insects out.

2. Product Overview

The GRIFEMA GH2001-10 Magnetic Fly Screen Door features a heavy-duty polyester mesh with integrated powerful magnetic strips for automatic closure. It is designed for easy installation and removal, suitable for various door types.

2.1 Key Features:

- **Hands-Free Entry:** Magnetic closure allows for easy passage.
- **Premium Material:** Durable polyester mesh fabric, scratch-resistant.
- **Automatic Closure:** Powerful magnets ensure the screen closes tightly and automatically.
- **Easy Installation:** Simple setup and removal without leaving marks.
- **Kid & Pet Friendly:** Allows children and pets to pass through easily.

2.2 Package Contents:

- 1x Magnetic Screen Door (100 x 220cm)
- 1x Roll of Magic Tape Strip (Hook and Loop Fastener)
- 1x Pack of Thumbtacks



Image 1: Package contents including the magnetic screen door, hook and loop tape, and thumbtacks.

3. Safety Information

- Ensure the installation surface is clean and dry for optimal adhesive performance.
- Keep thumbtacks out of reach of children and pets.
- Do not hang or swing on the screen door.
- Regularly inspect the screen for damage and repair as needed to maintain effectiveness.

4. Setup and Installation

4.1 Measuring Your Door Frame:

Before installation, accurately measure your door frame to ensure the correct fit. The screen door size is 100 x 220cm.

- Measure the **inner door frame** width and height. The screen should cover this area.
- Measure the **outer door frame** width and height. The hook and loop tape will attach to this.
- Ensure your outer door frame is at least 100cm wide and 220cm high for this specific screen size.



Image 2: Guide for measuring your door frame to ensure proper screen fit.

4.2 Installation Steps:

1. **Clean the Door Frame:** Thoroughly clean the door frame surface where the screen will be installed. Ensure it is free of dust, dirt, and moisture. This is crucial for the adhesive to bond effectively.
2. **Apply Hook and Loop Tape:** Unroll the provided hook and loop tape. Peel off the backing paper from the hook side and carefully apply it around the perimeter of your door frame. Press firmly to ensure good adhesion.
3. **Attach the Screen Door:** Align the top center of the magnetic screen door with the center of your door frame. Press the loop side of the screen door onto the hook tape already on the frame. Work your way down both sides, ensuring the screen hangs straight and the magnets align properly in the center.
4. **Test Closure:** Walk through the screen door a few times to ensure the magnets close automatically and completely. Adjust the screen's position on the hook and loop tape if necessary to achieve a perfect seal.
5. **Secure with Thumbtacks (Optional):** For added security and durability, especially in high-traffic areas or windy conditions, use the provided thumbtacks to further secure the screen door to the

wooden door frame. Place them along the top and sides of the hook and loop tape.



Image 3: Details of the strong magnetic strips, heavy-duty mesh, and easy-to-install hook and loop tape.

5. Operating Instructions

5.1 Automatic Hands-Free Operation:

The GRIFEMA Magnetic Fly Screen Door is designed for hands-free operation. Simply walk through the screen, and the powerful magnets embedded along the opening will automatically snap back together, ensuring a sealed barrier against insects.

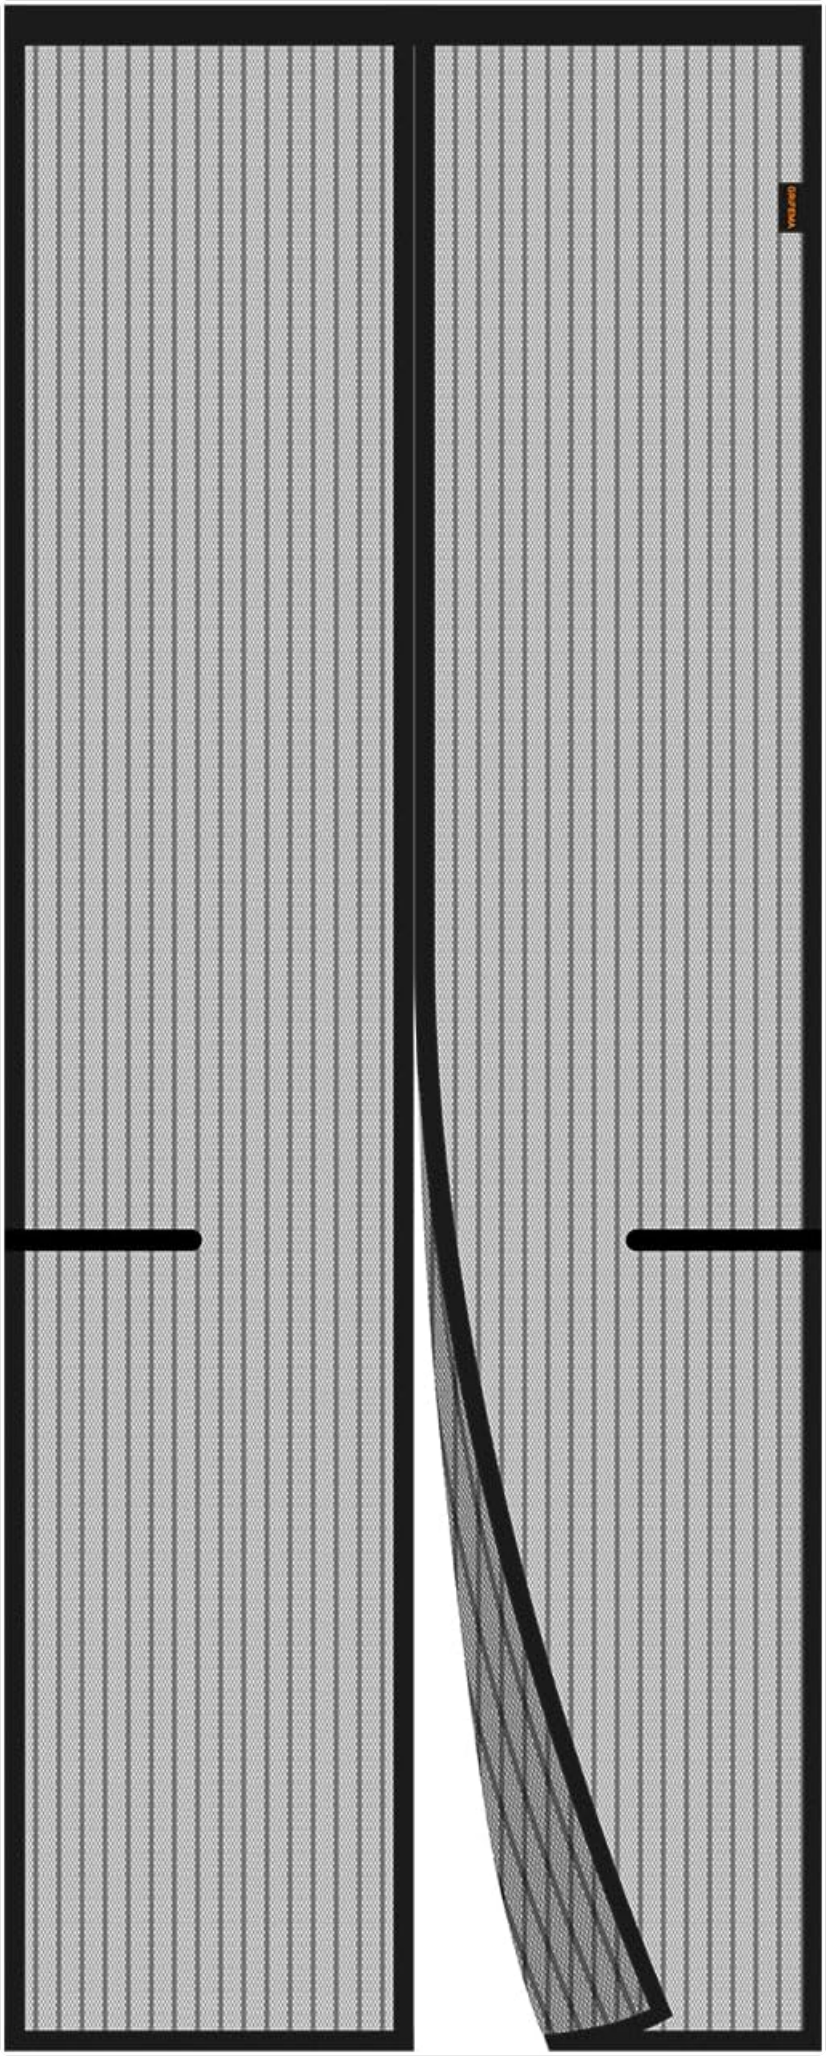


Image 4: The magnetic screen door demonstrating its automatic closing function.

5.2 Stay Open Feature:

For situations where you need the screen to remain open, such as moving large items or during a gathering, the screen includes tie-backs. Gather the screen to the sides and secure it with the integrated straps to keep the doorway clear.



Image 5: The screen door with its stay-open feature, showing the tie-back straps.

6. Maintenance

- **Cleaning:** The polyester mesh can be gently wiped with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Dust Removal:** Use a soft brush or vacuum cleaner with a brush attachment to remove dust and debris from the mesh regularly.
- **Storage:** When not in use, especially during off-seasons, carefully remove the screen, fold it neatly, and store it in a dry, clean place to prolong its lifespan.
- **Adhesive Check:** Periodically check the hook and loop tape for secure adhesion to the door frame. Reapply or reinforce if necessary.

7. Troubleshooting

Problem	Possible Cause	Solution
Screen does not close completely.	Screen is not hung straight or magnets are misaligned.	Adjust the screen's position on the hook and loop tape to ensure it hangs evenly and the magnets meet perfectly.
Hook and loop tape is not sticking.	Door frame was not cleaned properly before installation, or surface is unsuitable.	Ensure the door frame is clean and dry. For rough or painted surfaces, consider using additional adhesive or the provided thumbtacks.
Gaps appear on the sides of the screen.	Screen is not wide enough for the door frame, or installation is loose.	Verify door frame measurements against screen size. Re-install, ensuring the screen is taut and fully attached to the hook and loop tape. Use thumbtacks for extra security.

8. Specifications

Feature	Detail
Brand	GRIFEMA
Model Number	GH2001-10
Size	100 x 220 cm (39.37 x 86.61 inches)
Color	Black
Material	Polyester
Item Weight	822 Grams (1.81 pounds)
Assembly Required	Yes
Included Components	1* Magnetic Screen Door, 1* Magic Tape Strip, Thumbtacks

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact GRIFEMA customer service directly. Keep your purchase receipt as proof of purchase.
For further assistance, please visit the official GRIFEMA website or contact their support channels.

© 2025 GRIFEMA. All rights reserved.