Jugbow DT-612

Jugbow Dog Shock Collar User Manual

Model: DT-612 | Brand: Jugbow

Introduction

This user manual provides comprehensive instructions for the safe and effective use of your Jugbow Dog Shock Collar. Designed for training dogs weighing 10-120 lbs, this system features a remote with a 4200FT range and two waterproof receiver collars, offering four distinct training modes to assist in correcting unwanted behaviors and reinforcing positive ones.

Please read this manual thoroughly before operating the device to ensure proper usage and the well-being of your pet.

Product Components

The Jugbow Dog Shock Collar package includes the following items:

- Remote Control Transmitter
- 2 x Receiver Collars (Green color, adjustable for neck sizes 7.8-24.4 inches)
- USB Charging Cable (3-in-1 design for simultaneous charging)
- Metal Prongs (short and long sets)
- Silicone Caps for Prongs
- Test Light Tool
- User Manual



Figure 1: Overview of the Jugbow Dog Shock Collar system, including the remote control and two receiver collars.

Key Features

- **4 Humanized Training Modes:**
  - **Beep Mode (1-8 levels):** Audible tone for attention or mild correction.
  - **Vibration Mode (1-16 levels):** Gentle vibration for attention or moderate correction.
  - **Safe Shock Mode (1-99 levels):** Static stimulation for more firm correction.
  - **Shock Boost (10% higher):** Provides a slightly stronger static stimulation when needed.



Figure 2: Visual representation of the four training modes available on the Jugbow Dog Shock Collar.

- **Extended Range & Dual Channel:**
  The remote control offers an impressive range of up to 4200 feet (approximately 1280 meters), ensuring reliable communication even in open outdoor environments. Its dual-channel design allows for simultaneous training of two dogs with a single remote, and it retains memory settings for convenience.

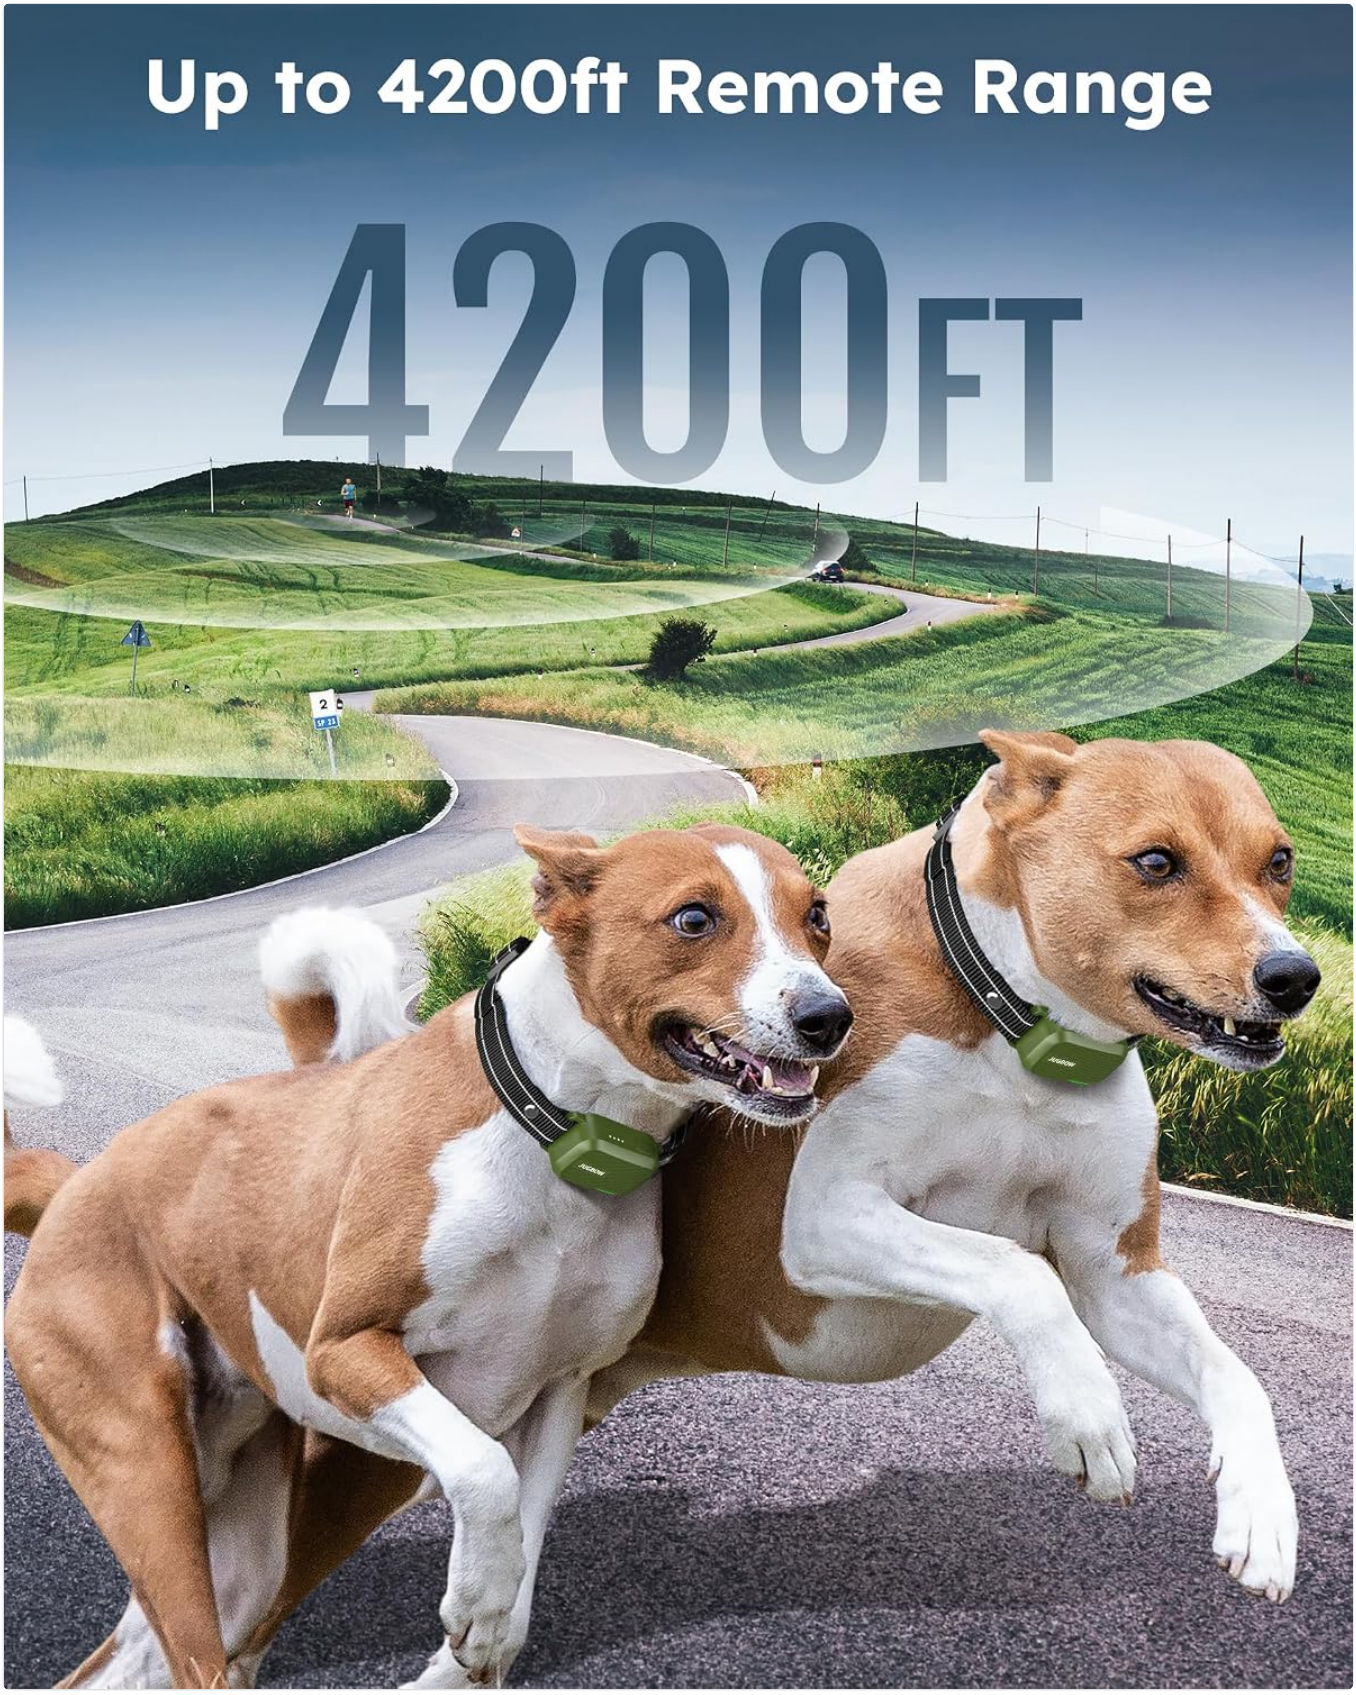


Figure 3: The 4200ft remote range allows for effective training across large areas, supporting two dogs simultaneously.

- **IPX7 Waterproof Receiver:**
  The receiver collars are 100% IPX7 waterproof, making them suitable for use in various weather conditions, including rain, splashes, and even swimming. Note: The remote control is not waterproof.

Your browser does not support the video tag.

Video 1: Demonstrates the waterproof capabilities of the Jugbow Dog Shock Collar receiver, highlighting its durability in wet conditions.

- **Adjustable & Comfortable Fit:**
  The soft nylon collar strap is two-way adjustable, fitting dogs weighing 10-120 lbs with neck sizes ranging from 7.8 to

24.4 inches. Its compact design ensures a comfortable fit for various breeds and sizes.



Figure 4: The adjustable collar accommodates a wide range of dog sizes, from small to large breeds.

- **Long Battery Life & Fast Charging:**
  Equipped with upgraded technology, the system features a 3-in-1 fast charging cable that fully charges the devices in just 2 hours. The receiver collar offers up to 35 days of standby time, while the remote provides up to 45 days.



Figure 5: The system boasts extended battery life for both the remote and receiver collars, minimizing charging frequency.

- **Security ON/OFF Switch:**
  The remote features an instant-response security on/off switch button, preventing accidental activation of training modes and ensuring safe handling.



Figure 6: The security switch on the remote prevents unintended corrections during handling or storage.

Setup Guide

1. Charging the Device

Before first use, fully charge the remote control and receiver collars. Use the provided 3-in-1 USB charging cable. The

indicator lights will show charging status.

Your browser does not support the video tag.

Video 2: Demonstrates how to charge the Jugbow Dog Shock Collar remote and receiver collars using the included USB cable. Ensure all devices are fully charged before initial use.

2. Pairing the Second Collar (if applicable)

The collars are typically pre-paired from the factory. If you need to pair a second collar or re-pair a collar, follow these steps:

1. Ensure the second receiver collar is turned off.
2. Long-press the RX power button on the receiver until it enters pairing mode (the status light will rapidly blink).
3. On the remote, select the desired channel (e.g., Channel 2 for the second collar) using the channel key.
4. Press any function key (Beep, Vibration, or Shock) on the remote for pairing. The receiver's status light will stop blinking once pairing is successful.

Your browser does not support the video tag.

Video 3: Step-by-step guide on how to pair the second receiver collar with the Jugbow remote control. This process ensures both collars respond to the same remote.

3. Attaching the Collar and Contact Points

Select the appropriate metal prongs (short for short-haired dogs, long for long-haired dogs) and attach them to the receiver. For added comfort and to prevent skin irritation, place the silicone caps over the prongs. Ensure the collar is snug but not too tight, allowing two fingers to fit comfortably between the collar and your dog's neck.

Important: It cannot be worn continuously for more than 12 hours without removing the metal prongs.

Operating Instructions

1. Turning On/Off the Remote and Receiver

- **Remote:** Slide the security ON/OFF switch on the side to unlock/lock the remote.
- **Receiver:** Press and hold the power button on the receiver until the green light flashes to turn on. Long press again to turn off.

2. Selecting Channels

Use the 'CH' button on the remote to switch between Channel 1 and Channel 2, corresponding to your two receiver collars. The remote's display will indicate the active channel.

3. Adjusting Training Levels

To adjust the intensity level for Beep, Vibration, or Shock modes:

1. Press the top button on the remote to cycle through Beep, Vibration, and Shock modes.
2. Once the desired mode is selected, rotate the knob at the top of the remote to easily adjust the level (1-8 for Beep, 1-16 for Vibration, 1-99 for Shock).

4. Using Training Modes

Once the desired mode and level are set, press the corresponding button on the remote to activate the correction:

- **Beep Button:** Emits an audible tone.
- **Vibration Button:** Activates vibration on the collar.

- **Shock Button:** Delivers static stimulation.
- **Shock Boost Button:** Delivers a 10% higher static stimulation.

Safety Guidelines

- Do not leave the collar on your dog for more than 12 hours per day to prevent skin irritation.
- Regularly check your dog's neck for any signs of irritation or sores. If found, discontinue use until the skin heals.
- Ensure the contact points are clean and free of debris.
- Always start with the lowest correction level and gradually increase if necessary. The goal is to get your dog's attention, not to punish them.
- This device is intended for training purposes only and should not be used as a punishment tool.
- Keep the remote control out of reach of children.
- Do not use this collar on aggressive dogs. Consult a professional trainer for behavioral issues.

Maintenance

- Clean the collar and receiver with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Regularly inspect the collar strap and contact points for wear and tear.
- Store the device in a cool, dry place when not in use.
- Charge the remote and collar as needed to maintain optimal battery life.

Troubleshooting

Problem	Possible Cause	Solution
Collar not responding to remote.	Low battery on remote or receiver; remote locked; collar not paired.	Charge devices; unlock remote; re-pair collar (refer to Setup section).
Correction not felt by dog.	Contact points not touching skin; level too low; prongs too short for fur.	Adjust collar fit; increase level; use longer prongs; trim fur around contact points.
Remote display is blank.	Low battery; remote is off.	Charge remote; turn on remote.
Skin irritation on dog's neck.	Collar worn too long or too tight; dirty contact points.	Remove collar immediately; clean neck and collar; allow skin to heal before resuming use. Ensure proper fit and wear time.

Specifications

- **Model Number:** DT-612
- **Item Weight:** 14 ounces
- **Item Package Dimensions:** 8.15 x 6.61 x 2.2 inches
- **Remote Range:** Up to 4200 feet
- **Waterproof Rating (Receiver):** IPX7
- **Battery Type:** Lithium Ion (included)
- **Charging Time:** Approximately 2 hours
- **Standby Time (Remote):** Up to 45 days
- **Standby Time (Receiver):** Up to 35 days
- **Adjustable Neck Size:** 7.8 - 24.4 inches
- **Recommended Dog Weight:** 10 - 120 lbs
- **Material:** Nylon

Warranty & Support

The Jugbow Dog Shock Collar comes with a**1-Year Warranty** from the date of purchase.

For product support, troubleshooting assistance, or warranty claims, please contact Jugbow customer service. Refer to the contact information provided in your product packaging or visit the official Jugbow website.

We are committed to providing high-quality service and support for your product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question