MOSEN MUSIC MED-X3

MOSEN Electric Drum Set MED-X3 User Manual

Brand: MOSEN MUSIC
Model: MED-X3

Introduction

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your MOSEN Electric Drum Set MED-X3. Please read this guide thoroughly before use to ensure proper functionality and longevity of your instrument.

Safety Information

- Ensure all connections are secure before use.
- Keep the drum set away from water and excessive moisture.
- Do not expose the drum set to extreme temperatures or direct sunlight.
- Use only the provided power adapter.
- Keep small parts out of reach of children to prevent choking hazards.

Package Contents

Verify that all items listed below are included in your package:

- 1x Sturdy Metal Frame (Adult Size)
- 1x 8" Mesh Snare Drum
- 3x 8" Tom Drum Pads
- 3x 9" Cymbals (Hi-Hat, Crash, Ride)
- 1x Drum Module
- 1x Kick Pedal
- 1x Hi-Hat Control Pedal
- 1x Pair of Drumsticks
- 1x Headphones
- 1x Adjustable Drum Throne

- 1x Power Adapter
- 1x Assembly Manual

Setup Instructions

1. Frame Assembly

Begin by assembling the sturdy metal frame. Ensure all connections are tightened securely to provide a stable foundation for your drum set.



Image: Detailed view of the MOSEN Electric Drum Set frame during assembly, showing the robust metal construction.



Image: Layout of various drum set components, including pads, cymbals, and pedals, ready for assembly onto the frame.

2. Attaching Pads and Cymbals

Attach the 8" mesh snare drum, 8" tom drum pads, and 9" cymbals to the frame using the provided clamps. Adjust their positions to your preferred playing comfort.



Image: The MOSEN Electric Drum Set fully assembled, showcasing the arrangement of drum pads, cymbals, and the central module.

3. Connecting Pedals and Module

Connect the kick pedal and hi-hat control pedal to the drum module. Then, connect all drum pads and cymbals to the corresponding inputs on the drum module. Ensure all cables are neatly organized.



Image: Close-up of the drum module with various cables connected to the drum pads, cymbals, and pedals.

4. Drum Throne and Power

Adjust the drum throne to a comfortable height. Connect the power adapter to the drum module and plug it into a power outlet.

Assembly Video:

Your browser does not support the video tag.

Video: A detailed demonstration of assembling the MOSEN Electric Drum Set, showing step-by-step instructions for setting up the frame, pads, cymbals, and connections.

Operating Instructions

1. Powering On and Volume Control

Press the Power button on the drum module to turn on the device. Use the Volume knob to adjust the overall output level.



Image: Close-up of the MOSEN drum module's control panel, highlighting the power button, volume knob, and various function buttons.

2. Selecting Drum Kits and Sounds

The drum module features 195 built-in sounds and 25 realistic preset kits. Use the 'KIT' button and navigation arrows to browse and select different drum kits. Use the 'VOICE' button to change individual drum sounds within a kit.

3. Metronome and Coach Functions

Activate the metronome using the 'CLICK' button to assist with timing and rhythm practice. The integrated metronome helps maintain a steady beat. Utilize the 'COACH' function for guided practice sessions tailored for beginners.

4. Connectivity (USB MIDI, AUX In, Headphones)

Connect headphones to the dedicated output for silent practice. Use the AUX input to connect external audio devices like smartphones or MP3 players and play along to your favorite tracks. The USB MIDI interface allows connection to a computer for recording or using the drum set as a MIDI controller.

Operation Video:

Your browser does not support the video tag.

Video: A user demonstrates the various functions and sound capabilities of the MOSEN Electric Drum Set, including kit selection and playing different rhythms.

Maintenance

1. Cleaning

Wipe down drum pads, cymbals, and the module with a soft, dry cloth after each use to remove dust and sweat. Avoid using abrasive cleaners or solvents.

2. Storage

When not in use, store the drum set in a dry, cool place away from direct sunlight. The durable metal frame is easily foldable for convenient storage and transport.

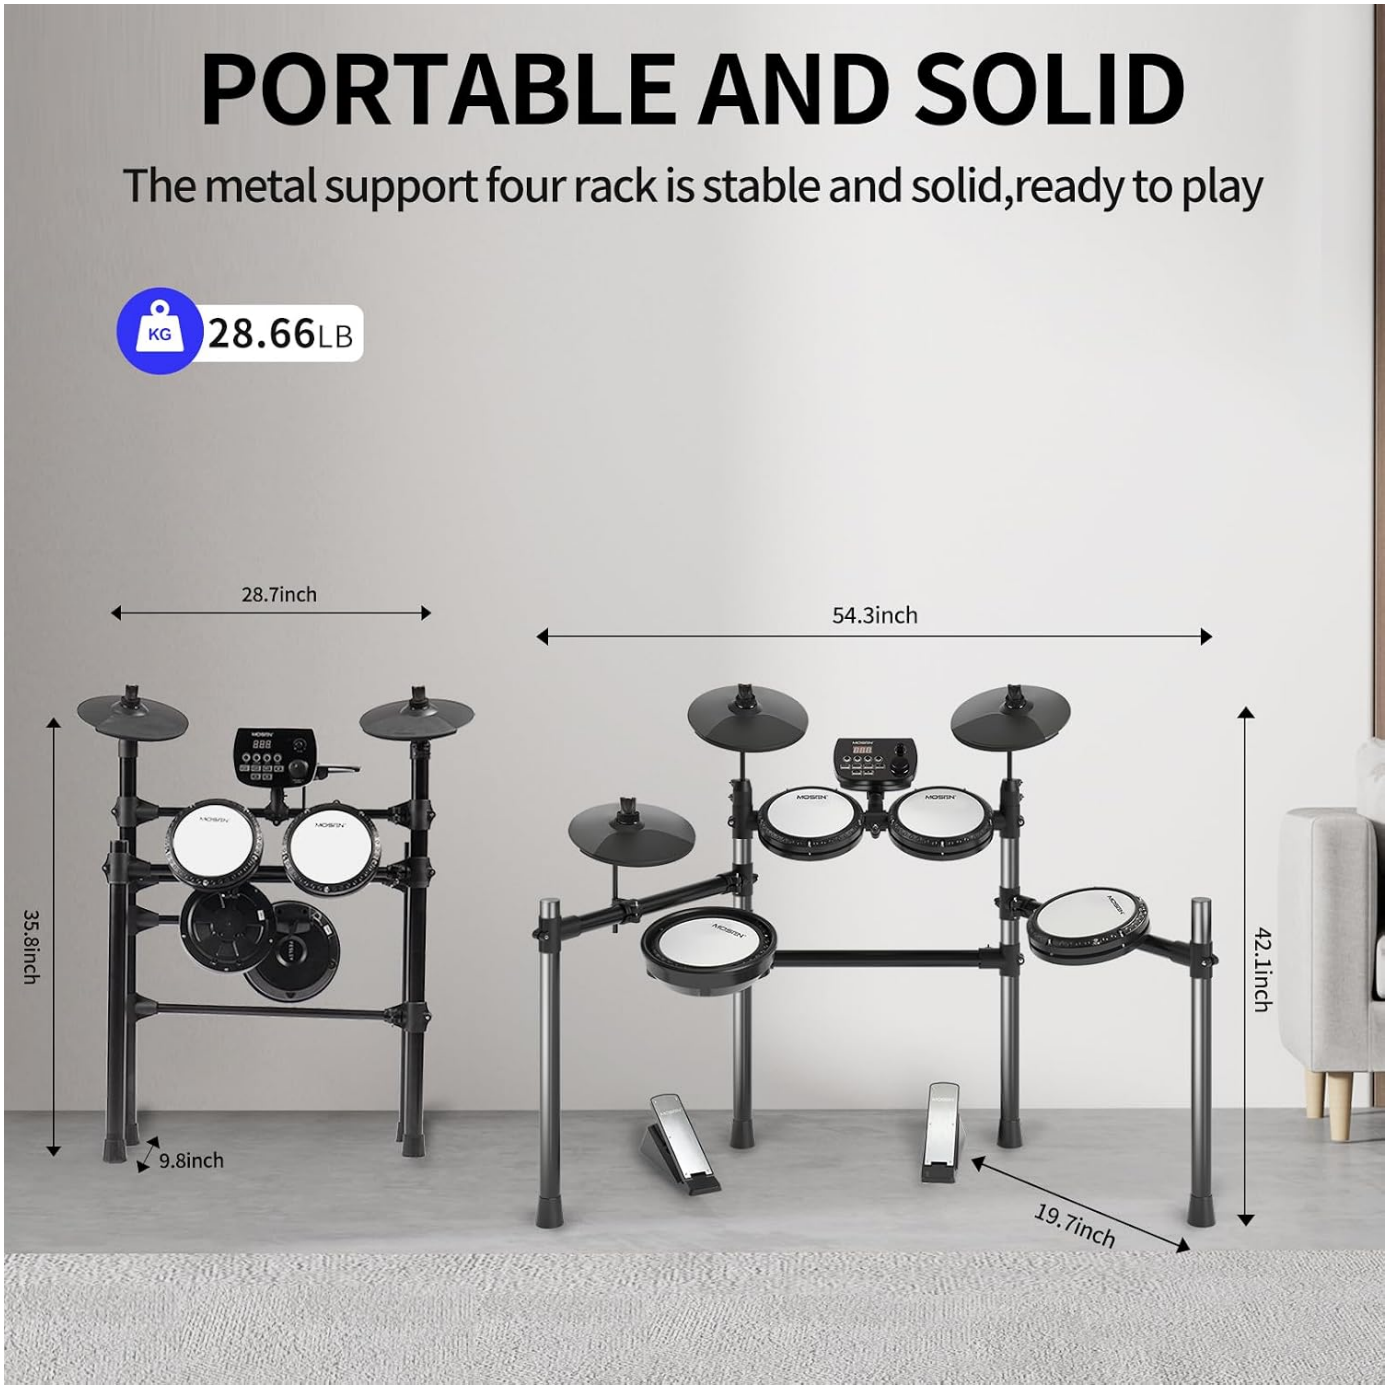


Image: The MOSEN Electric Drum Set partially folded, demonstrating its compact design for easy storage.

Troubleshooting

No Sound Output:

- Check if the power adapter is securely connected and the module is powered on.
- Ensure the volume knob is turned up.
- If using headphones, ensure they are fully plugged in and functional.

Pads/Cymbals Not Responding:

- Verify that all cables from pads/cymbals are correctly connected to the drum module.
- Check the sensitivity settings on the drum module.

Pedal Issues:

- Ensure pedals are correctly plugged into the module.
- Check for any obstructions preventing full pedal movement.

Specifications

Feature	Detail
Model Name	MED-X3
Brand	MOSEN MUSIC
Item Weight	14.97 Kilograms (32.9 pounds)
Package Dimensions	36 x 14 x 11 inches
Material Type	Silicone, Polymer, Iron, Metal
Connector Type	USB
Drum Pads	1x 8" Snare, 3x 8" Toms (Full Mesh)
Cymbals	3x 9" Cymbals (Hi-Hat, Crash, Ride)
Sounds/Kits	195+ Sounds, 25 Preset Kits

Warranty & Support

For warranty information or technical support, please refer to the contact details provided on the MOSEN MUSIC official website or your purchase documentation. Our dedicated support team is available to assist with any questions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question