LIPETY F9

LIPETY F9 Portable Foldable Rechargeable Oscillating Fan User Manual

Model: F9

1. Introduction

Thank you for choosing the LIPETY F9 Portable Foldable Rechargeable Oscillating Fan. This manual provides essential information for the safe and efficient operation of your fan. Please read it thoroughly before use and retain it for future reference.

The LIPETY F9 fan is designed for versatility, offering adjustable height, oscillation, and multiple wind modes. Its portable and foldable design, combined with a long-lasting rechargeable battery, makes it suitable for various indoor and outdoor environments, including homes, offices, camping, and travel.

2. Safety Instructions

- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water or other liquids to avoid electric shock.
- Do not use the fan near flammable materials or gases.
- Unplug the fan before cleaning or performing any maintenance.
- Keep out of reach of children and pets.
- Use only the provided USB-C cable for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support if issues arise.

3. Package Contents

Verify that all items are present in the package:

- 1 x LIPETY F9 Foldable Rechargeable Oscillating Fan
- 1 x USB to Type C Charging Cable (1.5m)
- 1 x Remote Control (with battery included)
- 1 x User Manual



Image: Contents of the LIPETY F9 fan package, showing the fan, USB-C charging cable, remote control, and user manual.

4. Product Overview

The LIPETY F9 fan features a unique foldable design, allowing it to transform from a compact unit to a desk fan or a standing pedestal fan. It includes a built-in rechargeable battery for cordless operation and comes with a remote control for convenient adjustments.

Key Features:

- **Foldable Design:** Compact for storage and portability.
- **Adjustable Height:** Extends from 4 inches (folded) up to 40 inches (fully stretched).
- **7200mAh Rechargeable Battery:** Provides 5 to 20 hours of operation depending on speed and oscillation.
- **Oscillation:** 70° smooth oscillation for wider air distribution.
- **Tilt Adjustment:** Multi-angle adjustable head (axial rotation - 75°, back and forth rotation - 180°).
- **4 Wind Modes:** Breeze Wind, Soft Wind, Strong Wind, Natural Wind.
- **Quiet Operation:** Noise level between 12-27dB.
- **Remote Control:** For power, speed, oscillation, and timer functions.
- **Detachable Front Grille:** For easy cleaning.



Image: The LIPETY F9 fan demonstrating its versatility in folded, desk, and standing modes, alongside its remote control and USB-C charging cable.



Image: Illustration of the LIPETY F9 fan's adjustable height feature, extending from a compact 4.1 inches to a maximum of 41.3 inches.

5. Setup

5.1 Unfolding the Fan

1. Gently push the fan head upwards in the direction of the arrow until it is upright.
2. Pull the rod to the back end until it automatically locks into place, forming the desk fan configuration.
3. To extend to a standing fan, adjust the height of the rod upwards to your desired level.



Image: Visual instructions for unfolding the fan from its compact state to a desk fan and then to a standing fan, and how to fold it back.

5.2 Charging the Fan

Before first use, fully charge the fan. The fan can be used while charging.

1. Connect the provided USB-C cable to the charging port on the fan base.
2. Connect the other end of the USB-C cable to a 5V USB power adapter (not included), power bank, laptop, or other compatible USB power source.
3. The charging indicator lights will show the charging status. A full charge takes approximately 4 hours.



Image: The LIPETY F9 fan connected to a power source via its USB-C cable, illustrating various compatible charging methods and the battery level indicator.

6. Operation

6.1 Power On/Off and Speed Adjustment

The fan can be operated using the control panel on the base or the remote control.

- **Power Button:** Press once to turn on the fan at the lowest speed. Press repeatedly to cycle through speed levels

(Breeze Wind, Soft Wind, Strong Wind, Natural Wind). Press and hold to turn off.

- **Remote Control:** Use the power button on the remote to turn on/off. Use the speed buttons to adjust wind intensity.



Image: Close-up of the LIPETY F9 fan's 5-blade design and visual representation of the four distinct wind speed intensity levels: Breeze, Soft, Strong, and Natural Wind.

6.2 Oscillation Function

- **Oscillation Button:** Press the oscillation button on the fan base or remote control to activate/deactivate the 70° oscillation feature.



Image: The LIPETY F9 fan illustrating its 70-degree oscillation range and 200-degree vertical tilt capability, providing wide air coverage.

6.3 Timer Function

- **Timer Button:** Press the timer button on the remote control to set the fan to automatically turn off after a specified period (e.g., 1H, 2H, 3H, 4H).



Image: The LIPETY F9 fan showcasing its quiet operation (12-27dB) and the integrated 4-hour timer function, ideal for undisturbed sleep.

6.4 Remote Control Usage

The remote control allows for convenient operation from a distance. Ensure the remote's battery is installed and the plastic tab is removed before first use.

- **Buttons:** The remote includes buttons for Power, Speed levels, Oscillation, and Timer.
- **Sleep Mode:** An additional sleep mode may be available via the remote for ultra-quiet operation.

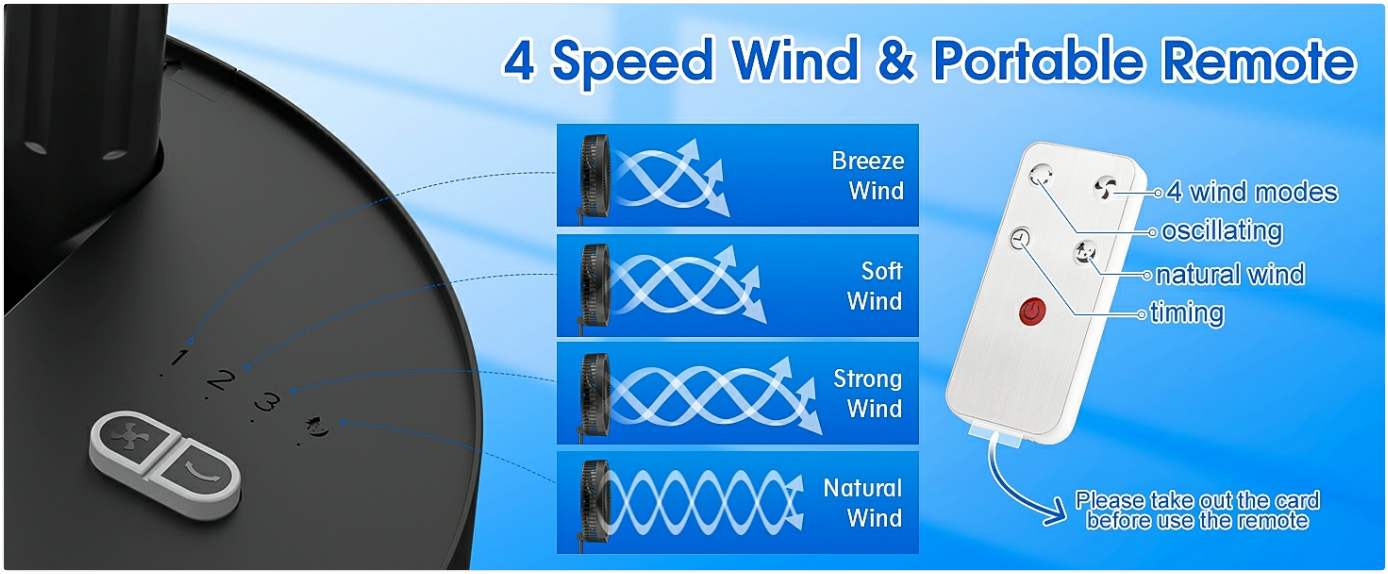


Image: The remote control for the LIPETY F9 fan, detailing its buttons for controlling wind modes, oscillation, natural wind, and timing functions.

7. Maintenance

7.1 Cleaning the Fan

Regular cleaning helps maintain optimal airflow and extends the fan's lifespan.

1. Ensure the fan is turned off and unplugged from any power source before cleaning.
2. The front grille is detachable for easy cleaning. Gently twist or unclip the grille as indicated in the product design to remove it.
3. Wipe the fan blades and grille with a soft, damp cloth. For stubborn dust, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
4. Ensure all parts are completely dry before reassembling the grille and operating the fan.
5. Do not use abrasive cleaners or solvents, as these may damage the fan's surface.



Image: Features of the LIPETY F9 fan, including its multi-function base, anti-slip pad for stability, and the detachable front grille designed for easy cleaning.

8. Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on	Battery is depleted. Power cable not connected.	Charge the fan using the provided USB-C cable. Ensure the power cable is securely connected.
Weak airflow	Fan speed is too low. Grille or blades are dirty.	Increase the fan speed. Clean the fan blades and grille as per maintenance instructions.
Fan does not oscillate	Oscillation function is not activated.	Press the oscillation button on the fan base or remote control.
Remote control not working	Battery is dead or not installed correctly. Obstruction between remote and fan.	Replace the remote control battery (CR5, included). Ensure there is a clear line of sight to the fan's receiver. Remove any plastic tab from the battery compartment.
Unusual noise during operation	Fan blades are obstructed or dirty. Fan not on a stable surface.	Turn off and unplug the fan. Check for any obstructions and clean the blades. Place the fan on a stable, flat surface.

9. Specifications

- **Model Name:** F9
- **Brand:** LIPETY
- **Color:** Black
- **Product Dimensions (Folded):** 9"D x 9"W x 4"H (approx. 22cm x 22cm x 10.5cm)
- **Product Dimensions (Max Height):** 9"D x 9"W x 40"H (approx. 22cm x 22cm x 105cm)
- **Item Weight:** 2.49 Pounds (1.13 kg)
- **Power Source:** Battery Powered (7200mAh rechargeable battery)
- **Charging Input:** USB-C, 5V
- **Wattage:** 3 watts
- **Noise Level:** 12-27 dB
- **Number of Power Levels:** 4 (Breeze, Soft, Strong, Natural Wind)
- **Oscillation:** 70°
- **Tilt Adjustment:** Axial rotation - 75°, Back and forth rotation - 180°
- **Control Method:** Remote, On-device buttons
- **Special Features:** Adjustable Height, Foldable, Oscillating, Remote Controlled, Timer
- **Indoor/Outdoor Usage:** Yes

10. Warranty and Support

LIPETY products are designed for reliability and performance. For any questions, technical support, or warranty claims, please contact LIPETY customer service through the retailer where the product was purchased or visit the official LIPETY brand store online.
Please retain your proof of purchase for warranty purposes.

© 2025 LIPETY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question