cureder 20627

cureder 21 Inch Outdoor Refrigerator User Manual

Model: 20627

1. Introduction

This manual provides essential information for the safe and efficient operation of your cureder 21 Inch Outdoor Refrigerator, Model 20627. This appliance is designed for both indoor and outdoor use, featuring a weather-proof stainless steel construction suitable for various environments. Please read these instructions thoroughly before installation and use, and retain them for future reference.



Image: The cureder 21 Inch Outdoor Refrigerator seamlessly integrated into an outdoor kitchen setup.

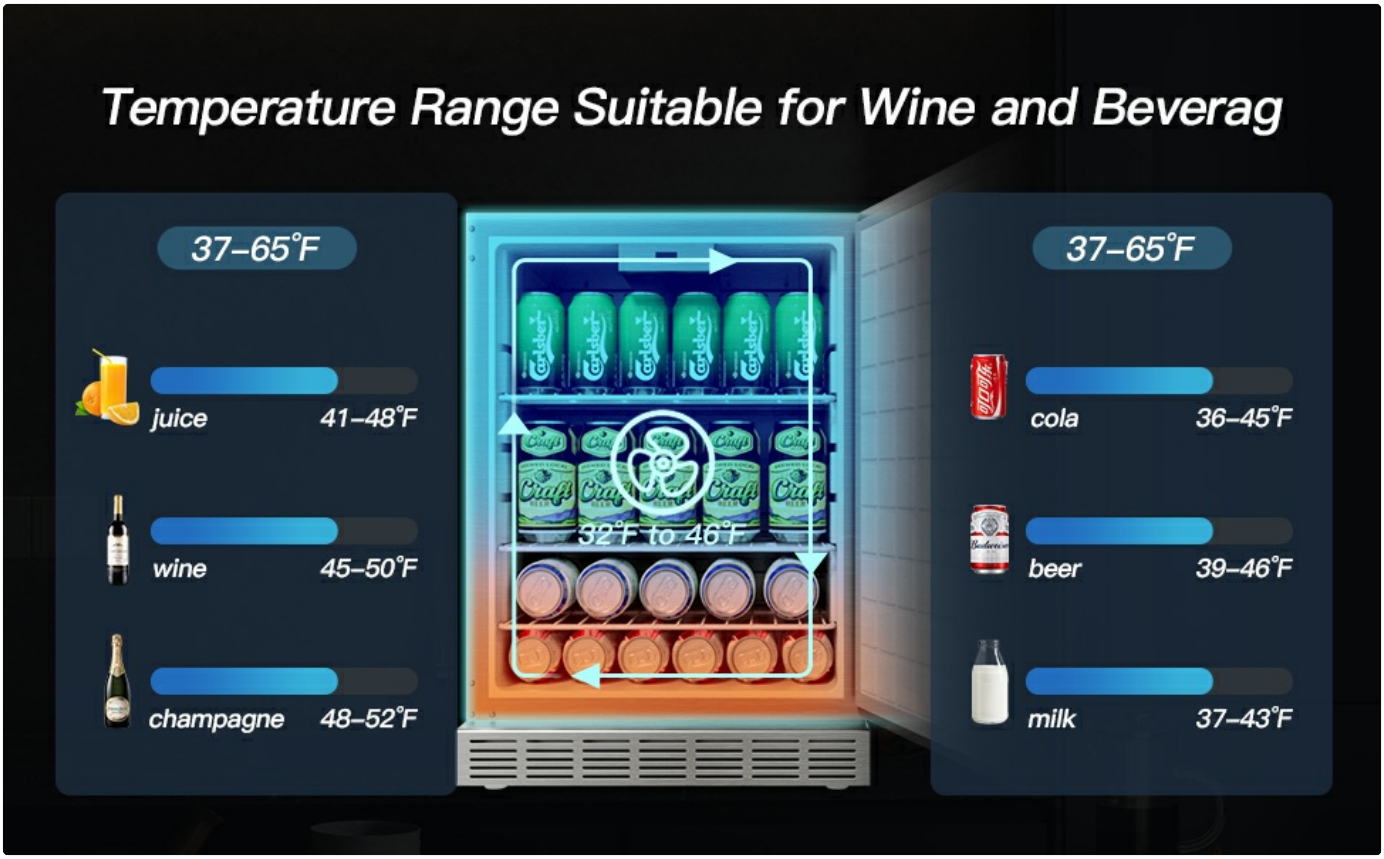


Image: The cureder 21 Inch Outdoor Refrigerator shown in an indoor kitchen environment.

2. Safety Information

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Connect to a properly grounded outlet only.
- Do not remove the grounding prong, bypass the grounding adapter, or use an extension cord.
- Unplug the refrigerator before cleaning or making any repairs.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any shipping damage. Report any damage to your dealer immediately. Keep packaging materials until you are satisfied with the product's condition.

3.2 Placement

The cureder 21 Inch Outdoor Refrigerator is designed for both freestanding and built-in installation. Ensure adequate ventilation around the unit, especially at the front grille. Avoid direct sunlight or heat sources. For outdoor use, ensure the location is protected from extreme weather conditions.



Image: Illustration of the refrigerator's versatility for both under-counter built-in and freestanding placement.

3.3 Leveling

The refrigerator must be level for proper operation. Adjust the adjustable foot pads at the bottom of the unit to ensure stability and levelness. Use a spirit level to verify.

3.4 Power Connection

Plug the refrigerator into a dedicated, grounded 110V AC outlet. Do not use extension cords or adapter plugs. Allow the unit to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

4. Operating Instructions

4.1 Digital Temperature Control

Your refrigerator is equipped with a digital control panel for precise temperature management. The temperature range is 32°F to 46°F (0°C to 8°C).



Image: Detailed view of the digital control panel with temperature display and adjustment buttons.

- **Power Button:** Press to turn the unit ON or OFF.
- **SET Button:** Press to enter temperature setting mode. Use the UP/DOWN arrows to adjust the desired temperature. Press SET again to confirm.
- **Light Button:** Controls the internal illumination.
- **°C/°F Button:** Toggles between Celsius and Fahrenheit display.

4.2 Door Lock

The refrigerator features a door lock for secure storage. Use the provided key to lock and unlock the door.



Image: Close-up of the integrated door lock mechanism on the refrigerator.

4.3 Shelving

The unit includes three chrome-plated shelves that can be adjusted to accommodate various sizes of beverages. To adjust, simply slide the shelves out and reposition them on the desired support rails.



Image: The interior of the refrigerator displaying its three removable metal shelves, designed for flexible beverage storage.

4.4 Auto-Defrost Function

This refrigerator features an automatic defrost function, eliminating the need for manual defrosting. Frost will periodically melt and drain into an evaporation tray.

4.5 Power Outage Memory Function

In the event of a power outage, the refrigerator's memory function will retain the last set temperature. When power is restored, the unit will resume operation at the previously set temperature.

Your browser does not support the video tag.

Video: An overview of the cureder 21 Inch Outdoor Refrigerator, highlighting features such as the stainless steel handle, door lock, interior capacity, 360° air circulation system, digital temperature control, compressor refrigeration, adjustable foot pads, and power outage memory function.

5. Maintenance

5.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Wash the interior surfaces with a solution of warm water and baking soda (2 tablespoons of baking soda to 1 quart of water). Rinse and dry thoroughly. Remove shelves and clean them separately.

5.2 Cleaning the Exterior

Clean the exterior with a mild detergent and warm water. Wipe dry with a soft cloth. For stainless steel surfaces, use a stainless steel cleaner and polish in the direction of the grain. Avoid abrasive cleaners or scouring pads.

5.3 Door Gasket Maintenance

The door gasket is removable for easy cleaning or replacement. Regularly clean the door gasket to ensure a proper seal and prevent leakage or corrosion. Use a mild soap and water solution.

5.4 Condenser Coil Cleaning

Periodically clean the condenser coils located behind the front grille. Dust and debris can accumulate, reducing efficiency. Use a vacuum cleaner with a brush attachment to gently remove any buildup.

6. Troubleshooting

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	No power; circuit breaker tripped; temperature set too high.	Check power supply; reset circuit breaker; lower temperature setting.
Temperature is not cold enough	Door opened too frequently; warm items added; poor ventilation; dirty condenser coils.	Minimize door openings; allow warm items to cool before placing inside; ensure proper ventilation; clean condenser coils.
Excessive noise	Unit not level; items vibrating inside; fan obstruction.	Adjust leveling feet; rearrange items; check for fan obstructions.
Water on floor	Drain tube clogged; door gasket not sealing properly.	Clear drain tube; inspect and clean door gasket.

7. Specifications

Detailed specifications for the cureder 21 Inch Outdoor Refrigerator, Model 20627:



Image: A visual representation of the refrigerator's exterior dimensions, including width, depth, and height.



Image: An exploded view illustrating the internal structure and components, including the stainless steel body, high-density foam insulation, and night light.

Feature	Detail
Brand Name	cureder
Model Number	20627
Item Weight	60.8 pounds
Product Dimensions (D x W x H)	22.5 x 20.5 x 33 inches
Capacity	5.47 Cubic Feet (160L)
Annual Energy Consumption	12 Kilowatt Hours
Installation Type	Built-In / Freestanding
Form Factor	Compact
Special Features	Door Lock, Auto-Defrost
Color	Silver
Voltage	110 Volts
Defrost System	Automatic
Door Material Type	Stainless Steel
Shelf Type	Toughened Glass
Number of Shelves	3 (Wire Racks)

8. Warranty and Support

Specific warranty details for the cureder 21 Inch Outdoor Refrigerator, Model 20627, are not provided in this document. For comprehensive warranty information, including coverage duration and terms, please refer to the official documentation included with your product or contact cureder customer support directly. You may also visit the manufacturer's website for the most up-to-date information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question