Gisaae LK-8330

Gisaae 7D Electric Shaver Model LK-8330 User Manual

Brand: Gisaae | Model: LK-8330

1. Important Safety Information

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Do not use this appliance near water while charging.
- Ensure the shaver is thoroughly cleaned and dried after each use to prevent bacterial growth.
- Handle the shaver with care to prevent cuts or skin irritation.
- This appliance is intended for shaving hair on the head and face. Do not use for other purposes.
- Keep out of reach of children.
- Do not disassemble or attempt to repair the shaver yourself. Contact customer support if issues arise.

2. Product Overview

The Gisaae 7D Electric Shaver is designed for efficient and comfortable shaving of the head and face. It features a multi-head design and is suitable for both wet and dry use.

2.1 Package Contents

- Gisaae 7D Electric Shaver (Main Unit)
- 7D Shaving Head (pre-installed or separate)
- Hair Trimmer Attachment
- 3 Guide Combs (3mm, 5mm, 7mm)
- USB Charging Cable
- Cleaning Brush
- User Manual

2.2 Key Features

- **7D Floating Shaving Heads:** Adapts to facial and head contours for a close shave.
- **IPX7 Waterproof:** Allows for wet and dry shaving, and easy cleaning under running water.
- **Long-lasting Battery:** 800mAh battery provides up to 90 minutes of cordless use after a 2-hour charge.
- **LED Display:** Shows battery level and charging status.

- **Multi-functional Grooming Kit:** Includes various attachments for comprehensive grooming.

3. Setup and Charging

3.1 Initial Charge

Before first use, fully charge the shaver. Connect the USB charging cable to the shaver's charging port and to a compatible USB power source (e.g., computer, wall adapter, power bank, car charger).



Figure 3.1: Connecting the shaver for USB charging. The LED display indicates the battery level.

- The LED display will show the charging progress.
- A full charge takes approximately 2 hours and provides up to 90 minutes of operating time.
- Do not use the shaver while it is charging.

3.2 Attaching/Detaching Heads

To change attachments, gently twist and pull the current head off the shaver body. Align the new attachment with the shaver body and push it on until it clicks into place.

4. Operating Instructions

4.1 General Shaving Tips

- For best results, ensure your skin is clean.
- Move the shaver in small, circular motions against the direction of hair growth.
- Apply gentle pressure; excessive force is not necessary and can cause irritation.

4.2 Dry Shaving

Ensure your skin is completely dry before dry shaving. This method is convenient for quick shaves.

4.3 Wet Shaving

The shaver is IPX7 waterproof, allowing for wet shaving with shaving cream, gel, or foam, and even in the shower.



Figure 4.1: The Gisaae 7D Electric Shaver supports both dry shaving (left) and wet shaving with cream (right).



Figure 4.2: The shaver can be used safely in the shower due to its IPX7 waterproof rating.

4.4 Shaving Head Operation (7D)

The 7D floating heads are designed to contour to your head and face. For optimal results, especially for bald heads, consider a two-step process:

1. If you have longer hair, first use the hair trimmer attachment to cut hair short.
2. Then, use the 7D shaving head to achieve a close, smooth shave.



Figure 4.3: Two-step shaving process for effective results on longer hair.

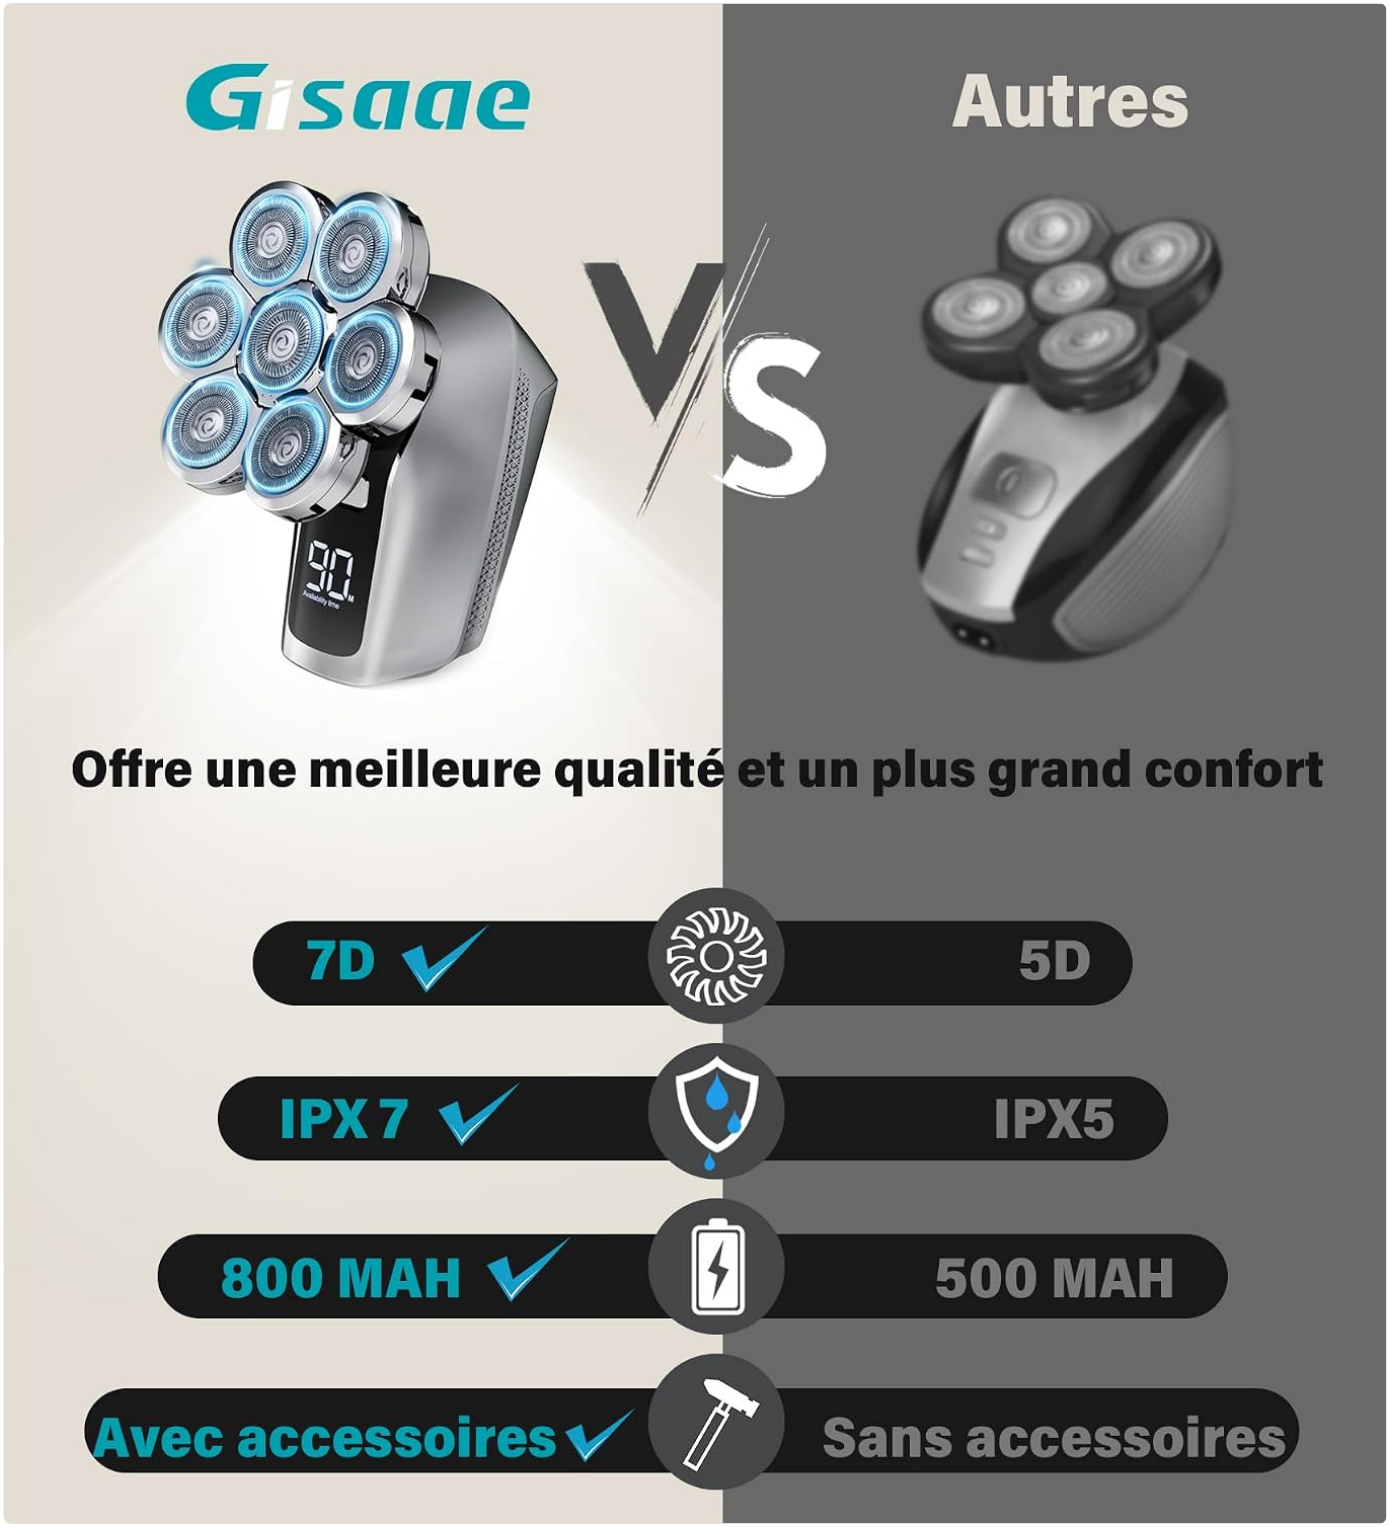


Figure 4.4: The 7D floating heads provide a flexible and precise shave.

4.5 Hair Trimmer Attachment

Attach the hair trimmer head for trimming longer hair or shaping beards. Use the included guide combs (3mm, 5mm, 7mm) to achieve desired hair lengths.

- To attach a guide comb, slide it onto the trimmer head until it locks.
- To remove, gently pull the comb off.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and hygiene of your shaver.

5.1 Cleaning the Shaving Head

- After each use, turn off the shaver.
- Open the shaving head by gently prying open each individual blade cover.
- Rinse the shaving head and individual blades directly under running water.
- Use the provided cleaning brush to remove any stubborn hair residue.
- Allow the head to air dry completely before closing the covers and reattaching to the shaver body.



Figure 5.1: Steps for easy cleaning of the shaver head under running water.

5.2 Cleaning Other Attachments

The hair trimmer and guide combs can also be rinsed under running water. Ensure they are dry before storing.

5.3 Storage

Store the shaver and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

6. Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery.	Charge the shaver for at least 2 hours.
Poor shaving performance.	Blades are dirty or clogged with hair.	Clean the shaving head thoroughly as per Section 5.1.
	Blades are worn.	Consider replacing the shaving head. (Replacement heads sold separately).
Skin irritation after shaving.	Applying too much pressure.	Use lighter pressure. Ensure skin is clean before shaving.
	Shaver not cleaned properly.	Ensure thorough cleaning after each use.

7. Specifications

Brand	Gisaae
Model Number	LK-8330
Power Source	Battery Powered
Battery Type	1 Lithium-polymer (rechargeable)
Battery Capacity	800 mAh
Charging Time	Approx. 2 hours
Operating Time	Up to 90 minutes
Waterproof Rating	IPX7
Blade Material	Stainless Steel
Head Type	Rotary (7 heads)
Dimensions (Package)	11 x 10.3 x 8.1 cm
Weight (Package)	290 grams

8. Warranty and Support

For any questions or concerns regarding your Gisaae 7D Electric Shaver, please do not hesitate to contact our customer support. We aim to provide a satisfactory response within 24 hours.

Please refer to your purchase documentation or retailer for specific warranty terms and conditions.

© 2026 Gisaae. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question