**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Weber 1500460

# Weber Traveler Compact Portable Gas Grill User Manual

Model: 1500460

## Introduction

The Weber Traveler Compact Portable Gas Grill is designed for convenient grilling on the go. Its compact size and robust features make it ideal for outdoor adventures, tailgating, or small patio use. This manual provides essential information for the safe and efficient operation, setup, and maintenance of your grill.




Figure 1: Weber Traveler Compact Portable Gas Grill

## Safety Information

Always prioritize safety when operating any gas appliance. Failure to follow these instructions could result in fire, explosion, or burn hazards.

- **Outdoor Use Only:** This grill is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Ventilation:** Ensure adequate ventilation around the grill. Keep clear of combustible materials.

- **Propane Gas:** Use only propane gas. Do not connect to a natural gas supply. Always check for leaks before use.
- **Clearance:** Maintain a minimum distance of 24 inches (61 cm) from the back and sides of the grill to any combustible materials.
- **Supervision:** Never leave a lit grill unattended. Keep children and pets away from the grill.
- **California Proposition 65 Warning:** This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

## Setup

The Weber Traveler Compact Grill is designed for quick and easy setup. Follow these steps to prepare your grill for use.

### 1. Unpacking and Initial Assembly

Carefully remove all components from the packaging. Some minor assembly may be required, typically involving attaching wheels or side tables if not pre-assembled. Refer to the included assembly guide for detailed instructions.




Figure 2: Front view of the grill, ready for setup.

## 2. Raising the Grill

To raise the grill from its folded position, locate the red release lever on the side of the grill frame. Press the lever and lift the grill with one hand. The gas-spring controlled mechanism will assist in smoothly raising the grill to its full upright position. Ensure it locks securely into place before use.

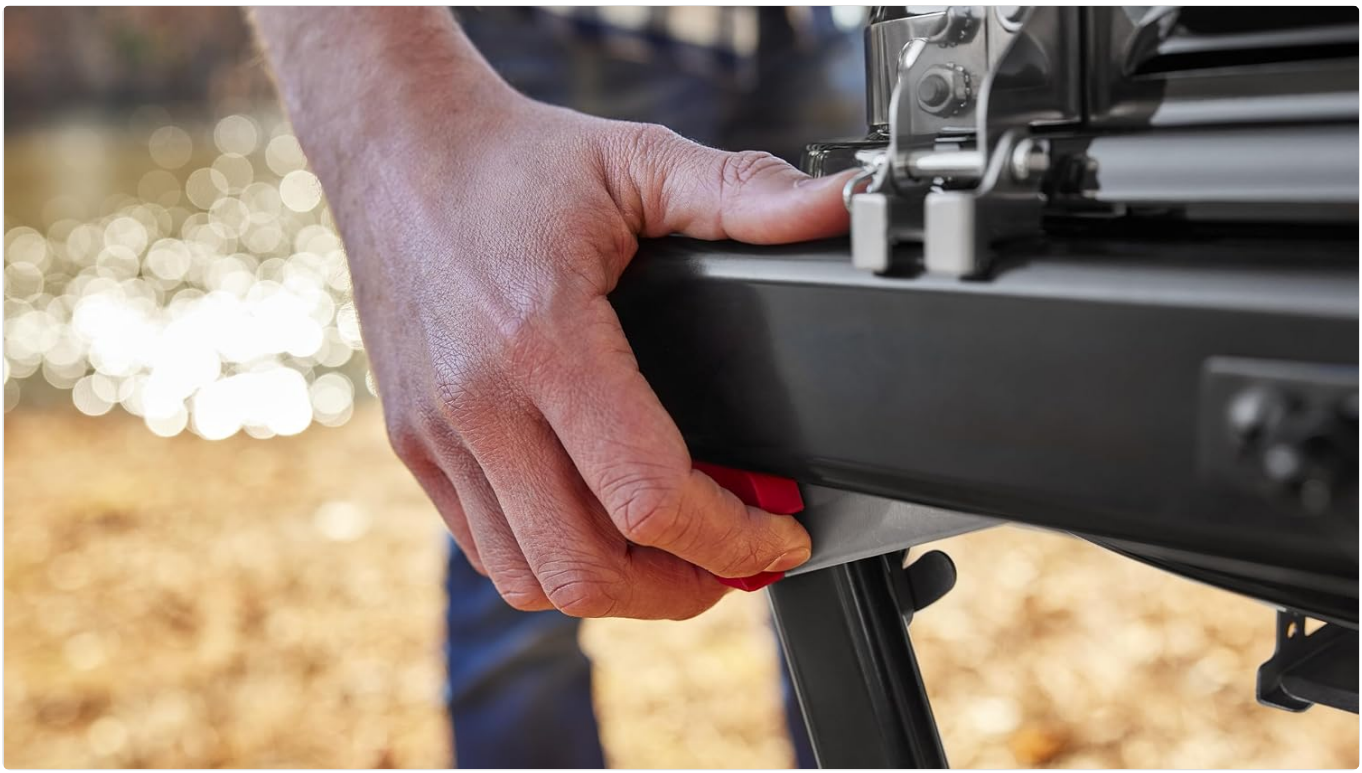


Figure 3: Engaging the folding mechanism.

## 3. Connecting the Propane Tank

The grill uses a standard propane gas connection. Ensure the gas control knob is in the "OFF" position. Connect the propane tank to the grill's gas inlet. Hand-tighten the connection firmly. Check for any gas leaks using a soapy water solution before lighting the grill.



Figure 4: Attaching the propane tank.

## 4. Portability and Storage

When finished grilling, allow the grill to cool completely. To fold, press the red release lever and gently lower the grill. The lid lock automatically latches once the grill is folded down, ensuring it remains secure during transport. The durable wheels allow for easy movement across various terrains, and its compact design fits easily into most car trunks.



Figure 5: Transporting the folded grill.

## Operating Instructions

Learn how to ignite and control your Weber Traveler grill for optimal cooking results.

### 1. Ignition

With the propane tank connected and the lid open, turn the gas control knob to the "START/HIGH" position. A rapid clicking sound indicates that gas is flowing and the ignition is sparking. If the grill does not light within 5 seconds, turn the knob to "OFF", wait 5 minutes for gas to dissipate, and then repeat the ignition process.

### 2. Temperature Control

The grill offers a wide temperature range, allowing you to sear steaks at high heat or grill juicy chicken at lower temperatures. Adjust the gas control knob to achieve your desired cooking temperature. The integrated lid thermometer provides an accurate reading of the internal grill temperature.




Figure 6: Food grilling on the cast-iron grates.

### 3. Cooking Capacity

The porcelain-enameled, cast-iron cooking grates retain heat for excellent searing. The grill surface is spacious enough to cook for up to 4 people, fitting approximately 12 burgers or 15 sausages simultaneously.

## Maintenance

Regular maintenance ensures the longevity and optimal performance of your grill.

### 1. Grease Management

The grill features front access grease removal for quick and easy cleanup. Simply scrape grease into the slot, slide out the catch pan, and dispose of the drip pan. Replace the drip pan as needed.

### 2. Cleaning the Cooking Grates

After each use, while the grates are still warm, use a grill brush to remove any food residue. For deeper cleaning, the grates can be removed and washed with warm, soapy water.

### 3. Exterior Cleaning

Wipe down the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the finish. Ensure all surfaces are dry before storing.

## Troubleshooting

If you encounter issues with your grill, refer to the common troubleshooting tips below.

### 1. Grill Not Lighting

- **Gas Supply:** Ensure the propane tank is not empty and is properly connected.
- **Igniter:** Listen for the rapid clicking sound when turning the knob. If no clicking, check the igniter electrode and wire for damage or disconnections.
- **Gas Flow:** If the igniter sparks but no flame, there might be an issue with gas flow. Ensure the gas control knob is

fully open.

### 2. Uneven Heating

- **Burner Tubes:** Check burner tubes for blockages (e.g., food debris, spider webs). Clean with a wire brush if necessary.
- **Gas Pressure:** Ensure the propane tank is not low on fuel.

### 3. Excessive Flare-ups

- **Grease Buildup:** Clean the grease management system regularly.
- **Fatty Foods:** Trim excess fat from meats before grilling.
- **Temperature:** Reduce grill temperature if flare-ups are persistent.

## Specifications

Detailed specifications for the Weber Traveler Compact Portable Gas Grill.

| Feature | Detail |
|---|---|
| Brand | Weber |
| Model Name | Weber Traveler Compact Portable Gas Grill |
| Model Number | 1500460 |
| Product Dimensions | 34"D x 34.75"W x 21.5"H |
| Item Weight | 49 Pounds |
| Fuel Type | Gas (Propane) |
| Material | Cast Iron (Grates), Porcelain Enamel (Finish) |
| Assembly Required | Yes |
| Grill Configuration | Portable |
| Main Burner Count | 1 |
| UPC | 077924997167 |




Figure 7: Product Dimensions.

## Warranty and Support

Weber stands behind the quality of its products. Your Weber Traveler Compact Portable Gas Grill comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, replacement parts, or warranty claims, please contact Weber Customer Support. Contact information can typically be found on the Weber website or in the documentation provided with your grill.

Additional protection plans may be available for purchase from authorized retailers to extend coverage beyond the

standard manufacturer's warranty.

© 2025 Weber-Stephen Products LLC. All rights reserved.

For more information, visit www.weber.com

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

**Open the live page**

**https://manuals.plus/asin/B0CYNS3KY5**

More documents and user manuals: **https://manuals.plus/**