Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sejoy TXD-FK608-BLU

Sejoy Electric Razor for Men User Manual

Model: TXD-FK608-BLU

Introduction

Thank you for choosing the Sejoy Electric Razor. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new electric shaver. Please read it thoroughly before first use and keep it for future reference.



The Sejoy Electric Razor offers a stylish, professional, and precise shaving experience with self-sharpening blades, a floating head, full body washability, universal voltage, and a smart LCD display.

What's in the Box

Upon opening your Sejoy Electric Razor package, you should find the following items:

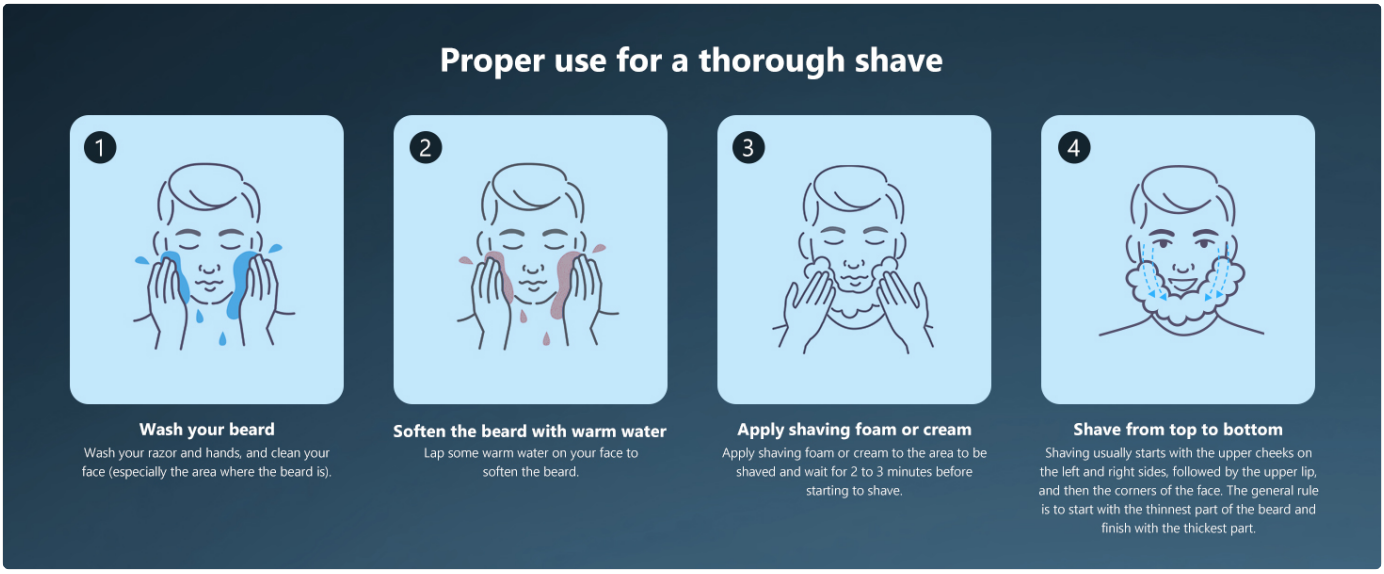


Image showing all components included in the Sejoy Electric Razor package.

- Electric Razor x 1
- Protective Cover x 1
- Cleaning Brush x 1
- USB-C Charging Cable x 1
- User Manual x 1

Setup

Initial Charging

Before first use, fully charge your Sejoy Electric Razor. A full charge provides up to 100 minutes of cordless operation. The charging time is approximately 1.5 hours.

- Connect the provided USB-C charging cable to the razor's charging port.
- Plug the other end of the USB-C cable into a compatible 5V USB power adapter (not included, typically a phone charger).
- The digital power display will indicate the charging status and remaining battery percentage.



The digital display shows the remaining battery capacity, ensuring you know when to recharge.

Activating Travel Lock

To prevent accidental activation during travel, the razor features a smart travel lock. Long press the power button for 3 seconds to activate or deactivate the travel lock. The LCD display will show a lock icon when activated.



The LCD display provides intelligent alerts for flushing, charging, and travel lock status.

Operating Instructions

Power On/Off

Press the power button once to turn the razor on. Press it again to turn it off.

Wet & Dry Shaving

The Sejoy Electric Razor is IPX7 waterproof, allowing for versatile wet and dry shaving. You can enjoy a quick, gentle dry shave or a refreshing wet shave with foam for a luxurious grooming session. Do not use the shaver while showering or submerged in water.



Choose between a comfortable dry shave or a refreshing foam wet shave.

Shaving Technique

For optimal results, follow these steps for a thorough shave:



Visual guide for achieving a thorough shave.

1. **Wash your beard:** Wash your razor and hands, and clean your face (especially the area where the beard is).
2. **Soften the beard with warm water:** Apply some warm water on your face to soften the beard.
3. **Apply shaving foam or cream:** Apply shaving foam or cream to the area to be shaved and wait for 2 to 3 minutes before starting to shave.
4. **Shave from top to bottom:** Shaving usually starts with the upper cheeks on the left and right sides, followed by the upper lip, and then the corners of the face. The general rule is to start with the thinnest part of the beard and finish with the thickest part.

Using the Pop-up Sideburn Trimmer

The razor includes a pop-up sideburn trimmer for precise detailing and trimming of longer hairs. Simply slide the trimmer switch upwards to engage the trimmer.




The pop-up sideburn trimmer is multi-purpose and fulfills different trimming needs.

Maintenance

Cleaning the Shaver

Thanks to its IPX7 waterproof rating, the Sejoy Electric Razor can be easily cleaned under running water after each use. Regular cleaning ensures optimal performance and hygiene.

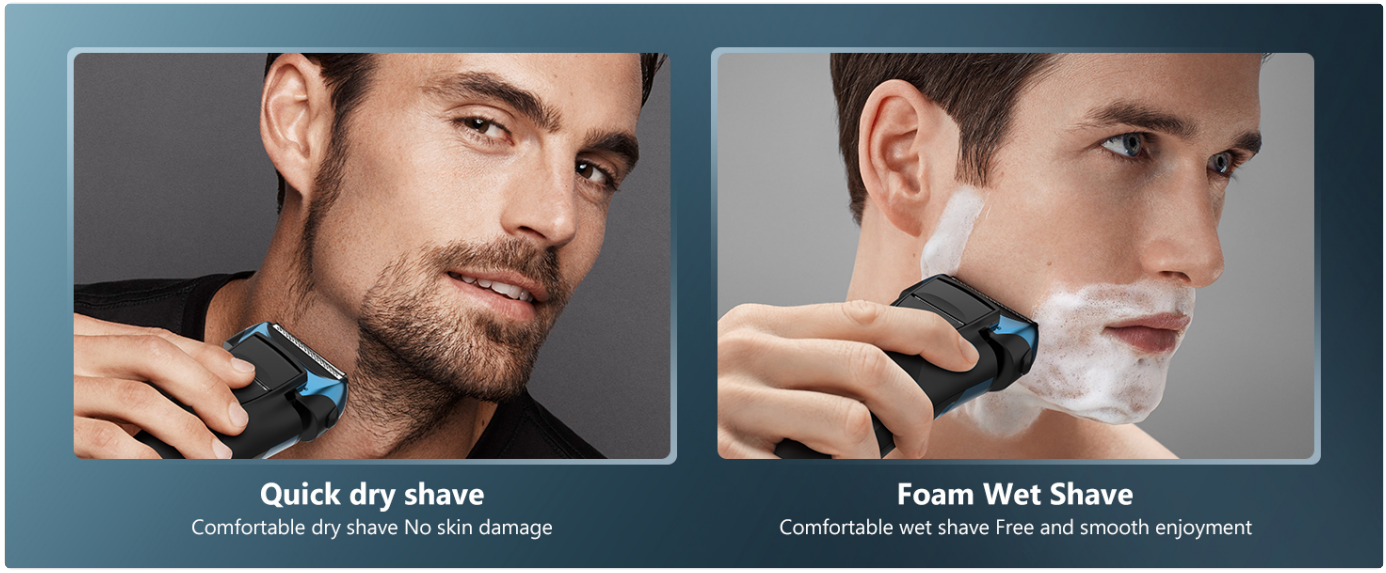

The whole body washable design makes cleaning simple and convenient.

- Turn off the shaver and disconnect it from any power source.
- Press the release button to detach the shaver head.
- Rinse the shaver head and the main body under warm running water to remove hair clippings and debris.
- Use the provided cleaning brush to remove any stubborn hair particles from the blades and foil.
- Allow all parts to air dry completely before reassembling or storing the shaver.



The triple blades are easy to remove and clean, designed for wear and noise resistance, and prevent corrosion.

Blade and Foil Replacement

For continued optimal performance, it is recommended to replace the shaver head (blades and foil) periodically, typically every 12-18 months, depending on usage. Replacement parts can be purchased from authorized Sejoy retailers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted; Travel lock is activated.	Charge the shaver fully; Long press the power button for 3 seconds to deactivate travel lock.
Poor shaving performance.	Blades/foil are dirty or worn; Incorrect shaving technique.	Clean the shaver head thoroughly; Ensure proper shaving technique (refer to Operating Instructions); Consider replacing the shaver head if blades are dull.
Shaver feels loud during operation.	Normal operation for foil shavers.	Foil shavers are generally louder than rotary shavers due to their design for efficient hair removal. The sound level is typically below 62dB. This is normal for the product.
Digital display not working.	Battery issue; Internal malfunction.	Ensure shaver is charged; If problem persists, contact customer support.



The sound level of this foil shaver is typically below 62dB, which is normal for this type of device.

SPECIFICATIONS

Feature	Detail
Model Name	TXD-FK608-BLU
Power Source	Battery Powered (1 Lithium Ion battery included)
Motor Speed	Up to 7500 RPM
Waterproof Rating	IPX7 (Whole Body Washable)
Shaving System	3-Blade Foil Shaver (2 contoured outer blades, 1 x 30° acute-angle inner blade)
Special Features	Anti-Scratch, Detachable Head, Ergonomic Design, Fast Charging, Travel Lock, Digital Power Display
Battery Life	Up to 100 minutes of working time

Feature	Detail
Charging Time	Approx. 1.5 hours
Package Dimensions	7.4 x 3.62 x 1.93 inches
Item Weight	8.82 ounces
Manufacturer	JOYTECH Healthcare Co.,Ltd

Warranty and Support

Specific warranty details for the Sejoy Electric Razor are not provided in this manual. For information regarding warranty coverage, returns, or technical support, please refer to the product packaging, contact the retailer where you purchased the product, or visit the official Sejoy website.
Please retain your proof of purchase for any warranty claims.

© 2024 Sejoy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CYZQ4S8V

More documents and user manuals: **https://manuals.plus/**