Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TESSAN TS-CS02

TESSAN 9-in-1 Charging Station 30W (Model TS-CS02) - Instruction Manual

1. Introduction

The TESSAN 9-in-1 Charging Station 30W (Model TS-CS02) is a versatile power solution designed to charge multiple electronic devices simultaneously. This manual provides essential information for the safe and efficient use of your charging station, including setup, operation, and maintenance guidelines.



Image 1: TESSAN 9-in-1 Charging Station connected to a wall outlet.

2. Product Features

- **9-in-1 Charging Capability:** Features 3 AC outlets, 2 USB-C ports, and 4 USB-A ports, allowing up to 9 devices to be charged concurrently.
- **Ultra-Thin Flat Plug:** The 0.31-inch flat head design and 45-degree right-angle plug allow the unit to fit in tight spaces, such as behind furniture, without blocking adjacent outlets.
- **Integrated Surge Protection:** Equipped with overload, short-circuit, over-current, and heat protection to safeguard connected electronics.
- **Optimized USB Charging:** USB-A ports deliver up to 2.4A, and USB-C ports deliver up to 3A, providing optimal charging speeds for various devices.
- **Compact and Portable Design:** Utilizes an upgraded GaN III chip for a smaller, lightweight form factor, making it suitable for home, office, or travel.
- **Non-Slip Base:** Features four rubber feet on the base to ensure stability on various surfaces.



Image 2: The charging station providing power to multiple devices, demonstrating its space-saving design.



Image 3: Comparison showing how the charging station helps organize a desk by consolidating multiple chargers.



Image 4: Illustration of the ultra-thin flat plug design, allowing it to fit behind furniture.

3. Setup Instructions

1. Unpack the TESSAN 9-in-1 Charging Station from its packaging.
2. Place the charging station on a stable, flat surface.
3. Plug the integrated 5-foot flat extension cord into a standard 3-prong AC wall outlet. Ensure the outlet is easily accessible.
4. The charging station is now ready for use.

4. Operating Instructions

The TESSAN 9-in-1 Charging Station offers multiple port types for various devices:

- **AC Outlets:** Plug devices requiring standard AC power (e.g., laptops, monitors, small appliances) into the three AC outlets located on the sides of the tower.
- **USB-A Ports:** Connect devices compatible with USB-A charging cables (e.g., older smartphones, earphones,

power banks) to any of the four USB-A ports. These ports provide up to 2.4A.

- **USB-C Ports:** Connect devices compatible with USB-C charging cables (e.g., modern smartphones, tablets, some laptops) to either of the two USB-C ports. These ports provide up to 3A.

The charging station automatically detects connected devices and delivers an optimal charging speed. Avoid overloading the charging station by connecting devices that exceed its total wattage capacity (30W).



Image 5: Compatibility chart illustrating different device types for each port.

5. Safety Information

The TESSAN 9-in-1 Charging Station is designed with multiple safety features to protect your devices and ensure safe operation:

- **Surge Protection:** Protects connected devices from power surges and voltage spikes.
- **Overload Protection:** Automatically shuts off power if the total connected load exceeds the maximum wattage (30W) to prevent damage.
- **Short-Circuit Protection:** Guards against damage from short circuits.

- **Over-Current Protection:** Prevents excessive current flow to devices.
- **Heat Resistance:** Constructed with materials designed to withstand heat.

Important Safety Precautions:

- Always ensure the charging station is used in a dry environment. Do not expose it to water or excessive humidity.
- Do not disassemble or modify the device.
- Keep out of reach of children.
- Do not exceed the maximum rated power of 30W.

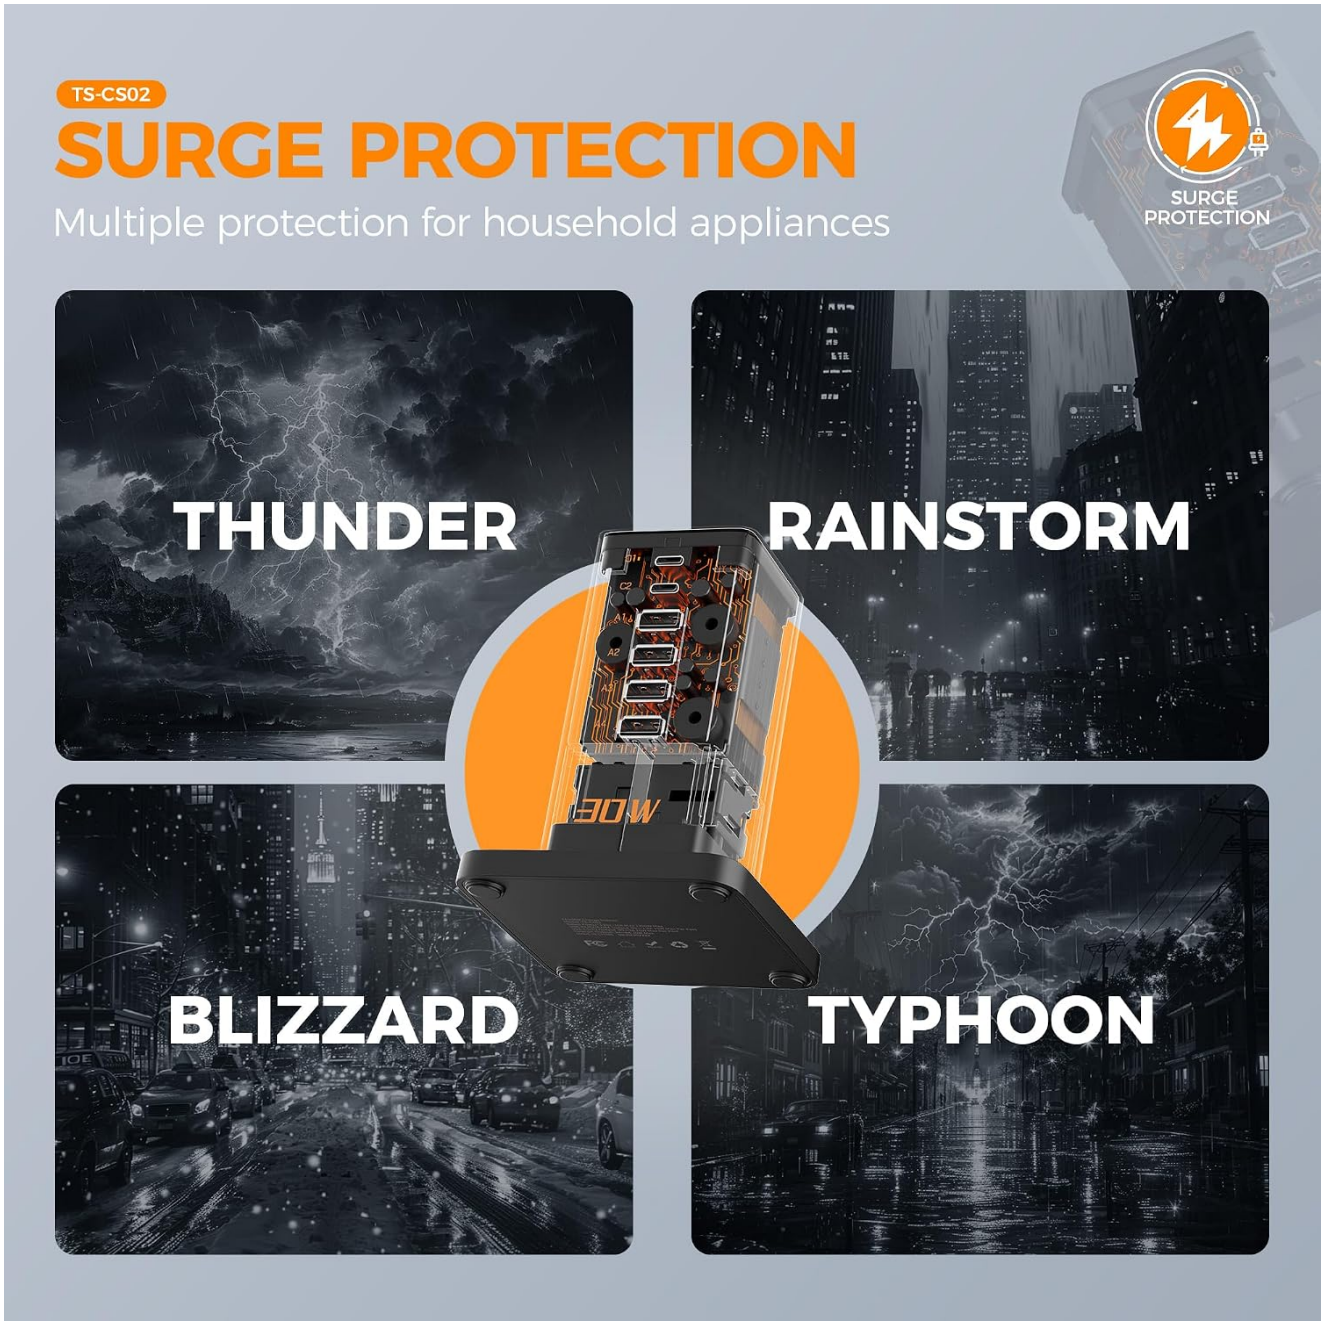


Image 6: Visual representation of the charging station's surge protection capabilities.

6. Specifications

Feature	Detail

Model Number	TS-CS02
AC Outlets	3
USB-A Ports	4 (2.4A each)
USB-C Ports	2 (3A each)
Total USB Ports	6
Total Wattage	30 watts
Extension Cord Length	5 feet
Plug Type	Type B - 3 pin (North American)
Special Features	Flat extension cord, Tower design, Surge protection, Compact size with GaN III chip
Item Weight	12.3 ounces
Dimensions (Package)	5.67 x 4.53 x 3.58 inches

7. Troubleshooting

- **Device not charging:**
  - Ensure the charging station is securely plugged into a live wall outlet.
  - Verify that the device's charging cable is properly connected to both the device and the charging station.
  - Check if the device itself is functioning correctly.
  - Try a different port or cable to rule out a faulty connection.
- **Slow charging:**
  - Ensure you are using appropriate cables for fast charging (e.g., USB-C to USB-C for compatible devices).
  - Verify that the device supports the charging speed provided by the port (USB-A 2.4A, USB-C 3A).
  - Avoid charging too many high-power devices simultaneously, as this can distribute the available wattage.
- **Charging station feels warm:**
  - It is normal for the charging station to feel slightly warm during operation. If it becomes excessively hot or emits smoke/odor, immediately unplug it and discontinue use.

8. Maintenance

- To clean the charging station, unplug it from the wall outlet and wipe it with a dry, soft cloth.
- Do not use liquid cleaners or abrasive materials.
- Store the charging station in a cool, dry place when not in use.
- Regularly inspect the cord and plug for any signs of damage.



Image 7: The non-slip rubber feet on the base of the charging station.

9. Warranty and Support

For warranty information, technical support, or any inquiries regarding your TESSAN 9-in-1 Charging Station (Model TS-CS02), please contact TESSAN customer service. Refer to the product packaging or the official TESSAN website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CYZRK967

More documents and user manuals: **https://manuals.plus/**