Larex B0CZ3TN8HZ

Larex Electric Baby Swing and Bottle Warmer Instruction Manual

Model: B0CZ3TN8HZ

1. Important Safety Information

Please read all instructions carefully before assembling and using the Larex Electric Baby Swing and Bottle Warmer. Failure to follow these instructions could result in serious injury or death. Keep this manual for future reference.

- Always supervise your child when using the baby swing.
- Do not use the baby swing if any components are damaged or missing.
- Ensure the baby swing is placed on a flat, stable surface.
- Do not use the bottle warmer without water.
- Always check the temperature of warmed milk or food before feeding your baby.
- Keep electrical cords out of reach of children.

2. Product Overview

The Larex Electric Baby Swing and Bottle Warmer is designed to provide comfort for infants and convenience for parents. This combined unit features a multi-speed baby swing and an 8-in-1 multi-function bottle warmer.

2.1 Baby Swing Features

- 5 natural swing speeds to soothe your baby.
- Touch panel and remote control for easy operation.
- Preset lullabies and timer settings (8, 15, or 30 minutes).
- Includes a sunshade with a bug shield for outdoor use.

2.2 Bottle Warmer Features

- **8-in-1 Multi-function:** Fast Warming, 24H Thermostat System, Thawing, Food Heating, Deep Cleaning (Steam Sterilization), Memory function, Timer, and Temperature setting.
- Fast warming breastmilk and formula in 2.5-7 minutes.
- 24H Thermostat System maintains milk at a preset temperature for up to 24 hours.

- Gently thaws frozen breastmilk.
- Heats baby food.
- Steam sterilization at 212°F for bottles and nipples.
- Compatible with various bottle brands.

3. Setup and Assembly

The Larex Electric Baby Swing and Bottle Warmer requires some assembly. Follow these steps carefully.

3.1 Baby Swing Assembly

1. Unpack all components and ensure all parts are present.
2. Attach the swing seat to the base unit. Ensure it clicks securely into place.
3. Insert the head support and body insert into the swing seat.
4. Secure the safety harness.
5. Attach the sunshade and bug shield if desired.



Image: Baby in Larex Electric Baby Swing, illustrating the adjustable speed modes and angles.



Image: Baby in Larex Electric Baby Swing, highlighting the Bluetooth music player functionality.

3.2 Bottle Warmer Initial Setup

1. Place the anti-scalding basket inside the warmer chamber.
2. Ensure the unit is placed on a stable, non-slip surface.
3. Plug the power cord into a suitable electrical outlet.



Image: Larex Bottle Warmer with icons representing its 8-in-1 multi-functions.

4. Operating Instructions

4.1 Using the Baby Swing

1. Place your baby securely in the swing seat and fasten the harness.
2. Use the touch panel on the base or the remote control to power on the swing.

3. Select one of the 5 swing speeds using the speed control buttons.
4. Choose a timer setting (8, 15, or 30 minutes) for automatic shut-off.
5. Activate preset lullabies or connect via Bluetooth for music playback.



Image: Detailed view of the Larex Baby Swing's control panel on the base and the accompanying remote control.

4.2 Using the Bottle Warmer

The bottle warmer offers multiple functions for various needs.

4.2.1 Fast Warming (Milk/Formula)

1. Place the bottle with milk/formula into the anti-scalding basket inside the warmer.
2. Add 80ml of water to the warmer chamber (use the provided measuring cup).
3. Press the power button, then select the 'Fast' function.
4. The warming process takes approximately 2.5-7 minutes depending on the volume and initial temperature.
5. Once complete, carefully remove the bottle. Always test the milk temperature on your wrist before feeding.



Image: Larex Bottle Warmer actively warming a baby bottle, indicating the fast warming function.

4.2.2 24H Thermostat System (Keep Warm)

1. Place the bottle in the warmer with the anti-scalding basket.
2. Add water to the chamber.
3. Select the '24H' function.
4. Adjust the desired temperature using the up/down arrows. The warmer will maintain this temperature for up to 24 hours.



Image: Larex Bottle Warmer on a bedside table, demonstrating the 24H Keep Warm function for night feedings.

4.2.3 Food Heating

1. Place baby food in a suitable container within the anti-scalding basket.
2. Add water to the warmer chamber.
3. Select the 'Food' function.
4. Adjust the desired temperature.
5. Carefully remove and stir food to ensure even heating before serving.

4.2.4 Thawing Frozen Milk

1. Place frozen breastmilk in a sealed container within the anti-scalding basket.
2. Add water to the warmer chamber.
3. Select the '24H' function and set a lower temperature for gentle thawing.
4. Monitor the thawing process. Once thawed, milk should be used immediately or stored appropriately.

4.2.5 Steam Sterilization

1. Place clean bottles, nipples, or pacifiers into the anti-scalding basket.
2. Add 80ml of water to the warmer chamber.
3. Select the 'Sterilize' function. The warmer will generate 212°F steam to deep clean items.
4. Allow items to cool before handling.



Image: Larex Bottle Warmer's digital display showing options for timer and temperature settings.

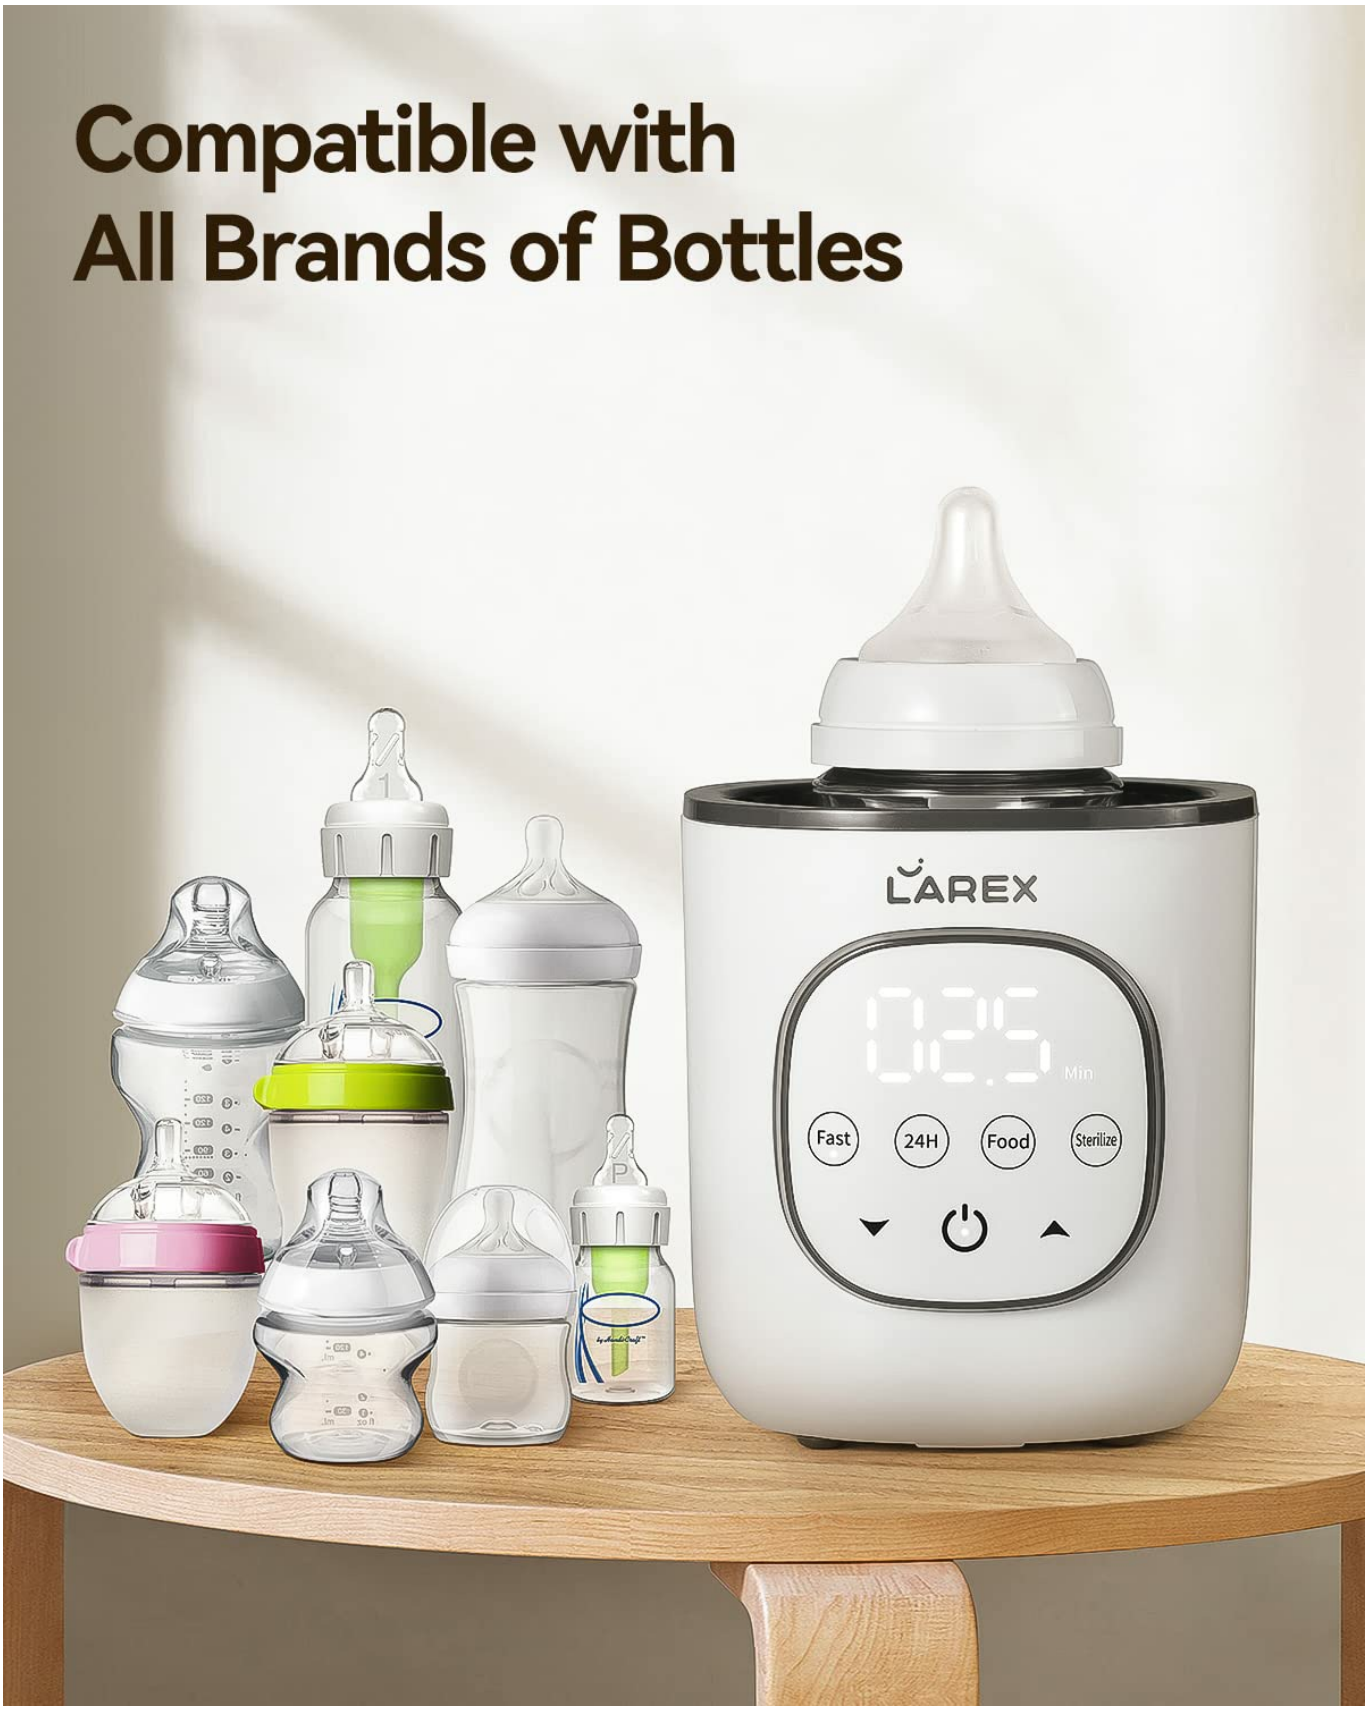


Image: Larex Bottle Warmer shown alongside different brands and sizes of baby bottles, demonstrating its universal compatibility.

5. Care and Maintenance

Regular cleaning ensures optimal performance and hygiene.

5.1 Cleaning the Baby Swing

- Wipe down the frame and plastic parts with a damp cloth and mild soap.

- The fabric seat cover can be removed and machine washed on a gentle cycle with cold water. Air dry.
- Do not use abrasive cleaners or solvents.

5.2 Cleaning the Bottle Warmer

- Unplug the unit and allow it to cool completely before cleaning.
- Empty any remaining water from the chamber.
- Wipe the interior and exterior with a damp cloth. For stubborn mineral deposits, use a descaling solution or a mixture of water and white vinegar.
- The anti-scalding basket can be washed with warm soapy water.
- Do not immerse the main unit in water.

6. Troubleshooting

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Baby swing does not turn on.	Not plugged in; power button not pressed.	Ensure power cord is securely plugged in. Press the power button on the unit or remote.
Swing motion is weak or inconsistent.	Low power; obstruction; uneven surface.	Check power connection. Ensure no objects are obstructing the swing. Place on a flat, level surface.
Bottle warmer not heating.	No water; incorrect function selected; unit not powered on.	Add appropriate amount of water. Select the correct heating function. Ensure unit is plugged in and powered on.
Mineral deposits in warmer chamber.	Hard water usage.	Descale regularly using a descaling solution or white vinegar.

7. Product Specifications

Feature	Detail
Brand	Larex
Model	B0CZ3TN8HZ
Color	Grey
Material Type	Polypropylene
Assembly Required	Yes
Swing Speeds	5
Swing Timer Settings	8, 15, 30 minutes
Bottle Warmer Functions	Fast Warming, 24H Thermostat, Thawing, Food Heating, Steam Sterilization
Fast Warming Time	2.5-7 minutes (approx.)

Feature	Detail
Sterilization Temperature	212°F (100°C)
Portability	Yes

8. Warranty and Support

Larex products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Larex website.
Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question