BUNUD BUN-U308

BUNUD External DVD Drive USB-C Instruction Manual

Model: BUN-U308

Brand: BUNUD

1. Introduction and Overview

This manual provides detailed instructions for the setup, operation, and maintenance of your BUNUD External DVD Drive USB-C. This versatile 5-in-1 device functions as an external DVD burner, CD/DVD writer/player, and features integrated SD/TF card slots and two USB 3.0 ports for enhanced connectivity. Designed for portability and wide compatibility, it offers high-speed data transfer and reliable performance across various operating systems.



Figure 1: BUNUD External DVD Drive USB-C and its accessories.

2. Package Contents

Please verify that all items listed below are included in your package:

- 1 x BUNUD External DVD Drive
- 1 x User Manual (this document)
- 1 x USB 3.0 to USB-C/USB-A Power Cable

3. Setup Instructions

The BUNUD External DVD Drive is designed for plug-and-play convenience, requiring no external drivers or power supply for most standard operations.

1. **Connect the Drive:** Locate the integrated USB 3.0 cable on the external DVD drive. Connect the USB-A or USB-C end of this cable to an available USB 3.0 or USB-C port on your laptop or desktop computer.
2. **System Recognition:** Your operating system (Windows, Mac OS, Linux) should automatically detect and recognize the drive. A notification may appear indicating that the device is ready for use.
3. **Optional Power (if needed):** In rare cases, if your computer's USB port does not provide sufficient power, you may need to connect the additional micro USB power cable (if included with your specific model) to a separate USB power source (e.g., another USB port on your computer or a USB wall adapter).



Figure 2: Connecting the drive to your computer.

4. Operating Instructions

4.1 Inserting and Ejecting Discs

1. **To Insert:** Press the eject button on the front of the drive. The disc tray will slide out. Carefully place a CD or DVD onto the tray, ensuring it is centered on the spindle. Gently push the tray back into the drive until it clicks into place.
2. **To Eject:** Press the eject button again. Alternatively, you can eject the disc through your operating system's file explorer (right-click on the drive icon and select "Eject").
3. **Forced Ejection (Emergency):** In case of power failure or if the eject button does not respond, locate the small pinhole next to the eject button. Insert a straightened paperclip into the pinhole and gently push until the tray releases.



Figure 3: Disc insertion and ejection mechanism.

4.2 Using SD/TF Card Slots and USB Ports

The drive features an independent SD/TF card slot and two USB 3.0 ports, allowing you to transfer photos, videos, or music directly from SD/TF cards, USB hard drives, or flash drives to your computer.

- **SD/TF Card Usage:** Insert your SD or TF card into the corresponding slot. The card will appear as a removable drive in your computer's file explorer.
- **USB Port Usage:** Connect your USB devices (e.g., flash drives, external hard drives) to the USB 3.0 ports on the drive. These devices will also be recognized by your computer.
- **Note:** The SD and TF card slots cannot be used simultaneously.

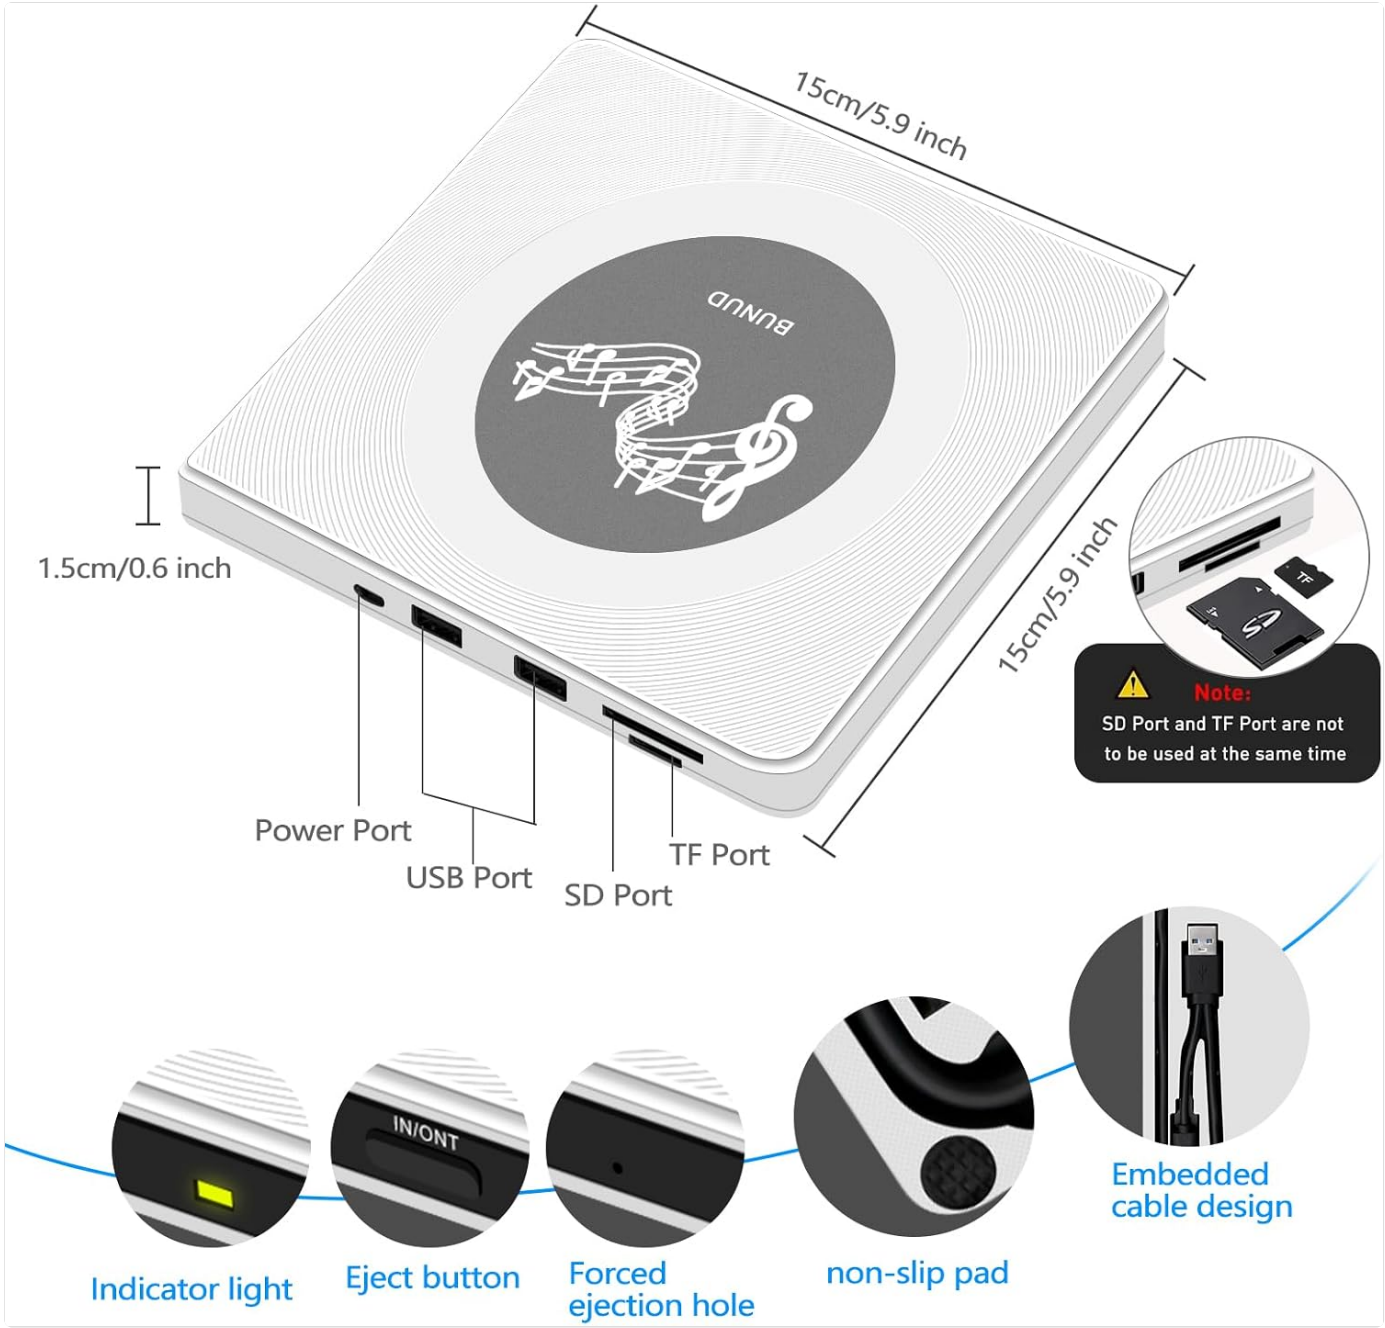


Figure 4: Side ports and embedded cable design.

5. Key Features

- **5-in-1 Functionality:** Combines an external DVD drive with an independent SD/TF card slot, 2 USB 3.0 ports, and a micro USB port, offering comprehensive connectivity.
- **Plug and Play:** Equipped with USB 3.0 and Type-C connectors, the drive is automatically recognized by your computer without the need for external drivers or power supply.
- **USB 3.0 High-Speed Transmission:** Utilizes advanced USB 3.0 technology for data transfer rates up to 5 Gigabits/S, ensuring faster and more stable performance compared to USB 2.0.
- **Wide Compatibility:** Supports Windows 11/10/8.1/7/XP, Linux, and all versions of Mac OS. Compatible with MacBook Pro/Air, iMac, Mac Mini, Laptops, and Desktop PCs.**Note:** This CD drive is not compatible with iPad/Tablet/Projector/TV/Chrome OS/Car/Smart Phone.
- **Ultra-Thin & Portable Design:** With a thickness of only 0.6 inches and a weight of 0.88lb, its compact design and embedded cable make it ideal for home, office, and travel. Features a convenient pop-up button and disc tray.



Figure 5: Slim and portable design with skid-proof features.



Figure 6: Wide compatibility overview.

6. Technical Specifications

Feature	Specification
Brand	BUNUD
Model Number	BUN-U308
Hardware Platform	PC, Laptop, MAC
Operating System Compatibility	Linux, Windows 7/10/11/XP, Mac OS
Item Weight	14.9 ounces (approx. 0.42 kg)
Product Dimensions (LxWxH)	5.9 x 5.9 x 0.6 inches (approx. 15 x 15 x 1.5 cm)
Color	White
Hardware Interface	USB 3.0 Type C

Feature	Specification
Optical Storage Write Speed	Max 24x CD / 8x DVD
Special Feature	5 IN 1 design (DVD drive, SD/TF card reader, 2 USB ports)

7. Troubleshooting

If you encounter issues with your BUNUD External DVD Drive, please refer to the following common troubleshooting steps:

- **Drive Not Recognized:**
  - Ensure the USB cable is securely connected to both the drive and your computer's USB 3.0 or USB-C port.
  - Try connecting to a different USB port on your computer.
  - If available, use the additional micro USB power cable to provide supplementary power.
  - Restart your computer.
- **Disc Not Reading/Writing:**
  - Ensure the disc is clean and free of scratches or smudges.
  - Verify the disc type is supported (CD-ROM, CD-R, CD-RW, DVD-ROM, DVD-R, DVD-RW). Blu-ray discs are not supported by this model.
  - Try a different disc to rule out a faulty disc.
  - Ensure you have appropriate software installed on your computer for playing or burning discs (e.g., VLC Media Player for playback, ImgBurn for burning).
- **SD/TF Card or USB Device Not Detected:**
  - Ensure the card/device is fully inserted into the correct slot/port.
  - Remember that SD and TF cards cannot be used simultaneously.
  - Try connecting the card/device directly to your computer's port to confirm it is functional.
- **Slow Data Transfer:**
  - Ensure you are connected to a USB 3.0 or USB-C port on your computer for optimal speeds. Connecting to a USB 2.0 port will result in slower transfer rates.
  - Close any unnecessary applications running in the background that might be consuming system resources.

8. Maintenance

To ensure the longevity and optimal performance of your BUNUD External DVD Drive, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the exterior of the drive. Do not use liquid cleaners or abrasive materials. For the optical lens, use a specialized CD/DVD lens cleaning kit.
- **Storage:** Store the drive in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. When not in use, keep the disc tray closed to prevent dust accumulation.
- **Handling:** Handle the drive gently. Avoid dropping it or subjecting it to strong impacts, which can damage internal components.
- **Cable Care:** Do not bend or crimp the integrated USB cable excessively. Store it neatly to prevent damage.

9. Warranty and Support

BUNUD provides reliable after-sales service and a **1-year quality guarantee** for this external CD DVD drive burner.
If you have any questions or require assistance with your product, please contact BUNUD customer support. We are committed to replying and resolving your inquiries within 24 hours.

For more information and support, you can visit the official BUNUD Store:BUNUD Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I get my brand new BUNUD External CD DVD Drive (BUN-U308) to play movies on Windows 10 or Windows 11?

It sounds like your BUNUD External CD DVD Drive (Model BUN-U308) is being recognized correctly by your Windows 10 and 11 computers (appearing as Drive D), but you are missing the necessary software to...

Read full answer