TELESIN S2

TELESIN S2 POV Neck Mount Instruction Manual

Model: S2

1. Introduction

The TELESIN S2 POV Neck Mount is designed to provide a hands-free solution for capturing point-of-view footage with action cameras and compatible smartphones. Featuring a quick-release magnetic system and an optional chest strap for enhanced stability, this mount offers versatility for various activities. This manual provides detailed instructions for proper setup, operation, and maintenance of your S2 Neck Mount.

2. Product Overview and Components

The TELESIN S2 Neck Mount consists of a flexible silicone neckband with an integrated magnetic quick-release base, a camera mounting adapter, and an adjustable chest strap for additional stability.

Key Features:

- **Quick Release System:** Magnetic design allows for rapid attachment and detachment of your camera. The quick mount is compatible with other TELESIN quick-release accessories.
- **Enhanced Stability:** Includes a chest strap to minimize camera shake during active use, ensuring stable shooting.
- **Adjustable Angles:** Supports both horizontal and vertical shooting, with 45-degree up/down adjustment for multiple POV angles.
- **Comfortable Design:** Made from highly elastic and flexible silicone, providing a soft and comfortable wearing experience.
- **Durable Construction:** Features an inner stainless steel core to prevent deformation, cracking, and breakage.
- **Wide Compatibility:** Compatible with various action cameras and smartphones (with additional adapters, not included).



Figure 2.1: Overview of the TELESIN S2 POV Neck Mount with its magnetic quick-release mechanism and an action camera attached. The image also shows a user wearing the mount with the chest strap.

3. Setup Instructions

Follow these steps to properly set up your TELESIN S2 Neck Mount and attach your camera.

1. **Wear the Neck Mount:** Place the silicone collar around your neck. Ensure the magnetic base is positioned centrally on your chest.
2. **Attach Camera to Adapter:** Secure your action camera to the provided quick-release mounting adapter using the camera's standard mounting screw.
3. **Connect Camera to Neck Mount:** Align the quick-release adapter (with camera attached) with the magnetic base on the neck mount. Push until you hear a distinct "click" sound, indicating a secure magnetic lock.
4. **Secure with Chest Strap (Optional but Recommended for Stability):** If using the chest strap, attach it to the designated loops on the neck mount and adjust the buckles for a snug, comfortable fit around your torso. This minimizes movement

during dynamic activities.

Product List



Product Name:	TELESIN Quick Release U-shaped Neck Mount 2.0
Product Material:	Silicone, stainless steel, PC
Product Dimensions:	Silicone whole circle length 520mm/20.4inch
Product weight:	184g (excluding packaging)
Adaptable model:	Sports cameras, cell phones (some models need to
	be used with additional bezel, cell phone clip)
Product list:	Quick release neck *1, three claws quick release top
	cover *1, one word locking screw *1, fixed strap *1,

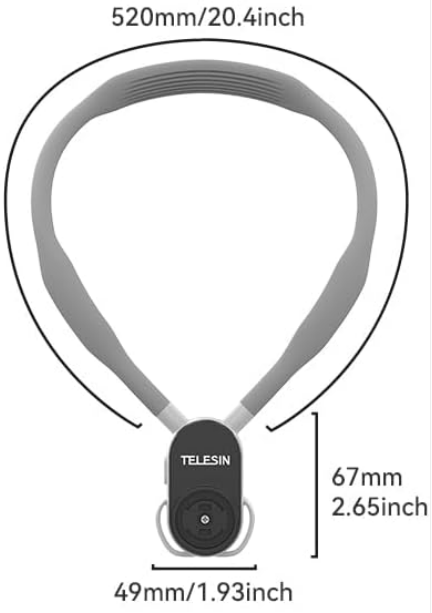


Figure 3.1: Step-by-step guide for wearing the neck mount, attaching the camera, securing it magnetically, and using the chest strap.

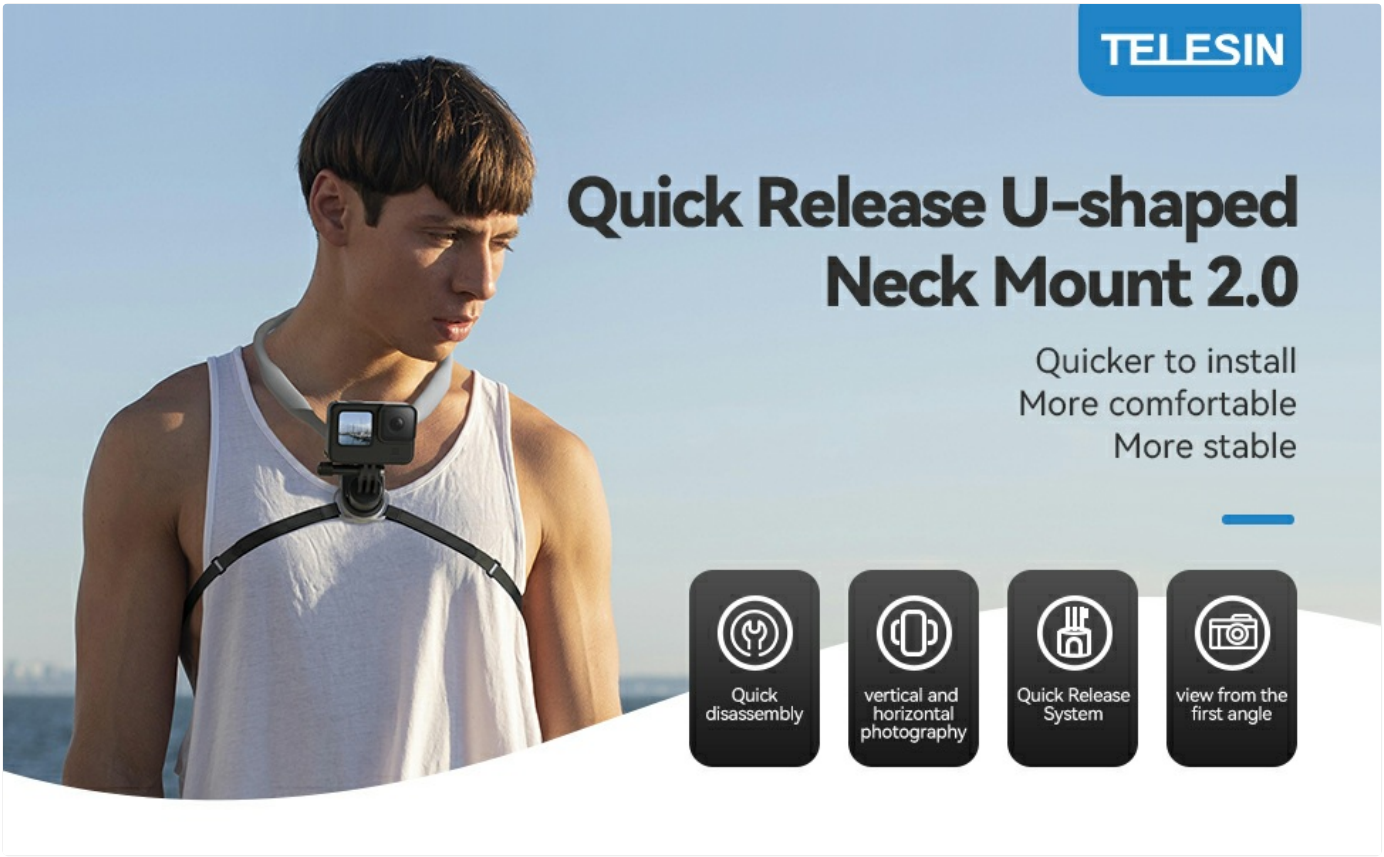


Figure 3.2: Illustration of the magnetic quick-release mechanism, highlighting the ease of attachment and detachment with an audible click.

4. Operating Instructions

Once the mount is set up, you can begin capturing footage. The S2 Neck Mount offers flexibility in camera positioning.

- **Angle Adjustment:** The camera can be rotated to achieve both horizontal and vertical shooting orientations. Additionally, the mount allows for 45-degree up and down angle adjustments to fine-tune your perspective.
- **Stability During Movement:** For activities involving significant movement, ensure the chest strap is securely fastened to minimize camera wobble and maintain stable footage.
- **Quick Release Function:** To remove the camera, simply press the release button on the magnetic base and detach the camera with its adapter.



Figure 4.1: Demonstrates the ability to adjust the camera for vertical and horizontal shooting, along with various POV perspectives.

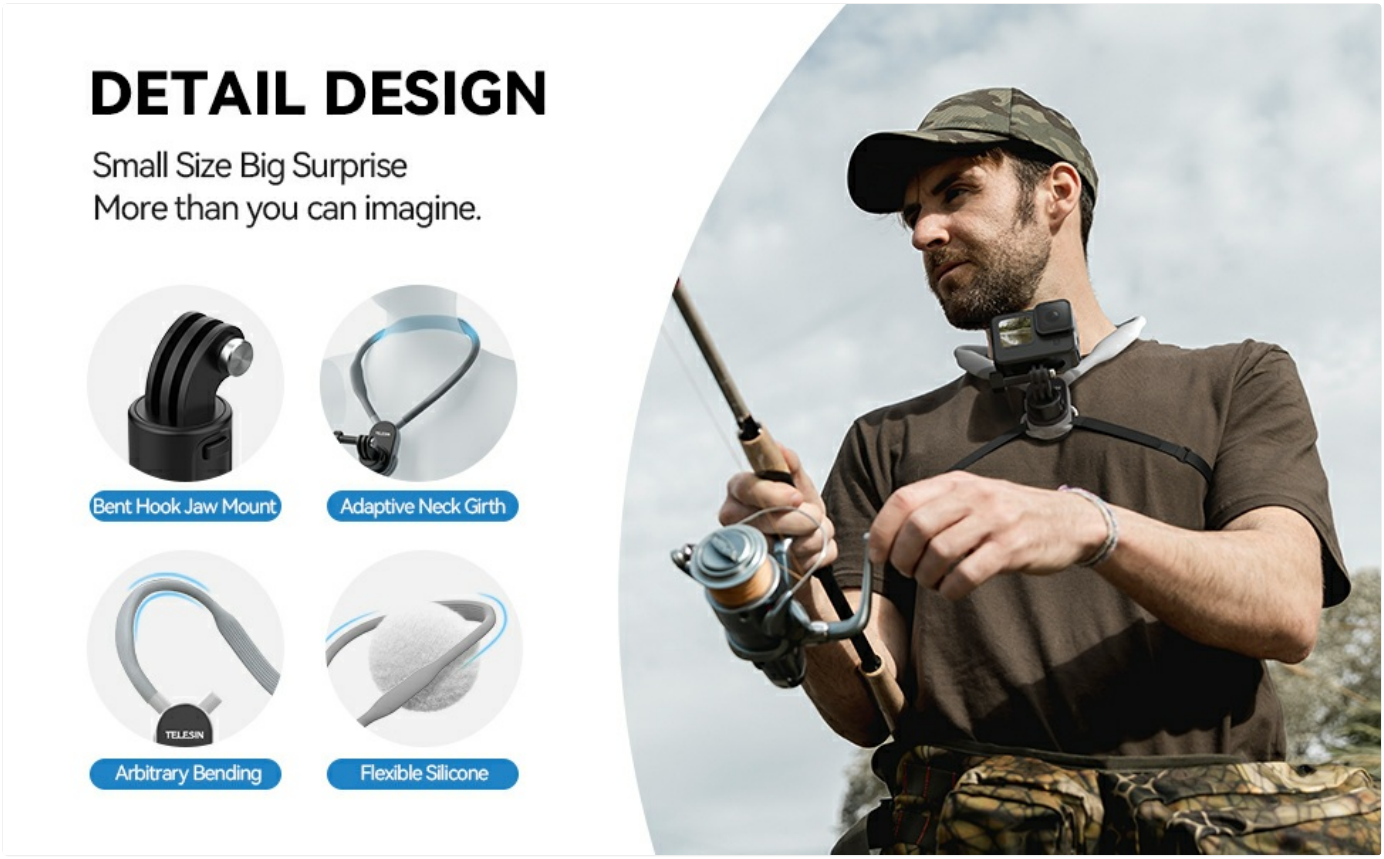


Figure 4.2: Illustrates the use of stabilizing straps to prevent shaking during strenuous activities, ensuring stable footage.

5. Maintenance

To ensure the longevity and optimal performance of your TELESIN S2 Neck Mount, follow these maintenance guidelines:

- **Cleaning:** Wipe the silicone neckband and plastic components with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** Ensure all components are completely dry before storage, especially after exposure to water or sweat.
- **Storage:** Store the mount in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check the magnetic connection and the chest strap for any signs of wear or damage. Replace components if necessary.

6. Troubleshooting

If you encounter issues with your TELESIN S2 Neck Mount, refer to the following common problems and solutions:

- **Camera Wobbles During Activity:**
  - Ensure the chest strap is properly attached and adjusted snugly.
  - Verify the camera is securely clicked into the magnetic base.
- **Difficulty Attaching/Detaching Camera:**
  - Ensure the quick-release adapter is correctly aligned with the magnetic base.
  - Press the release button firmly when detaching.
  - Check for any debris obstructing the magnetic connection.
- **Neck Mount Feels Uncomfortable:**
  - Adjust the position of the neckband. The silicone material is designed for comfort, but individual fit may vary.

- Ensure the chest strap is not too tight or too loose.

For further assistance, please contact TELESIN customer support.

7. Specifications

Feature	Detail
Product Name	TELESIN Quick Release U-shaped Neck Mount 2.0
Model Number	S2
Product Material	Silicone, Stainless Steel, PC
Neckband Length	520mm (20.47 inches)
Item Weight	184g (excluding packaging) / 9.6 ounces (product)
Mounting Type	Neck Mount, Magnetic Quick Release
Special Features	Comfortable Wearing, Bendable, Durable, Hands-Free POV, Magnetic Mount, One-Step Quick Release

Product List



Product Name:	TELESIN Quick Release U-shaped Neck Mount 2.0
Product Material:	Silicone, stainless steel, PC
Product Dimensions:	Silicone whole circle length 520mm/20.4inch
Product weight:	184g (excluding packaging)
Adaptable model:	Sports cameras, cell phones (some models need to
	be used with additional bezel, cell phone clip)
Product list:	Quick release neck *1, three claws quick release top
	cover *1, one word locking screw *1, fixed strap *1,

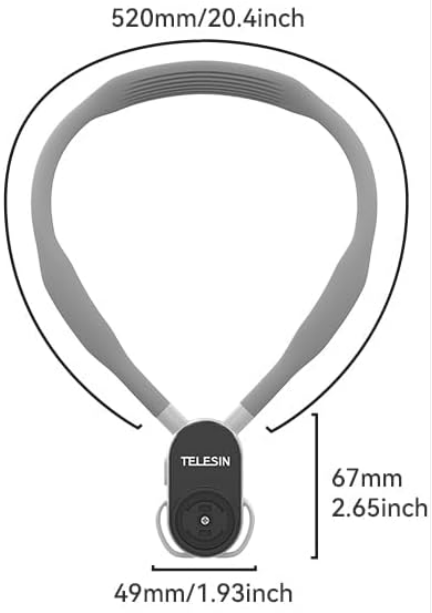


Figure 7.1: Detailed product list and dimensional specifications of the TELESIN S2 Neck Mount.

8. Compatibility

The TELESIN S2 Neck Mount is compatible with a wide range of action cameras and can also be used with smartphones (additional adapters required, not included).

Compatible Action Cameras:

- GoPro: Max, Hero 13, 12, 11, 10, 9, 8, 7, 6, 5 Black, Hero 4, 3+, Fusion, Session
- DJI: Action 5 Pro, 3, 4, Osmo Nano, Osmo 360, Osmo Pocket 3
- Insta360: Ace Pro 2, X3, X4, X5, Go3

- Other Wearable Cameras: AKASO, Dragon Touch, APEMAN, Crosstour, XiaoYi, Apexcam, VEMONT, AKAIRIO, etc.

Compatible Smartphones:

iOS iPhone, Samsung Android, and other smartphones (requires an extra phone holder and 1/4 adapter, which are NOT included in the package).

9. Safety Information

Please read and follow these safety precautions to prevent injury or damage to the product:

- Do not use the neck mount in situations where it could become entangled or cause a choking hazard.
- Ensure the camera is securely attached before engaging in any activity.
- Avoid exposing the product to extreme forces or sharp objects that could damage the silicone or internal components.
- Keep out of reach of small children.

10. Warranty and Support

TELESIN products are designed for quality and durability. For warranty information or technical support, please visit the official TELESIN website or contact their customer service department. Please retain your proof of purchase for any warranty claims.
Official Website: www.telesin.cn

© 2025 TELESIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question