topzee JS-CD-MZJ-1

TOPZEE Masticating Juicer Machines User Manual

Model: JS-CD-MZJ-1

Introduction

Thank you for choosing the TOPZEE Masticating Juicer Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new juicer. Please read all instructions carefully before first use and retain this manual for future reference.



The TOPZEE Masticating Juicer Machine, designed for efficient juice extraction.

Setup and Assembly

Before assembling, ensure all parts are clean.

1. Install the juicer bowl onto the motor base, ensuring it clicks securely into place.
2. Insert the spiral auger downward into the juicer bowl. This bladeless design optimizes juice extraction and preserves nutrients.

3. Install the filter screen over the spiral auger. The detachable bidirectional filter screen is designed for efficient separation and easy cleaning.
4. Place the feeding trough on top of the assembled parts.
5. Ensure the juice cup and pulp container are correctly positioned under their respective spouts before operation.



Visual guide for assembling the juicer components.

Important Note: Your juicer comes with a black silicone piece already installed under the juicing bowl. Any additional red silicone pieces provided are spares and do not need to be installed unless the original is damaged or lost.



The newly designed bladeless spiral auger for efficient and nutrient-preserving juicing.

Operating Instructions

The TOPZEE Masticating Juicer operates at a slow speed of 65 RPM to gently extract juice, preserving vitamins, enzymes, and minerals.

1. Prepare your fruits and vegetables by washing them thoroughly. For best results, cut larger items into smaller pieces that fit easily into the feeding trough.
2. Ensure the juicer is properly assembled and the juice cup and pulp container are in place.
3. Plug in the juicer and turn the control knob to the "START" position.
4. Slowly feed the prepared ingredients into the feeding trough. Use the pusher only if necessary to guide ingredients down.
5. Observe the juice flowing into the juice cup and the pulp being expelled into the pulp container.

6. When finished, turn the control knob to the "OFF" position and unplug the juicer.



Prepare ingredients by cutting them into suitable sizes for the juicer.

Reverse Function

In case of blockage during the juicing process, turn the control knob to the "REV" (Reverse) position. This will reverse the auger's rotation, helping to dislodge any stuck ingredients. Once cleared, return the knob to "OFF" and then "START" to resume juicing.




The control knob features a "REV" setting to clear blockages.

Recommended Ingredients

This juicer is suitable for a wide variety of fruits and vegetables, including but not limited to:

- **Fruits:** Apples, Kiwifruit, Oranges, Lemons, Pineapples, Watermelons, Grapes, Pears.
- **Vegetables:** Celery, Carrots, Cucumbers, Kale, Lettuce, Tomatoes, Red Cabbage.

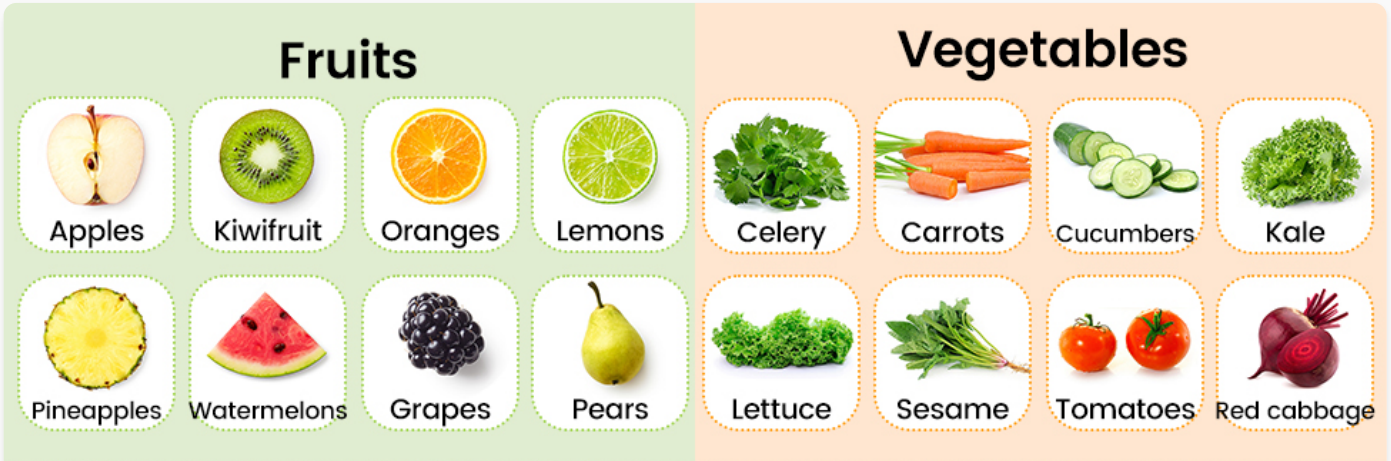



A selection of fruits and vegetables ideal for juicing with your machine.

Product Demonstration Video

Your browser does not support the video tag.

Official TOPZEE video demonstrating the features and operation of the Masticating Juicer Machine, including assembly, juicing process, and residue separation.

Care and Maintenance

Regular cleaning ensures the longevity and optimal performance of your juicer. The detachable design makes cleaning simple.

1. Unplug the juicer from the power outlet before disassembling or cleaning.
2. Disassemble all removable parts: the feeding trough, filter screen, spiral auger, and juicer bowl.
3. Rinse all detachable parts under running water. Use the provided cleaning brush to remove any pulp residue from the filter screen and other components.
4. Wash parts with warm, soapy water. The manufacturer recommends hand washing only.
5. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
6. Allow all parts to dry completely before reassembling or storing the juicer.



The filter screen is easy to disassemble and clean under running water.



Key features include easy disassembly, simple cleaning, and minimal residue.

Troubleshooting

If you encounter any issues with your TOPZEE Masticating Juicer, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not properly plugged in; parts not assembled correctly; safety lock not engaged.	Ensure the power cord is securely plugged into a working outlet. Check that all components (bowl, auger, filter, lid) are correctly assembled and locked into place.
Juicer stops during operation or gets clogged.	Too much produce fed at once; hard ingredients causing blockage.	Turn the control knob to "REV" (Reverse) for a few seconds to clear the blockage, then return to "OFF" and "START". Cut hard or fibrous ingredients into smaller pieces. Feed ingredients slowly.
Excessive pulp in juice.	Filter screen is clogged or damaged.	Clean the filter screen thoroughly. Ensure it is free of any residue. If damaged, contact customer support for a replacement.
Low juice yield.	Ingredients not suitable for juicing; improper feeding.	Ensure you are using fresh, ripe produce. Feed ingredients slowly and allow the juicer to process them completely before adding more.

Product Specifications

- **Brand:** topzee

- **Model Name:** Masticating Juicer Machines
- **Item Model Number:** JS-CD-MZJ-1
- **Color:** Silver
- **Product Dimensions:** 5.4"D x 5.4"W x 15.3"H
- **Item Weight:** 6.01 pounds
- **Maximum Power:** 120 Watts
- **Power Source:** Corded Electric
- **Blade Material:** Acrylonitrile Butadiene Styrene
- **Voltage:** 120 Volts
- **Controller Type:** Knob
- **Special Feature:** Easy to Clean
- **Product Care Instructions:** Hand Wash Only

Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please refer to the warranty card included with your product packaging or visit the official TOPZEE website. You can also contact TOPZEE customer service directly through their contact channels listed on their website.
For additional resources, visit the TOPZEE Store on Amazon.

© 2025 TOPZEE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question