Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UGREEN 45012

UGREEN 2.4G Ergonomic Wireless Mouse User Manual

Model: 45012

1. Product Overview

The UGREEN 2.4G Ergonomic Wireless Mouse is designed for comfortable and precise control across various devices. It features 2.4G wireless connectivity, adjustable DPI settings, and an ergonomic design to reduce wrist fatigue during extended use.



Image: The UGREEN 2.4G Ergonomic Wireless Mouse in black, shown alongside its compact USB receiver.

2. Package Contents

- UGREEN 2.4G Ergonomic Wireless Mouse
- USB 2.4G Receiver (stored inside the mouse)
- User Manual

Note: 2 AAA batteries are required and are not included in the package.

3. Setup Instructions

3.1. Battery Installation

1. Locate the battery compartment cover on the bottom of the mouse.
2. Slide the cover open.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: The underside of the mouse with the battery cover removed, showing the slots for two AAA batteries and the storage slot for the USB receiver.

3.2. Connecting the USB Receiver

1. Open the battery compartment cover on the bottom of the mouse.
2. Carefully remove the USB 2.4G receiver from its storage slot.
3. Plug the USB receiver into an available USB port on your computer, laptop, or tablet.
4. Turn on the mouse using the On/Off switch located on the bottom of the mouse.

5. The mouse is plug-and-play and should be automatically recognized by your operating system.



Image: An illustration demonstrating how to locate and remove the USB receiver from its dedicated storage slot next to the battery compartment on the mouse's underside.

The 2.4G wireless technology provides a stable connection with a range of up to 10 meters (33 feet).

4. Operating Instructions

4.1. Button Functions



Image: A detailed diagram illustrating the various buttons on the UGREEN wireless mouse, including Left Button, Right Button, Scroll Wheel, Forward Button, Back Button, and DPI Switch Button.

- **Left Button:** Standard click function.
- **Right Button:** Context menu function.
- **Scroll Wheel:** Scroll up/down, middle click.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Back Button:** Navigates backward in web browsers or file explorers.
- **DPI Switch Button:** Adjusts cursor sensitivity.

4.2. Adjusting DPI Sensitivity

The mouse features three adjustable DPI levels for precise cursor control:

- **800 DPI:** For slower, more precise movements.
- **1200 DPI:** Standard sensitivity for general use.
- **1600 DPI:** Faster cursor movement for efficiency.

To change the DPI setting, press the DPI Switch Button located on the top of the mouse, below the scroll wheel. The LED indicator

will flash to confirm the current DPI level:

- One flash: 800 DPI
- Two flashes: 1200 DPI
- Three flashes: 1600 DPI



Image: A visual guide demonstrating the DPI adjustment process, showing the DPI button and the corresponding LED flashes for 800, 1200, and 1600 DPI settings.

4.3. Ergonomic Design and Comfort

The mouse is designed to fit comfortably in the palm of your hand, reducing wrist strain during prolonged use. It is suitable for medium to large hand sizes.



Image: A hand comfortably resting on the UGREEN ergonomic mouse, highlighting its contoured shape designed to reduce stress.



Image: A guide illustrating hand sizes (Medium: 17-19cm, Large: >19cm) and how the mouse is comfortable for these dimensions.

4.4. Surface Compatibility

The mouse can be used on various surfaces without a mouse pad, including paper, fabric, and resin. However, a mouse pad is recommended for transparent glass surfaces to ensure optimal tracking.



Image: The mouse positioned on a stack of different materials, including a mouse pad, paper, wood, and metal, demonstrating its versatility across various surfaces.

5. Maintenance

5.1. Extended Battery Life

The mouse is designed for extended battery life, lasting up to 12 months with two AAA batteries (not included). To conserve power, the mouse will automatically enter sleep mode after 10 minutes of inactivity. Simply move the mouse to wake it up.

5.2. Low Battery Reminder

When the battery level is low, the red LED indicator on the mouse will flash for 5 seconds and then turn off, signaling that the batteries need to be replaced.

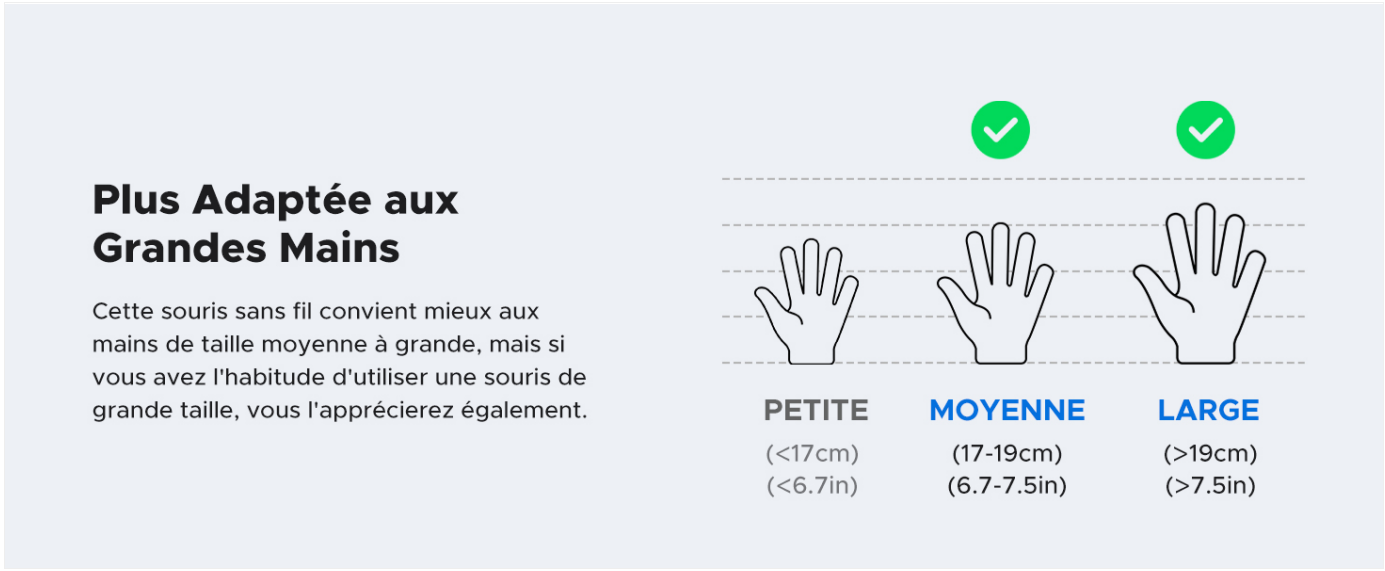


Image: The UGREEN mouse on a laptop, with a red LED flashing on its surface, indicating a low battery warning.

6. Troubleshooting

6.1. Why does my mouse sometimes freeze?

Answer:

1. Please check if the receiver is connected to a USB hub. The video signal from the hub and the mouse receiver use the same frequency band, which can cause interference.
2. The mouse's USB receiver should not be on the same row as a Bluetooth adapter, but should be separated by a USB port. Otherwise, the Bluetooth adapter could interfere with the mouse signal and cause delays.



Image: A visual troubleshooting guide addressing why the mouse might freeze, suggesting checking USB receiver connection to a hub and avoiding proximity to Bluetooth adapters.

6.2. Why can't I find the mouse receiver when I open the box?

Answer: The USB receiver is stored inside the mouse, next to the battery compartment. After opening the battery cover on the bottom of the mouse, you can see the receiver with the UGREEN logo.

Question

Pourquoi ma souris se bloque-t-elle parfois ?

Réponse

① Veuillez vérifier si le récepteur est connecté au port USB du hub. Le signal vidéo du hub et du récepteur de la souris utilise la même bande de fréquences, ce qui peut provoquer des interférences.

② Le récepteur USB de la souris ne doit pas être sur la même rangée que l'adaptateur Bluetooth, mais doit être séparé par un port USB. Sinon, l'adaptateur Bluetooth pourrait interférer avec le signal de la souris et entraîner des retards.

Image: An illustration showing the USB receiver stored within the battery compartment of the mouse, indicating its hidden location for transport and storage.

7. Specifications

Brand	UGREEN
Model Number	45012
Color	Black
Connectivity Technology	2.4G Wireless
Movement Detection Technology	Optical
DPI Levels	800, 1200, 1600 (Adjustable)
Number of Buttons	5
Hand Orientation	Ambidextrous (Ergonomic for right-hand use)
Special Features	Ergonomic Design, Wireless, Auto-Sleep, Low Battery Indicator
Compatible Operating Systems	Windows 7/8.1/10/11, macOS 10.15 and above, Linux, Chrome OS, Android 5.0 and above
Compatible Devices	PC, MacBook, Laptop, Tablet, Smartphone (with USB-A port)
Power Source	2 x AAA Batteries (not included)
Battery Life	Up to 12 months

8. Warranty and Support

UGREEN products come with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official UGREEN website.
If you encounter any issues or have questions regarding your UGREEN 2.4G Ergonomic Wireless Mouse, please contact UGREEN customer support through their official website or the retailer where you purchased the product. Please have your model number (45012) and purchase information ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CZCVT6DY

More documents and user manuals: **https://manuals.plus/**