Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl AC DC Adapter

onerbl AC DC Adapter Instruction Manual

For Schumacher SL1582 and SL1517 Jump Starters

Product Overview

This onerbl AC DC Adapter is designed to provide power and charge compatible devices, specifically Schumacher SL1582 and SL1517 jump starters. It features universal input voltage compatibility and multiple safety protections.



Image: Front and side view of the onerbl AC DC Adapter, showing the two-prong plug and the adapter body with ventilation slots.

Safety Information

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do not** expose the adapter to rain or moisture.
- **Do not** operate the adapter if it has been damaged in any way.
- **Do not** disassemble the adapter. Refer all servicing to qualified personnel.
- Ensure the adapter is connected to a properly grounded outlet.
- Unplug the adapter from the power source when not in use.



Image: Diagram illustrating the adapter's built-in safety features, including short-circuit protection, over-voltage protection, and over-current protection.

Setup and Connection

1. Ensure the adapter and your Schumacher jump starter (SL1582 or SL1517) are clean and dry.
2. Plug the DC output connector of the onerbl AC DC Adapter into the charging port of your Schumacher jump starter.
3. Insert the AC input plug of the adapter into a standard wall outlet (AC 100-240V, 50/60Hz).
4. Confirm that the jump starter indicates it is receiving a charge (refer to your jump starter's manual for charging indicators).



Image: The AC DC Adapter plugged into a power strip, with its cable extending to an unseen device, demonstrating a typical connection scenario.

Operating Instructions

Once connected, the adapter will begin charging your compatible Schumacher jump starter. The charging process is automatic. Monitor the charging status via your jump starter's display or indicator lights.

- The adapter is designed for continuous charging if required by your device, but it is recommended to disconnect once the device is fully charged to conserve energy.
- Avoid covering the adapter during operation to ensure proper ventilation.

Maintenance

Proper maintenance ensures the longevity and safe operation of your AC DC Adapter.

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior.

Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the adapter and its cable for any signs of damage, such as cuts, frayed wires, or bent prongs. If damage is found, discontinue use and replace the adapter.



Image: An illustration highlighting the durable design of the adapter's cable, showing a copper wire core protected by a PVC jacket.

Troubleshooting

If you encounter issues with your AC DC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Adapter not providing power/charging	• Loose connection • No power from outlet • Damaged adapter/cable • Incompatible device	• Ensure all connections are secure. • Test the outlet with another device. • Inspect adapter and cable for damage. Replace if damaged. • Verify compatibility with your device model.
Adapter feels hot during use	• Normal operation (slight warmth) • Poor ventilation • Overload or internal fault	• Slight warmth is normal. • Ensure adapter is not covered and has adequate airflow. • If excessively hot, disconnect immediately and cease use. Contact support.

Specifications

Brand: onerbl

Model: AC DC Adapter

Compatible Devices: Schumacher SL1582, Schumacher SL1517 (1200-AMP Jump Starters)

Input Voltage: AC 100-240V, 50/60Hz (Worldwide Input)

Protection Features: Over Voltage Protection (OVP), Over Current Protection (OCP), Short Circuit Protection (SCP)

Cable Length: Approximately 76 inches (6.33 feet)

Manufacturer: Shenzhen Waweis Technology Co., Ltd

ASIN: B0CZDKWVR1

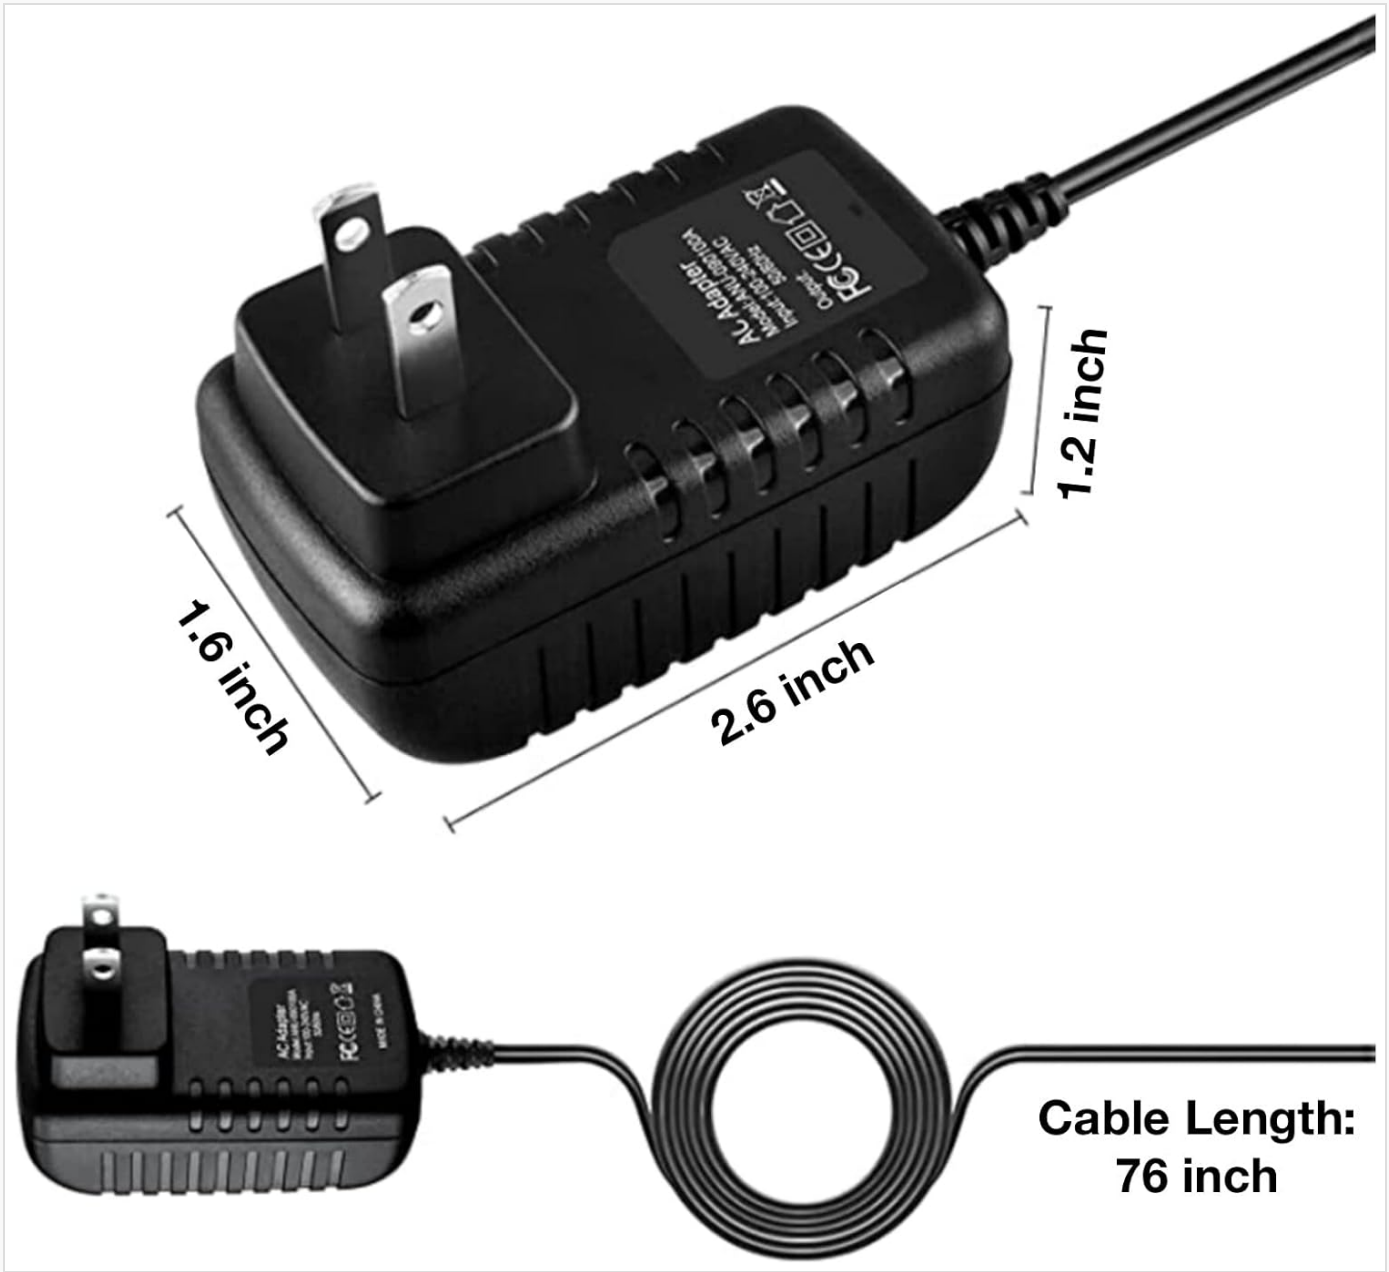


Image: The AC DC Adapter with measurements indicating its dimensions (1.6 inch width, 1.2 inch height, 2.6 inch length) and a cable length of 76 inches.

Warranty Information

This product is covered by the standard manufacturer's warranty. Please refer to the packaging or contact the manufacturer directly for specific warranty terms and conditions.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact onerbl customer support. Contact details are typically available on the product packaging or the manufacturer's official website.

© 2024 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CZDKWVR1

More documents and user manuals: **https://manuals.plus/**