Kinhank Nostalgia Stick Game

Kinhank Nostalgia Stick Game User Manual

Model: Nostalgia Stick Game

Introduction

The Kinhank Nostalgia Stick Game is a compact, plug-and-play retro video game console designed for easy setup and immediate enjoyment. It comes pre-installed with over 12,000 classic games and supports 9 different emulators, offering a wide range of nostalgic gaming experiences. This system connects directly to your TV, PC, or projector via HD output, providing 4K ultra-high-definition visuals. It includes two 2.4G wireless controllers for comfortable gameplay with family and friends.



Image: Users enjoying the Kinhank Nostalgia Stick Game, demonstrating its plug-and-play nature and dual-player capability.

Package Contents

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.



Image: A visual representation of all items included in the product package.

- Game Stick x 1
- Gamepad x 2 (Wireless Controllers)
- USB Receiver x 2
- HD Cable x 1
- Power Line (USB Power Cable) x 1
- TF Card (64GB) x 1 (Pre-installed with games)

Specifications

Feature	Detail

Model Number	Nostalgia Stick Game
Brand	Kinhank
Pre-installed Games	12,000+ Classic Games
Emulators Supported	9 Classic Emulators
Output Resolution	4K Ultra-High Definition (HD Output)
Controller Type	Dual 2.4G Wireless Controllers
Storage	64GB TF Card
Product Dimensions	4.8 x 3.82 x 6.93 inches
Item Weight	14.4 ounces
Connectivity	HD (HDMI compatible), USB 2.0 (for power)



Image: Detailed view of the game stick showing its compact size, TF card slot, HD output port, USB 2.0 port, and power input.

Setup Instructions

Follow these steps to set up your Nostalgia Stick Game for the first time.

1. **Insert the TF Card:** Ensure the 64GB TF card (pre-installed with games) is securely inserted into the TF card slot on the game stick.
2. **Connect the Power Supply:** Connect the provided USB power line to the game stick's power input port, and then connect the other end to a USB power source (e.g., a USB wall adapter, not included, or a USB port on your TV).
3. **Connect to Display:** Plug the game stick directly into an available HD input port on your TV, projector, or monitor. Ensure your display device has an HD input port.
4. **Connect Wireless Receivers:** Insert the two USB wireless receivers into the USB ports on the game stick. These receivers enable the wireless controllers.
5. **Power On Display:** Turn on your TV, projector, or monitor and select the correct HD input source to display the game stick's interface.



Image: Visual guide illustrating the three main setup steps: inserting the game card, connecting the power supply, and connecting the game stick to a TV, projector, or monitor.

Operating Instructions

Using the Wireless Controllers

The Nostalgia Stick Game comes with two 2.4G wireless controllers for an optimal gaming experience.

- **Powering On Controllers:** Insert 2 AAA batteries (not included) into each controller. To activate the gamepads, simultaneously press the **START** and **SELECT** buttons. The indicator light on the controller will illuminate.
- **Controller Layout:** Familiarize yourself with the controller buttons: Direction keys, Left/Right rockers, Function keys (A, B, X, Y), SELECT, START, MODE, R function key, and L function key.

- **Wireless Range:** The controllers operate effectively within a range of approximately 26-32 feet from the game stick.



Image: A detailed diagram showing the various buttons and functions of the 2.4G wireless controller, including the location of the indicator light and battery compartment.

Navigating the Game System

Once the game stick is connected and powered on, the main interface will appear on your display.

- **Game Selection:** Use the directional keys on your controller to navigate through the pre-installed games.
- **Search Games:** The system supports a search function to quickly find specific titles among the 12,000+ games.
- **Add Games:** The console supports adding new games, though specific instructions for this process are beyond the scope of this basic manual. Refer to advanced user guides if available.
- **Save/Load Game Records:** You can save your progress within games and load saved games to continue from where you left off.
- **Create Favorites:** Mark your most played or preferred games as favorites for quick access.



Image: Screenshot of the game system's interface highlighting features such as saving games, adding games, searching games, and collecting favorite games.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your Nostalgia Stick Game.

- **Cleaning:** Use a soft, dry cloth to clean the game stick and controllers. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Heat Dissipation:** The game stick is designed with cooling holes on both sides and the back to improve heat dissipation. Ensure these holes are not obstructed during use to prevent overheating and maintain stable performance.
- **Battery Care:** Remove batteries from the wireless controllers if they will not be used for an extended period to prevent leakage.

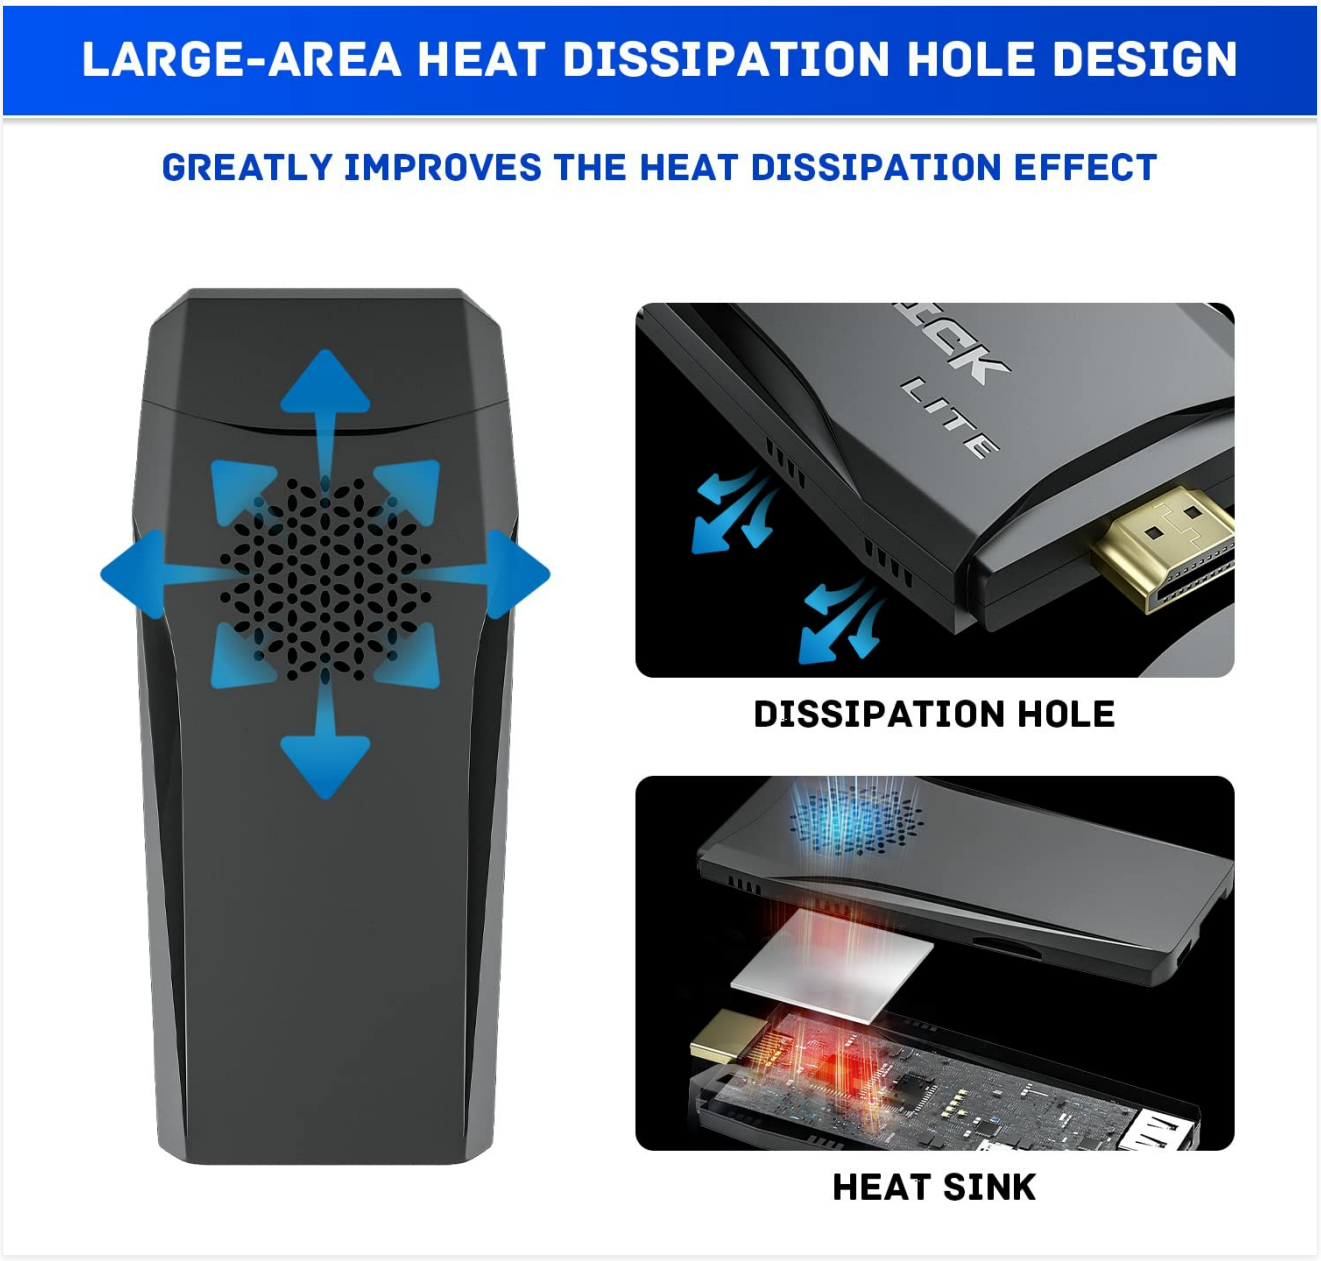


Image: Close-up views of the game stick highlighting the large-area heat dissipation holes and internal heat sink design, crucial for preventing overheating.

Troubleshooting

If you encounter issues with your Nostalgia Stick Game, refer to the following common solutions.

Problem	Possible Cause / Solution
No display on TV/monitor	◦ Ensure the game stick is securely plugged into an HD input port. ◦ Verify your TV/monitor is set to the correct HD input source. ◦ Check if the game stick is receiving power via the USB power line.

Wireless controllers not responding	◦ Ensure fresh AAA batteries are installed correctly in both controllers. ◦ Press **START** + **SELECT** simultaneously on each controller to activate them. ◦ Verify the USB wireless receivers are properly inserted into the game stick's USB ports. ◦ Ensure controllers are within the effective operating range (26-32 feet).
Games are slow or freezing	◦ Ensure the game stick's cooling holes are not obstructed to prevent overheating. ◦ Restart the game stick by unplugging and replugging the power.
Cannot find specific games	◦ Utilize the built-in search function on the game system interface. ◦ Ensure the TF card is properly inserted and functioning.

Warranty and Support

The Kinhank Nostalgia Stick Game comes with a **1-YEAR WARRANTY** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.
For any issues, questions, or support needs during use, please contact our customer service team. We are committed to providing assistance and resolving any concerns you may have.
Please retain your proof of purchase for warranty claims.

© 2024 Kinhank. All rights reserved.