JVC JVC ROVER

JVC Rover Portable Indoor/Outdoor Bluetooth Speaker User Manual

Model: JVC ROVER (XSS521PB)

Introduction

The JVC Rover Portable Indoor/Outdoor Bluetooth Speaker (Model XSS521PB) is designed to deliver powerful sound and long-lasting battery life in a compact, portable form factor. Engineered for both indoor and outdoor environments, this speaker is built to withstand various conditions, including splashes of water, making it a versatile audio companion.
This manual provides essential information on setting up, operating, maintaining, and troubleshooting your JVC Rover speaker to ensure optimal performance and longevity.

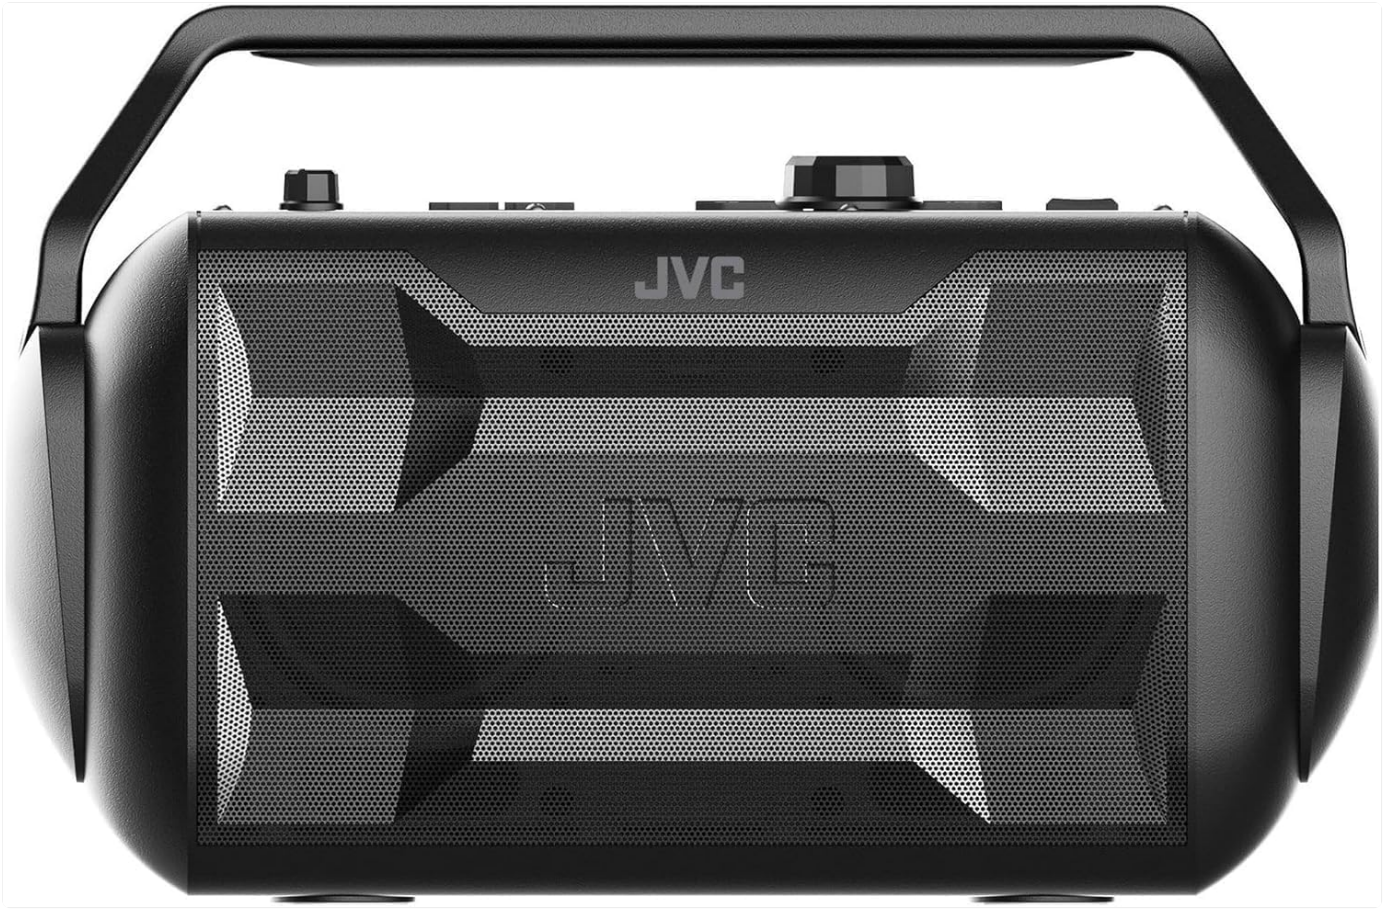


Image: Front view of the JVC Rover Portable Bluetooth Speaker, showcasing its robust design and speaker grille.

Getting Started

What's in the Box

- JVC Rover Portable Bluetooth Speaker
- User Manual (this document)
- USB Charging Cable

Charging the Speaker

Before first use, fully charge the JVC Rover speaker. A full charge provides up to 30 hours of playtime.

1. Locate the charging port on the speaker.
2. Connect the supplied USB Charging Cable to the speaker's charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a powered USB port.
4. The charging indicator light will illuminate during charging and turn off when fully charged.



Image: Top view of the JVC Rover speaker, highlighting the control panel and the USB charging port.

Powering On/Off

To power on the speaker, press and hold the Power button located on the control panel until the indicator light illuminates. To power off, press and hold the Power button again until the indicator light turns off.

Operation

Bluetooth Pairing

The JVC Rover speaker is equipped with Bluetooth technology for wireless audio streaming.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing Bluetooth light).
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "JVC ROVER" from the list of devices.
4. Once paired, the Bluetooth indicator light on the speaker will become solid, and you will hear a confirmation tone.

5. You can now play audio wirelessly from your device through the JVC Rover speaker.



Image: The JVC Rover speaker in an outdoor setting, demonstrating its wireless Bluetooth capability for portable music.

Using AUX Input

For devices without Bluetooth capability, use the 3.5mm AUX input.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your device.
3. The speaker will automatically switch to AUX mode, or you may need to select it manually using the mode button.

Using Microphone/Guitar Input

The JVC Rover features a 3.5mm input for a microphone or guitar, allowing for amplified sound.

1. Connect your microphone or guitar cable to the MIC/GUITAR input port on the speaker.
2. Adjust the dedicated Mic/Guitar volume dial on the control panel to control the input level.



Image: Angled view of the JVC Rover speaker, highlighting the 3.5mm AUX and Microphone/Guitar input ports.

FM Radio

The speaker includes an FM radio function. To use it, switch to FM mode using the mode button. Use the tuning controls to scan for and select radio stations.

Volume Control

Adjust the main volume using the large rotary dial on the top control panel of the speaker. For Bluetooth connected devices, you can also control the volume from your source device.

IPX4 Water Resistance

The JVC Rover is IPX4 water resistant, meaning it is protected against splashing water from any direction. This makes it suitable for outdoor use and areas where it might encounter light rain or splashes. **Note:** Do not submerge the speaker in water.



Image: The JVC Rover speaker positioned near a swimming pool, illustrating its IPX4 water-resistant design.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your JVC Rover speaker.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.
- **Water Exposure:** While IPX4 rated, avoid prolonged exposure to heavy rain or submersion in water. Ensure all port covers are securely closed when near water.

Troubleshooting

Problem	Possible Cause	Solution
No Power	Battery is depleted.	Charge the speaker using the supplied USB cable.
No Sound	Volume is too low or muted. Incorrect input mode.	Increase volume on speaker and source device. Ensure correct input mode (Bluetooth, AUX, FM) is selected.
Bluetooth Disconnection	Device is out of range. Interference.	Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices. Re-pair the device.
Poor Sound Quality	Low battery. Source audio quality.	Ensure speaker is fully charged. Try a different audio source or file.
Microphone/Guitar Input Not Working	Volume dial too low. Cable not fully inserted.	Increase the MIC/GUITAR volume dial. Ensure the cable is securely connected.

Specifications

Model Name: JVC ROVER (XSS521PB)

Brand: JVC

Speaker Type: Surround Sound

Speaker Maximum Output Power: 30 Watts

Connectivity Technology: Bluetooth, USB

Wireless Communication Technology: Bluetooth

Bluetooth Range: 10 Meters (33 Feet)

Battery Life: Up to 30 Hours

Power Source: Battery Powered (1 Lithium Ion battery included)

Water Resistance Level: IPX4 Water Resistant

Product Dimensions: 7"D x 12.5"W x 8.6"H

Item Weight: 7.63 pounds

Material: Plastic

Color: Black

Included Components: User manual, USB Charging cable

Inputs: 3.5mm AUX, 3.5mm Microphone/Guitar, USB Port

Special Features: Portable, Waterproof, Lightweight, FM Radio, USB Port

Frequency Response: 20000 Hz

Impedance: 52 Ohm

Signal-to-Noise Ratio: 71 dB

UPC: 046838500312

Country of Origin: China

Warranty and Support

Warranty Information

The JVC Rover Portable Bluetooth Speaker comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty service, or general inquiries, please visit the official JVC support website or contact their customer service department. Contact information can typically be found on the JVC official website or on the product packaging.
For more information and support, please visit theJVC Store on Amazon.

© 2024 JVC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question