Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit HTR-U27A

ZdalaMit HTR-U27A Voice Replacement Remote Control User Manual

Model: HTR-U27A | **Brand:** ZdalaMit

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZdalaMit HTR-U27A Voice Replacement Remote Control. This remote is designed to be compatible with various Haier Smart Google Android TV models, offering voice control functionality for an enhanced user experience. Please read this manual carefully before using the remote control.



Image: Front view of the HTR-U27A Voice Replacement Remote Control, showing all buttons and the voice assistant icon.

Package Contents

Verify that all items are present in your package:

- 1x HTR-U27A Voice Replacement Remote Control

Note: 2x 1.5V AAA Alkaline Batteries are required and are not included in the package.

Setup

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

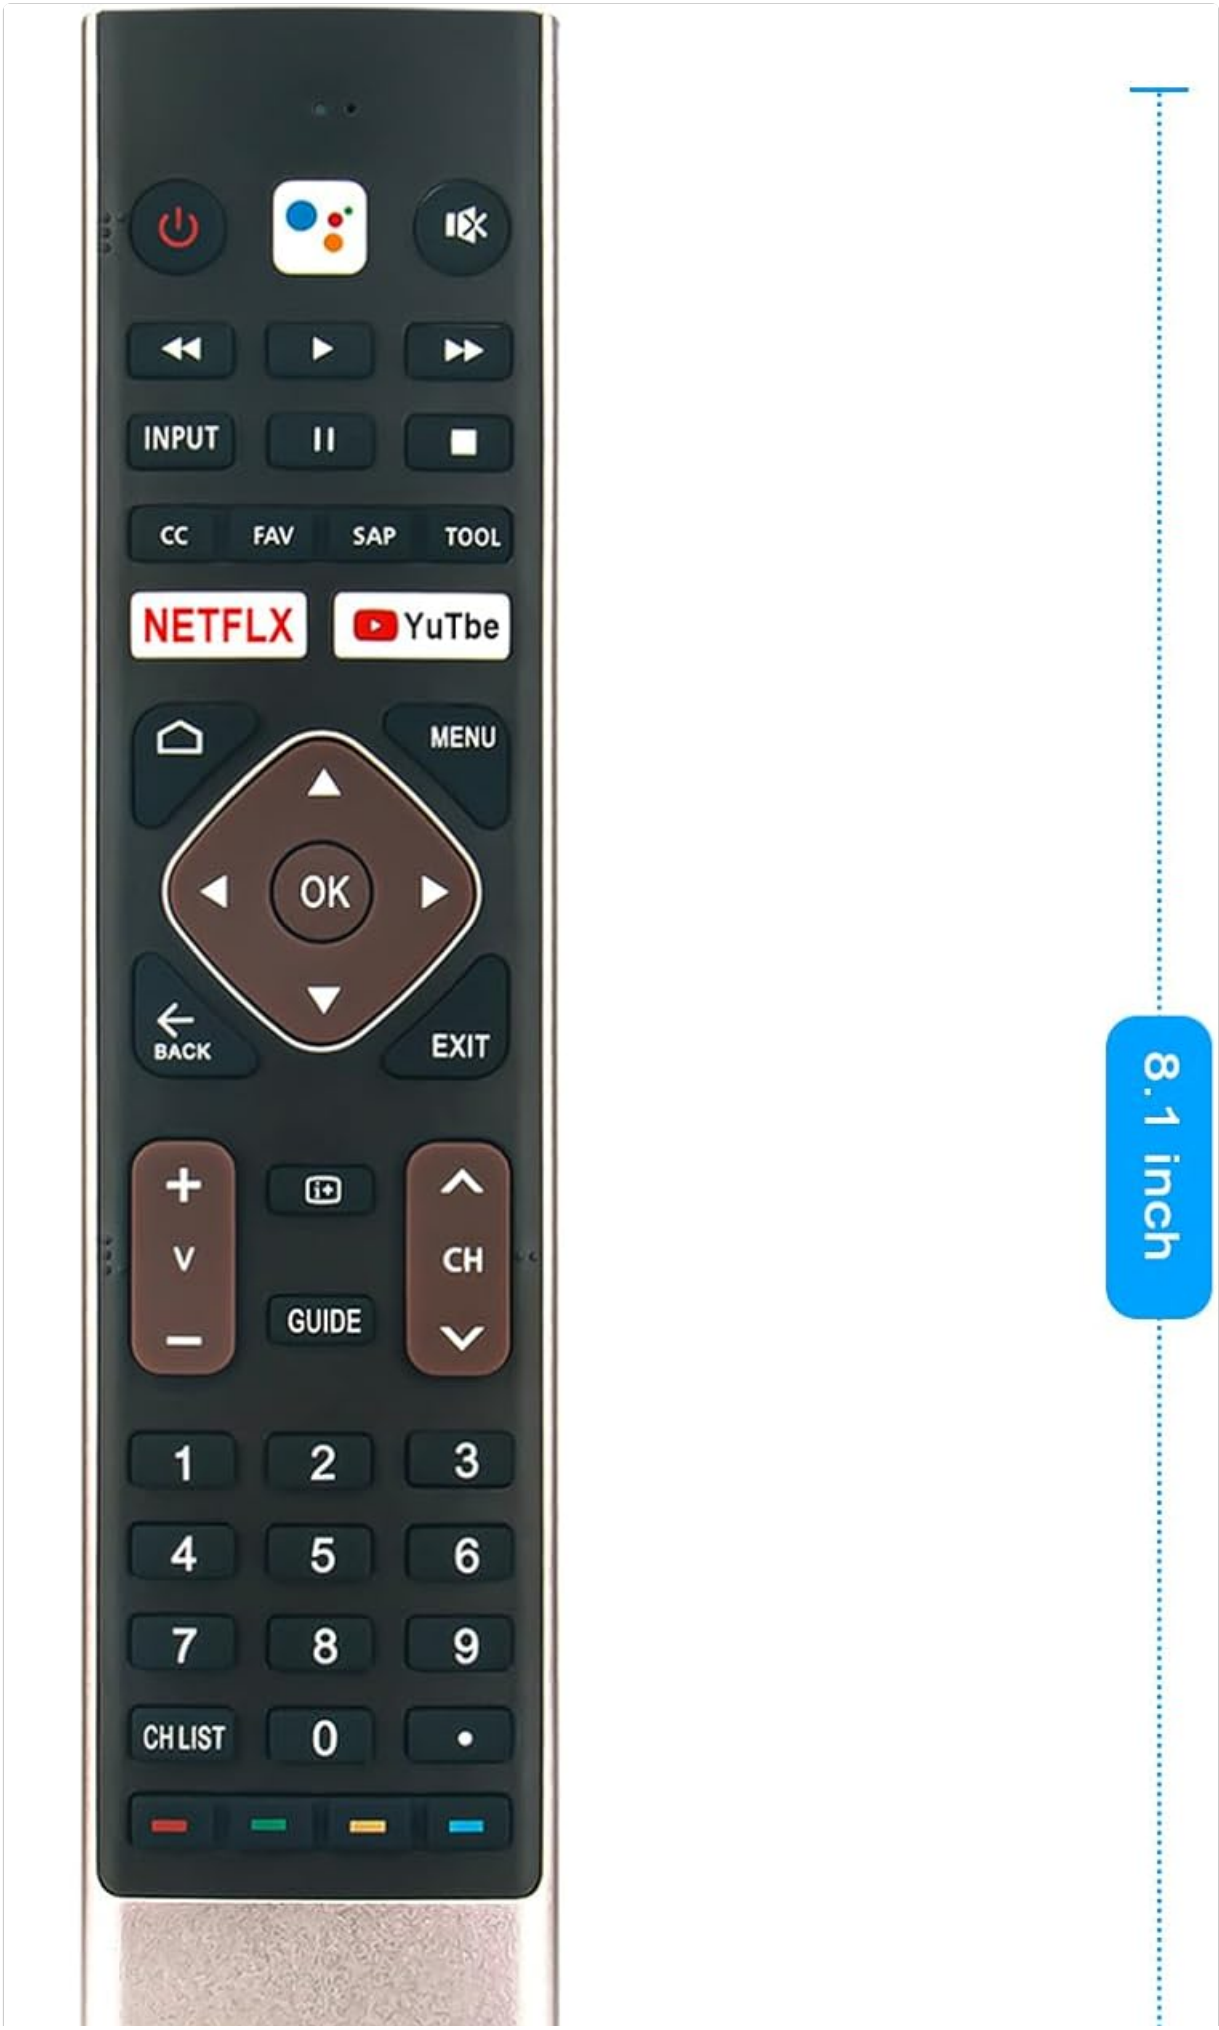




Image: The HTR-U27A remote control showing its dimensions, indicating the general size and where the battery compartment would be located on the back.

2. Pairing the Remote Control with Your TV

This remote control requires pairing with your Haier Smart Google Android TV before use. Follow these steps:

1. Ensure your TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Red button** and the **Blue button** simultaneously for approximately 5 seconds. These buttons are typically located near the bottom of the remote, often colored.
4. After holding the buttons, a pairing prompt should appear on your TV screen.
5. When "HaierTV-RC" displays in the upper right corner of the screen, press the **"OK" button** on the remote control to confirm pairing.
6. If pairing is unsuccessful, wait a few minutes and repeat the pairing process from step 3.
7. To exit the accessory adding process at any time, press the **"EXIT" button**.



Image: A hand holding the HTR-U27A remote control, pointing towards a television screen, illustrating typical usage.

Operating Instructions

Basic Functions

- **Power Button ( ):** Turns the TV on or off.
- **Input Button:** Selects the input source (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Volume Up/Down (V+/V-):** Adjusts the TV volume.
- **Channel Up/Down (CH+/CH-):** Changes TV channels.
- **Home Button (⌂):** Returns to the TV's home screen.
- **Back Button (←):** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Menu Button:** Accesses the TV's main menu.
- **Netflix / YouTube Buttons:** Direct access to Netflix and YouTube applications.
- **Media Control Buttons (Play, Pause, Fast Forward, Rewind):** Controls media playback.

Voice Control

The HTR-U27A remote features voice control capabilities through the integrated Google Assistant. To use voice commands:

1. Press the **Google Assistant button** (typically represented by a microphone icon or Google Assistant logo) on the remote control.
2. Speak clearly into the microphone located on the remote control.
3. You can ask questions, search for content, control smart home devices, and more.







Image: The HTR-U27A remote control highlighting the Google Assistant button and a separate microphone icon, indicating voice control functionality.

Compatible Haier TV Models

This remote control is compatible with the following Haier Smart Google Android TV models:

- LE65K6600UG
- LE40K6600GA
- LE32K6600SG
- LE65K6600HQGA
- LE58U6900UG
- LE43K6600SG

- LE40K6600G
- LE50K6700UG
- LE43K6700UG
- LE43K6600G
- LE50K6600UG
- LE50K6600HQGA
- LE65U6900UG
- LE55K6700UG
- LE58K6600UG
- LE43K6600GA
- LE58U6900HQGA
- LE58K6600HQGA
- LE65K6700UG
- LE43K6600UGA
- LE55K6600HQGA
- LE50U6900UG
- LE55K6600UG
- LE32K6600GA
- LE55U6900UG

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new 1.5V AAA alkaline batteries. ◦ Ensure there are no obstructions between the remote and the TV's IR receiver.
Voice control is not working.	◦ Ensure the remote is successfully paired with your TV. Refer to the "Pairing the Remote Control" section. ◦ Speak clearly and directly into the microphone on the remote. ◦ Check your TV's settings to ensure voice control is enabled.
Remote does not pair with the TV.	◦ Ensure the TV is on and within range. ◦ Repeat the pairing steps carefully, holding the Red and Blue buttons for the specified duration. ◦ Try replacing the batteries with fresh ones. ◦ If multiple attempts fail, power cycle your TV (unplug from power for 30 seconds, then plug back in) and try pairing again.

SPECIFICATIONS

- **Model:** HTR-U27A
- **Power Supply:** 2x 1.5V AAA Alkaline Batteries (not included)
- **Special Feature:** Voice Search (Google Assistant)
- **Compatible Devices:** Haier Smart Google Android TVs
- **Product Dimensions:** 8.22 x 1.71 x 0.55 inches (approximately)
- **Item Weight:** 1.41 ounces (approximately, without batteries)

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

© 2024 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CZMPY58L

More documents and user manuals: **https://manuals.plus/**