Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LG OLED55C4PSA

LG OLED55C4PSA 55-inch OLED evo 4K UHD Smart TV User Manual

Model: OLED55C4PSA | Brand: LG

Introduction

This manual provides essential information for the safe and efficient use of your LG OLED55C4PSA 55-inch OLED evo 4K UHD Smart TV. Please read it thoroughly before operating the device and retain it for future reference. Your LG OLED TV utilizes self-lit pixels, offering superior contrast and a sleek design compared to traditional LCD TVs.

Setup

1. Unboxing and Placement

Carefully remove the TV from its packaging. It is recommended to have at least two people for this process due to the size and weight of the unit. Place the TV on a stable, level surface or mount it on a wall using a compatible VESA mount (sold separately).



Figure 1: Front view of the LG OLED55C4PSA TV, showcasing its slim bezels and vibrant display.



Figure 2: Side view highlighting the ultra-slim profile of the LG OLED TV.

2. Stand Assembly (if applicable)

If using the included stand, attach it securely to the TV following the instructions provided in the separate stand assembly guide. Ensure all screws are tightened to prevent instability.



Figure 3: Detail of the TV stand, showing the attachment point to the television unit.

3. Connecting Peripherals

Connect your external devices such as cable boxes, gaming consoles, or sound systems to the appropriate ports on the back of the TV. The TV supports various hardware interfaces including Bluetooth, Ethernet, HDMI, and USB.

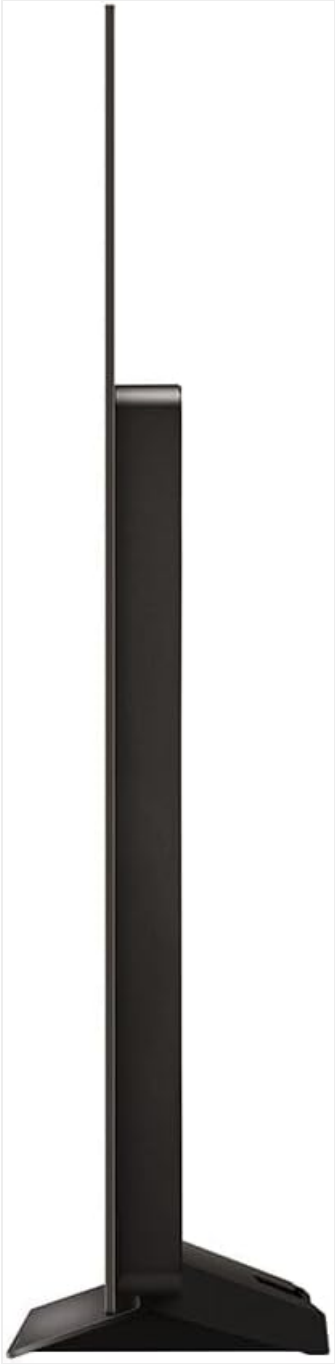


Figure 4: Rear view of the TV, illustrating the location of various input and output ports.

4. Power Connection

Plug the power cable into the TV's power input, then into a wall outlet. The TV operates on 240 Volts.

5. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes language selection, network connection (Wi-Fi or Ethernet), channel scanning (DVB-T2/T, DVB-C tuner technology), and basic picture/sound settings. Follow the on-screen prompts using the Magic Remote.

Operating Instructions

1. Magic Remote Control

The included Magic Remote allows for intuitive control of your TV. Point and click, use the scroll wheel, or utilize voice commands for navigation and input. Ensure the remote control batteries are installed correctly.

2. webOS 24 Smart Features

Your TV runs on webOS 24, providing access to a wide range of streaming services, apps, and smart functionalities. Navigate the home screen to find your desired content. ThinQ AI offers personalized recommendations and hands-free voice recognition for convenient control.

3. Input Selection

To switch between connected devices (e.g., HDMI 1, USB), press the 'Input' button on your Magic Remote and select the desired source from the on-screen menu.

4. Picture and Sound Settings

Access the settings menu to adjust picture modes (e.g., Standard, Cinema, Game), brightness, contrast, and color. For audio, customize sound modes and settings for the 2.2 channel speaker system. The TV supports Dolby Vision and Dolby Atmos for an immersive entertainment experience.

5. Gaming Features

The TV features a 120Hz native refresh rate, VRR (Variable Refresh Rate), G-sync, and FreeSync support, optimizing it for gaming. Activate Game Mode in the settings for reduced input lag and enhanced responsiveness.

Maintenance

1. Screen Cleaning

To clean the screen, gently wipe it with a soft, dry microfiber cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Avoid using harsh chemicals, abrasive materials, or direct spraying of liquids onto the screen.

2. Body Cleaning

Wipe the TV's frame and stand with a soft, dry cloth. Do not use solvents or alcohol-based cleaners, as these can damage the finish.

3. Power Saving

To conserve energy, utilize the TV's power-saving modes available in the settings menu. Unplug the TV from the power outlet during extended periods of non-use or during electrical storms.

Troubleshooting

- **No Power:** Ensure the power cable is securely connected to both the TV and the wall outlet. Check if the outlet is functional by plugging in another device.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all HDMI and audio cables for secure connections. Try restarting the TV by unplugging it for a few minutes and then plugging it back in.
- **Remote Control Not Working:** Replace the batteries in the Magic Remote. Ensure there are no obstructions between the remote and the TV's IR receiver.
- **Network Connection Issues:** Check your Wi-Fi router or Ethernet cable connection. Restart your router and the TV. If issues persist, try resetting network settings on the TV.
- **Picture Quality Issues:** Adjust picture settings in the menu. Ensure your content source is providing a high-quality signal.

If problems persist after attempting these steps, please refer to the support section for further assistance.

Specifications

Feature	Detail
Brand	LG
Model	OLED55C4PSA
Model Year	2024
Operating System	WebOS 24
Processor	α9 AI Processor 4K Gen7
Display Technology	4K OLED, OLED evo
Screen Size	55 Inches
Display Resolution	3840 x 2160 pixels (4K UHD)
Refresh Rate	120 Hz
Aspect Ratio	16:9
Audio Output	2.2 Channel Speaker Surround Sound
Special Features	Flat, Game Mode, Multiple Voice Assistance, Nvidia G Sync, VRR, FreeSync, Dolby Vision, Dolby Atmos
Connectivity Technology	Bluetooth, Ethernet, HDMI, USB
Mounting Type	Table Top, Wall Mount
Product Dimensions (D x W x H)	4.5D x 122.2W x 70.3H centimetres
Wattage	40 watts
Included Components	Magic Remote, Remote Control Batteries, Power Cable, IR Blaster Cable

Warranty Information

Your LG OLED55C4PSA TV is covered by a manufacturer's warranty. Specific warranty terms and conditions may vary by region and retailer. Please refer to the warranty card included with your product or visit the official LG website for detailed information regarding coverage, duration, and service procedures.

Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact LG customer support. You can find contact information, FAQs, and additional resources on the official LG website. When contacting support, please have your TV model number (OLED55C4PSA) and serial number readily available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CZNWNJQC

More documents and user manuals: **https://manuals.plus/**