BELLA 35146

BELLA 10 Speed Countertop Blender Instruction Manual

MODEL: 35146

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- To protect against electrical shock, do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always operate the blender with the lid in place.


Product Overview

Components

- Motor Base
- Blender Jar (48 oz / 6-cup capacity)
- Lid with Filler Cap
- Stainless Steel Blade Assembly




bella
high
low
pulse
milkshake
puree
icy drink
chop
smoothie
grind
ice crush
whisk
blend
stir

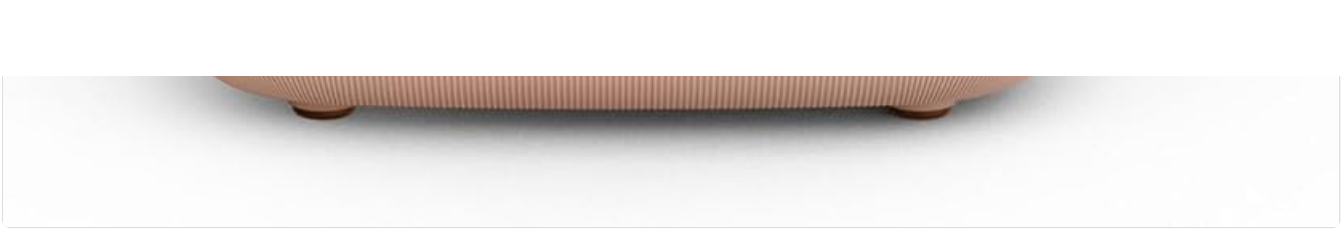

The BELLA 10 Speed Countertop Blender featuring its 48oz jar filled with a colorful mix of fruits and ice, ready for blending.

Getting Started

Unpacking

Carefully remove all components from the packaging. Retain packaging for future storage or disposal.

Initial Cleaning

- Wash the blender jar, lid, and blade assembly with warm, soapy water. Rinse thoroughly and dry.
- Wipe the motor base with a damp cloth. Do not immerse the motor base in water.

Assembly

1. Place the motor base on a clean, dry, and stable surface.
2. Attach the stainless steel blade assembly to the bottom of the blender jar by twisting it securely until tight.
3. Place the assembled blender jar onto the motor base, ensuring it is seated correctly.
4. Place the lid onto the blender jar and press down firmly to ensure it is securely locked in place.

This video provides a product overview of the BELLA Flip & Store Blender, demonstrating its components and compact design.

Operation

Adding Ingredients

- Ensure all ingredients are cut into small pieces, especially frozen fruits or hard vegetables (less than 1 inch is recommended).
- Do not overfill the blender jar. The maximum capacity is 48 fluid ounces (6 cups).
- For optimal blending, add liquids first, followed by soft ingredients, then harder ingredients, and finally ice or frozen items.

Speed Control

The BELLA 10 Speed Countertop Blender offers versatile control for various blending tasks:

- **Power Button:** Use to turn the blender On/Off.
- **High/Low Settings:** Select between high and low continuous blending speeds.
- **Pulse:** Use for short bursts of power to chop ingredients or break up larger pieces.
- **Pre-set Functions:** Dedicated buttons for specific tasks including:
  - Smoothie Grind
  - Ice Crush Whisk

- Milkshake Puree
- Icy Drink Chop
- Blend Stir

Blending Tips

- Start with a low speed or the Pulse function to break down larger ingredients, then switch to a continuous speed.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow a short break between cycles.
- If ingredients are not circulating, turn off the blender, remove the lid, and use a spatula to push ingredients towards the blades. Replace the lid securely before resuming.



A detailed view of the BELLA blender's control panel, highlighting the 10 speed settings and specialized function buttons.



The durable 4-tip stainless steel blade system is designed for super smooth results, as demonstrated by the perfectly blended puree.

Maintenance and Cleaning

Disassembly

1. Always unplug the blender from the power outlet before disassembling or cleaning.
2. Remove the lid and then lift the blender jar from the motor base.
3. Carefully unscrew the blade assembly from the bottom of the blender jar.

Cleaning

- **Blender Jar and Lid:** These parts are dishwasher safe (top rack recommended). For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Blade Assembly:** Hand wash the blade assembly carefully with warm, soapy water. The blades are sharp, so

exercise caution.

- **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.

Storage

The BELLA Flip & Store Blender features an innovative space-saving design:

- The 6-cup jar can be inverted and placed directly onto the motor base, reducing the overall height and saving up to 50% more space when stored.
- The power cord can be neatly tucked away in the cord storage area located in the base of the unit.



The innovative design allows the blender jar to be inverted and stored directly on the motor base, significantly reducing its footprint.



This image illustrates how the compact design of the BELLA blender allows it to fit easily into kitchen cabinets, unlike taller, traditional blenders.

Troubleshooting

Common Issues

- **Blender does not turn on:** Ensure the power cord is securely plugged into a working outlet. Verify that the blender jar is correctly assembled and locked onto the motor base.
- **Ingredients not blending smoothly:** Add more liquid to the mixture. Use the Pulse function to break up larger or tougher ingredients. Ensure ingredients are cut into small, manageable pieces.
- **Loud noise during operation:** A certain level of noise is normal for blenders, especially when crushing ice or blending hard ingredients. Ensure the lid is securely in place and the jar is properly seated on the base.
- **Leakage from the jar:** Confirm that the blade assembly is tightly screwed onto the bottom of the blender jar. Ensure the lid is properly sealed on top of the jar.

Specifications

Technical Details

Feature	Detail
Brand	BELLA
Model Number	35146
Color	Blossom
Special Feature	Adjustable Speed Control, Cord Storage
Capacity	48 Fluid Ounces (6 Cups)
Product Dimensions	7.67"D x 8.03"W x 13.97"H
Included Components	Plastic Jar with lid and 2 oz measuring cap
Style	Countertop Blenders
Recommended Uses	Blending, Chopping
Power Source	Electric (450-watt rated)
Number of Speeds	10
Material Type Free	BPA Free
Blade Material	Stainless Steel
Control Type	Speed
Container Material	Plastic
Item Weight	3.17 pounds



Visual representation of the BELLA Flip & Store Blender's dimensions for easy reference.

Warranty and Support

Warranty Information

This BELLA 10 Speed Countertop Blender comes with a**3 Year Limited Warranty**. Please refer to the warranty card included in your product packaging for full terms and conditions.

Customer Support

For any questions, troubleshooting assistance, or warranty claims, please visit the official BELLA website or contact their customer service department using the contact information provided in your product documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question