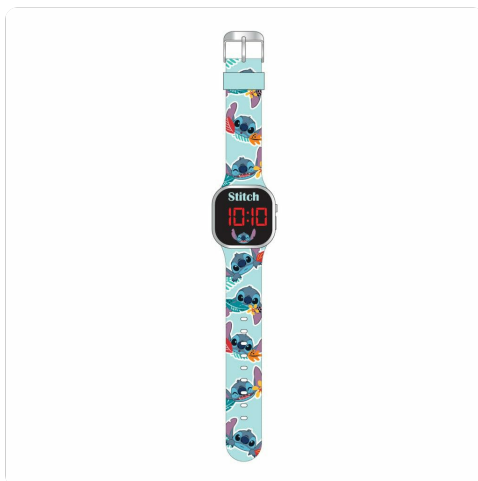**Accutime LAS4038**

Accutime Lilo & Stitch Pineapples LED Kids Digital Wrist Watch User Manual

MODEL: LAS4038

A full view of the Accutime Lilo & Stitch Pineapples LED Kids Digital Wrist Watch, featuring a light blue silicone strap with Stitch and pineapple designs, and a digital LED display showing '10:10'.

Introduction

This manual provides instructions for the Accutime Lilo & Stitch Pineapples LED Kids Digital Wrist Watch, Model LAS4038. This digital watch is designed for children aged 6 and up, featuring an easy-to-read LCD display and a fun character design.

Key Features

- Officially licensed Lilo & Stitch design
- Easy-to-read LCD digital display
- Silicone strap with traditional buckle fastening
- Dial size: 35mm

- Band width: 1.0 inch
- Case diameter: 1.0 inch
- Case thickness: 1.0 inch
- Embellishment feature: Crystal

Setup

Initial Activation

To activate the LED display, press the **top right button**. The time will illuminate for a few seconds.

Setting Time and Date

To adjust the time and date settings:

1. Press the **bottom right button** repeatedly until the desired setting mode (e.g., hour, minute, month, day) is displayed.
2. Once the desired setting is flashing, use the **top right button** to adjust the value.
3. Continue pressing the **bottom right button** to cycle through other settings and adjust them with the **top right button**.
4. After all adjustments are made, stop pressing buttons, and the watch will automatically save the settings and return to normal time display.

Operation

Displaying Time

Press the **top right button** once to illuminate the LED display and show the current time.

Non-Functional Buttons

Please note that the decorative buttons on the left side of the watch case are non-functional and are for aesthetic purposes only.

Maintenance

Cleaning Your Watch

To clean your watch, gently wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or the silicone strap.

Battery Information

This digital watch uses a standard watch battery. If the display becomes dim or stops working, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and functionality.

Water Resistance

This watch is designed for everyday wear but is not intended for swimming or showering. Avoid prolonged exposure to water to prevent damage.

Troubleshooting

- **Display is blank:** Press the **top right button** to activate the display. If it remains blank, the battery may need replacement.

- **Incorrect time:** Follow the "Setting Time and Date" instructions in the Setup section to adjust the time.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable, though this model is simple). If issues persist, a battery replacement might be necessary.

Specifications

Feature	Detail
Brand	Accutime
Model Number	LAS4038
Department	Girls
Case Diameter	1.0 inch
Case Thickness	1.0 inch
Band Width	1.0 inch
Closure Type	Buckle
Material	Silicone strap, plastic case (silver-colored parts are plastic, not real metal)
Recommended Age	6+ years

Warranty and Support

For warranty information or technical support, please refer to the packaging or contact Accutime Watch Corp. directly. Keep your proof of purchase for any warranty claims.

Related Documents - LAS4038

	[ACCUTIME INTERACTIVE WATCH User Guide](#) Comprehensive user guide for the ACCUTIME INTERACTIVE WATCH, detailing its features, operation, settings, and troubleshooting. Learn how to power on/off, recharge the battery, use games, time tools, camera, video, pedometer, and manage storage.
	[Accutime Interactive Watch User Manual - Features, Settings, and Safety](#) Comprehensive user guide for the Accutime Interactive Watch, detailing how to use its features including camera, video, stopwatch, timer, voice recorder, calculator, and settings. Includes important safety warnings and recycling instructions.
	[Accutime Interactive Watch User Manual - Features, Settings, and Troubleshooting](#) Comprehensive user manual for the Accutime interactive watch. Learn how to set up, use features like camera, video, stopwatch, timer, alarms, and customize settings. Includes troubleshooting tips and safety warnings.

	[Accutime Interactive Watch for Kids - User Manual](#) Comprehensive user manual for the Accutime interactive smartwatch for children, covering features, instructions, specifications, and troubleshooting. Learn how to use your child's interactive watch.
	[Accutime Watch User Manual and Product Information](#) A concise overview of Accutime Watches, including details inferred from metadata and the limited text content 'I'm not a robot'. This document serves as a product overview and potential user manual guide.
	[Interactive Watch User Guide](#) A user guide for the Interactive Watch, covering features such as powering on/off, clock faces, status bar icons, battery recharging, splash-proofing, games, camera, video recording, pedometer, album viewer, time tools (alarm, stopwatch, timer), voice recorder, calculator, and settings.