**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Soundcore A3138

# Soundcore Boom 2 by Anker Outdoor Bluetooth Speaker User Manual

Model: A3138

## 1. Introduction

Thank you for choosing the Soundcore Boom 2 by Anker. This manual provides essential information to help you set up, operate, and maintain your outdoor Bluetooth speaker. The Soundcore Boom 2 is designed to deliver powerful 80W sound with deep bass, featuring IPX7 waterproofing, a floatable design, and up to 24 hours of playtime, making it ideal for any adventure.

## 2. What's in the Box

- Soundcore Boom 2 Outdoor Bluetooth Speaker
- USB-C to C Charging Cable
- Safety Instructions




Image: Soundcore Boom 2 speaker shown with its included USB-C charging cable, representing the contents of the package.

## 3. Product Overview

### 3.1 Controls and Indicators

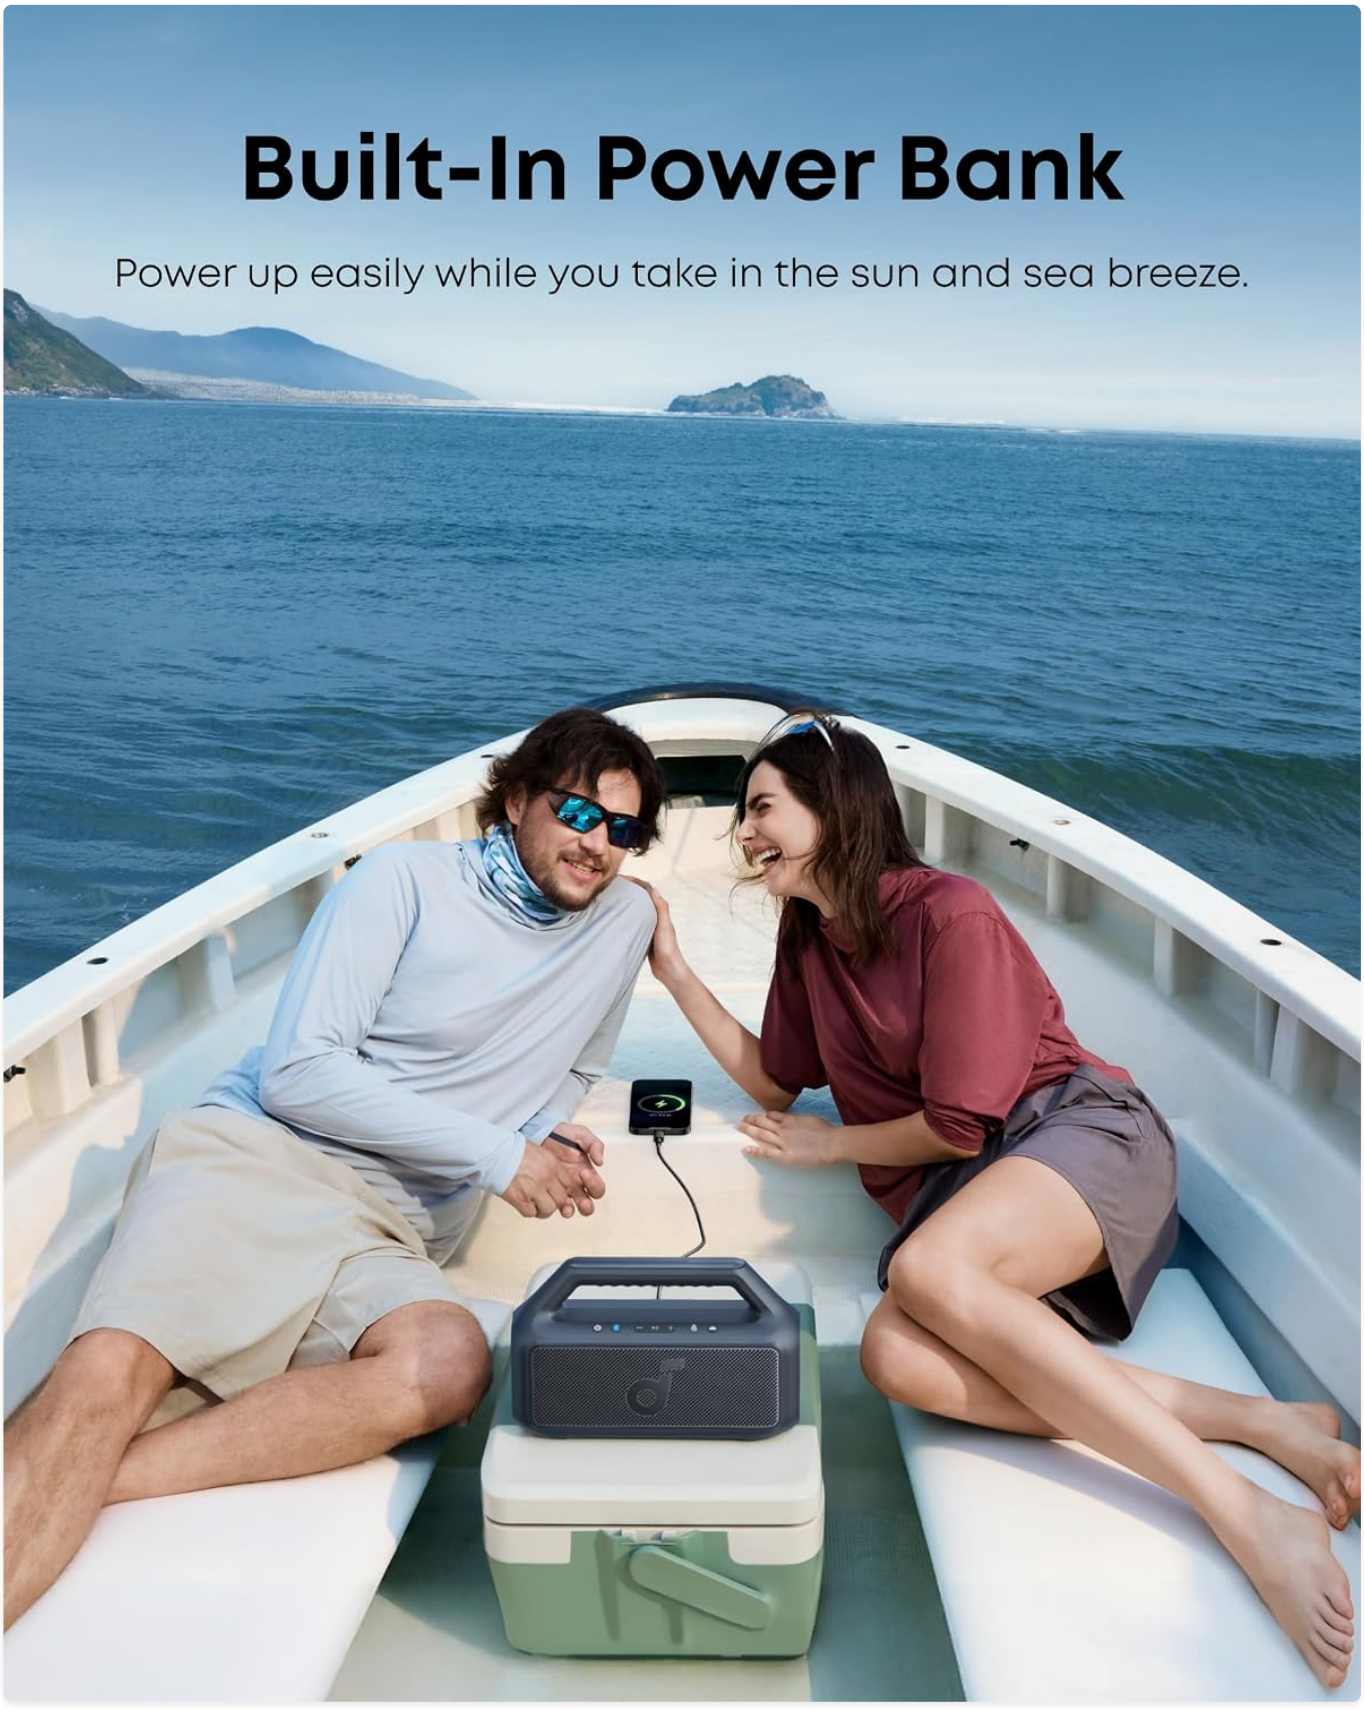



Image: Top view of the Soundcore Boom 2 speaker, highlighting the control buttons.

1. **Power Button:** Press to turn on/off.
2. **Bluetooth Button:** Press to enter Bluetooth pairing mode.
3. **Volume Down (-):** Press to decrease volume.
4. **Play/Pause Button:** Press to play or pause music.
5. **Volume Up (+):** Press to increase volume.
6. **BassUp Button:** Press to activate or deactivate BassUp technology for enhanced bass.

7. **Light Mode Button:** Press to cycle through different light effects.

### 3.2 Ports




Image: Rear view of the Soundcore Boom 2 speaker, showing the protective flap covering the charging and output ports.

- **USB-C Charging Port:** For charging the speaker.
- **USB-A Output Port:** For charging external devices (power bank function).

*Note: Ensure the protective flap covering the ports is securely closed for water resistance.*

## 4. Setup

### 4.1 Charging the Speaker

1. Open the protective flap on the rear of the speaker.
2. Connect the USB-C charging cable to the speaker's USB-C port and to a compatible USB wall charger (not included).
3. The LED indicators will show charging status. A full charge takes approximately 5.5 hours.
4. Once fully charged, disconnect the cable and securely close the protective flap.

The speaker provides up to 24 hours of playtime on a single charge (actual playtime varies by volume level and audio content).




Image: Soundcore Boom 2 speaker illuminated at night in a campsite setting, symbolizing its extended battery life.

### 4.2 Powering On/Off

- **To Power On:** Press the Power button once. You will hear an audible cue.
- **To Power Off:** Press and hold the Power button for 2 seconds. You will hear an audible cue.

## 5. Operating

### 5.1 Bluetooth Pairing

1. Power on the Soundcore Boom 2. The Bluetooth indicator will flash blue, indicating it's in pairing mode.
2. On your Bluetooth-enabled device, go to the Bluetooth settings and search for


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0CZTQY3VR**

More documents and user manuals: **https://manuals.plus/**