Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CAXIMSY M2073

CAXIMSY Peach Blossom Pond Building Blocks Set

Model: M2073

Introduction

This instruction manual provides detailed guidance for the assembly and setup of your CAXIMSY Peach Blossom Pond Building Blocks Set. This set features an intricate micro-brick design, integrated LED lighting, and a protective acrylic display box. Please read all instructions carefully before beginning assembly to ensure a smooth and enjoyable building experience.



Image: The fully assembled Peach Blossom Pond set, illuminated by its LED lights.

Safety Information

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

- Keep all small parts away from young children and pets.
- Exercise caution during assembly to avoid accidental ingestion of small components.
- Dispose of packaging materials responsibly.

Package Contents

Before starting, please verify that all components are present. The package should contain:

- Over 2500 micro building blocks for the Peach Blossom Pond model.
- One set of LED lighting components with three variable lighting groups.
- One transparent acrylic display box.
- One detailed assembly instruction manual.
- Assorted spare parts.

Assembly Instructions

The assembly process involves small particles and requires careful attention. It is recommended to sort pieces before starting. Refer to the included detailed assembly manual for step-by-step visual instructions.

1. Initial Sorting and Preparation

Open all bags and sort the building blocks by color and shape. This will significantly aid in the assembly process. Prepare a clean, well-lit workspace.

2. Constructing the Base Structure

Begin by assembling the main base of the Peach Blossom Pond. Follow the numerical sequence in the provided manual. Ensure each micro-brick is firmly connected to create a stable foundation.



Image: Detailed view of micro-brick construction, highlighting the small size and precision required.

3. Building the Landscape Elements

Proceed to construct the waterfall, peach trees, and courtyard sections. Pay close attention to the orientation of the small particles to achieve the intended aesthetic. The set includes elements designed to represent water flow and foliage.

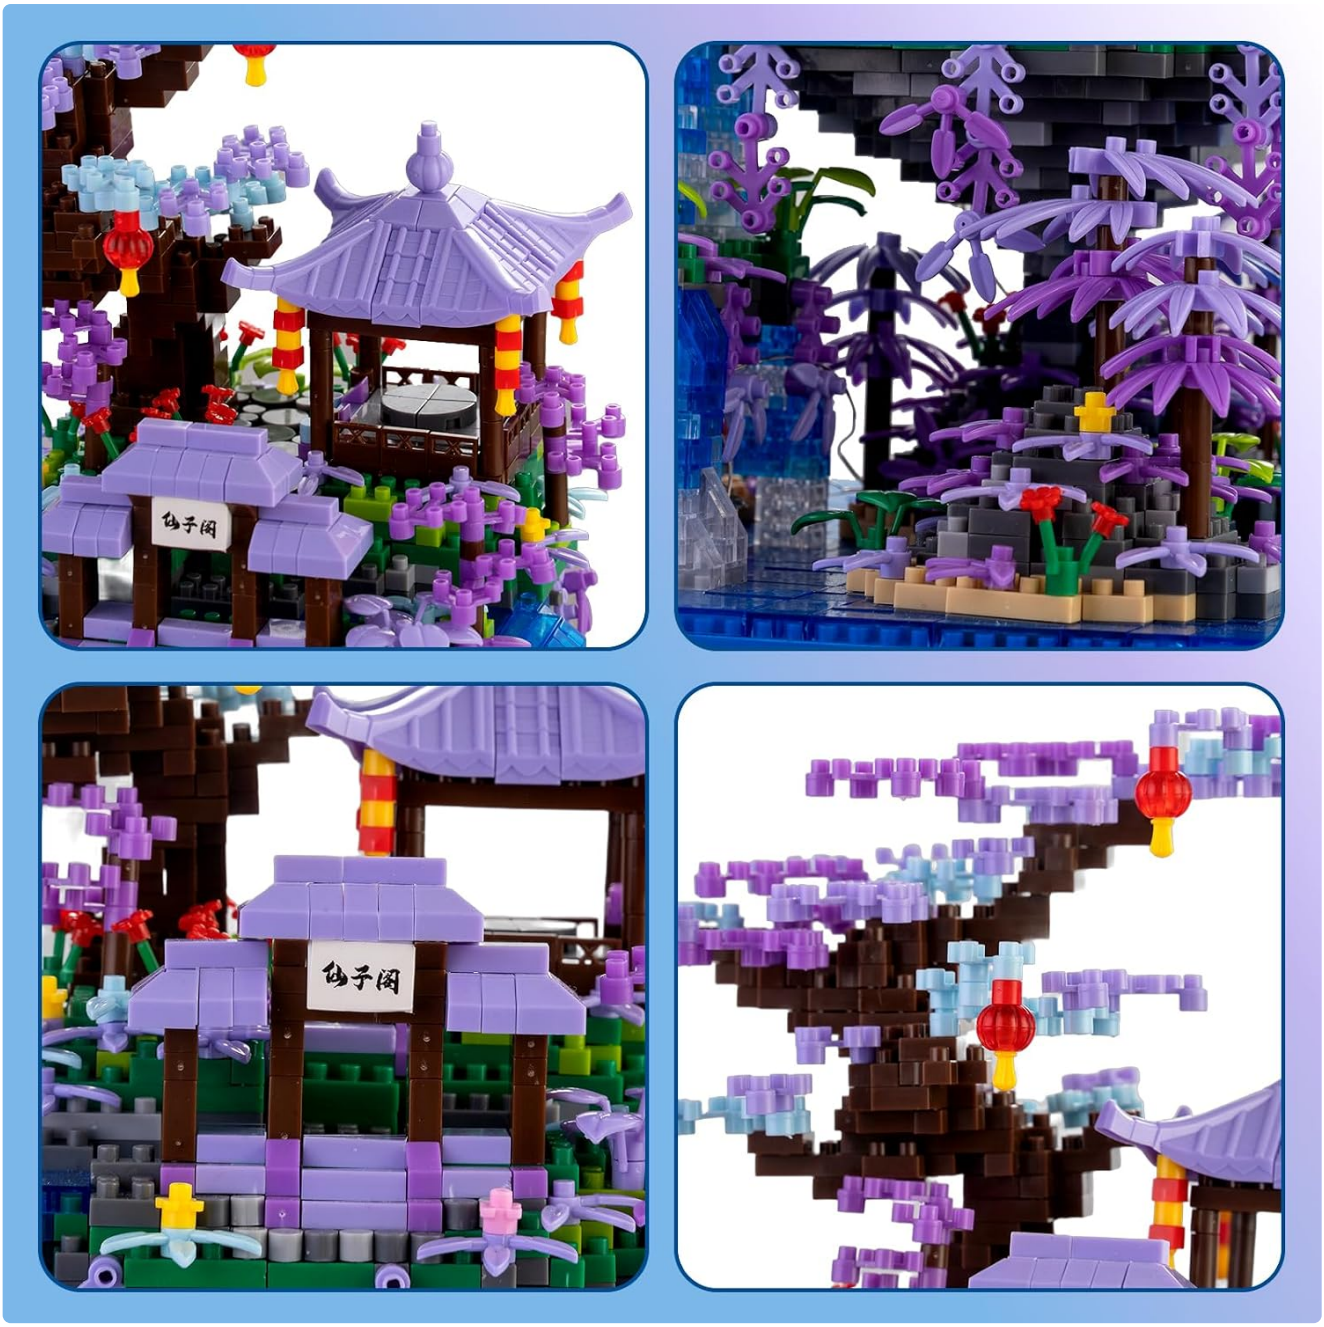


Image: Various close-up views illustrating the detailed construction of the pavilion, waterfall, and tree branches.

4. LED Lighting Installation

Integrate the LED lighting groups as indicated in the manual. These lights are designed to enhance the visual appeal of the model. Carefully route the wires to avoid damage and ensure they are discreetly hidden within the structure. The set features three variable lighting groups for different atmospheric effects.



Image: The Peach Blossom Pond set with LED lights activated, creating a vibrant display.

5. Final Touches

Attach any remaining decorative elements, such as lanterns or small flowers, to complete the model. Double-check all connections to ensure stability.

Display Case Assembly

The transparent acrylic display cover is designed to protect your assembled model from dust and damage while providing a clear view.

1. Unpack Components

Carefully remove all acrylic panels from their protective film. Identify the base, top, and four side panels.

2. Assemble Panels

Slot the side panels into the grooves of the base. Ensure they fit snugly. Then, place the top panel onto the

assembled sides. The design allows for a secure, interlocking fit.

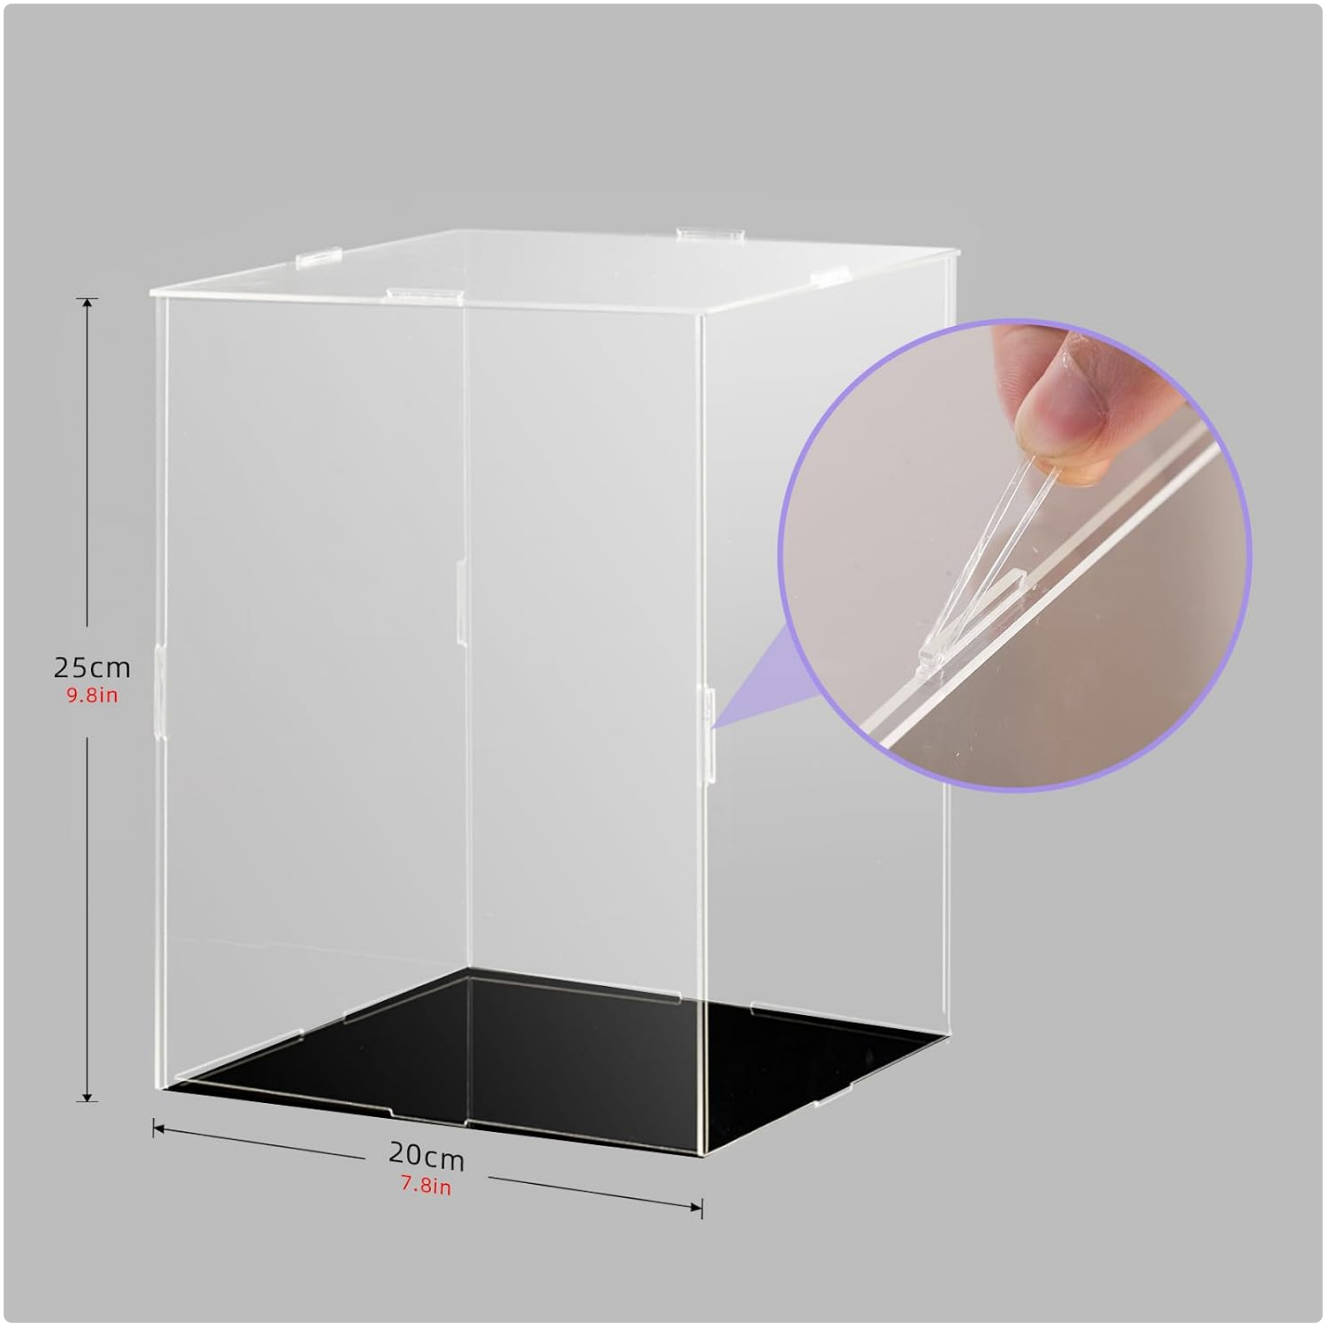


Image: Diagram illustrating the dimensions and assembly method for the acrylic display case.

3. Place Model Inside

Once the display case is assembled, carefully place your completed Peach Blossom Pond model inside. The case provides an elegant presentation for your creation.



Image: The completed model showcased within the transparent acrylic display case.

Care and Maintenance

- To clean the building blocks, gently wipe with a dry, soft cloth. Avoid using harsh chemicals or abrasive materials.
- For the acrylic display case, use a soft, damp cloth and mild soap if necessary. Do not use ammonia-based cleaners, as they can damage acrylic.
- Store the set away from direct sunlight and extreme temperatures to prevent discoloration or warping of the plastic components.
- If disassembling, keep all small parts organized to prevent loss.

Troubleshooting

Missing or Damaged Parts

If you find any parts are missing or damaged upon opening the package, please contact CAXIMSY customer

support with your purchase details. Do not attempt to force ill-fitting parts.

Difficulty with Assembly

The micro-bricks require precision. If a section is difficult to assemble, re-examine the instruction manual carefully. Sometimes, a slight adjustment in angle or pressure is needed. Ensure all previous steps are correctly completed before proceeding.

LED Lights Not Functioning

Check that the LED lighting components are correctly connected and that any power source (e.g., batteries, if applicable) is properly installed and functional. Ensure wires are not pinched or damaged.

Specifications

Feature	Detail
Product Dimensions (Assembled Model)	7.87 x 7.87 x 9.84 inches (20 x 20 x 25 cm)
Item Weight	2.86 pounds
Model Number	M2073
Recommended Age	6 - 20 years
Number of Pieces	2500+
Lighting	Integrated LED with three variable groups
Display Case Material	Acrylic

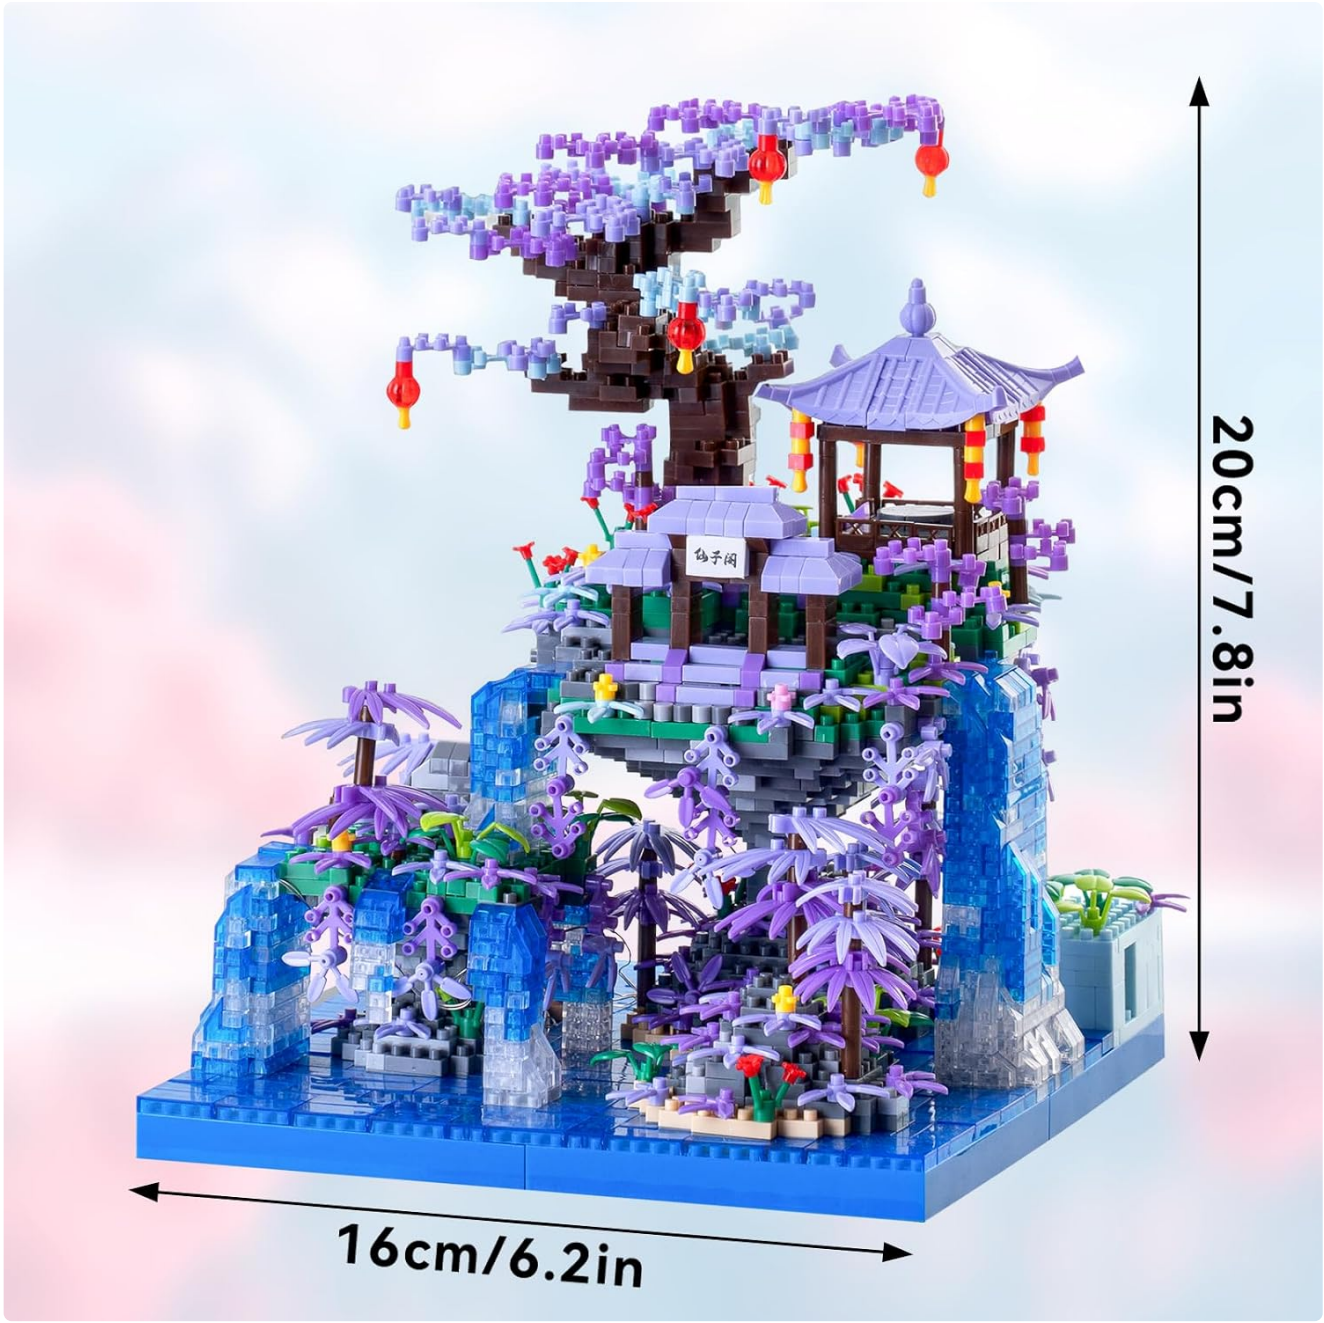


Image: Dimensions of the assembled Peach Blossom Pond model.

Warranty and Support

CAXIMSY is committed to providing high-quality products. For any questions, concerns, or support needs regarding your Peach Blossom Pond Building Blocks Set, please refer to the contact information provided with your purchase or visit the official CAXIMSY website. Please retain your proof of purchase for warranty claims, if applicable.

© 2025 CAXIMSY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D12H3D3N

More documents and user manuals: **https://manuals.plus/**