Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

saschedross AC Adapter for Xerox XG-90D/XG-91D

saschedross AC Adapter User Manual for Xerox XG-90D, XG-91D LCD Monitors

Model: AC Adapter for Xerox XG-90D/XG-91D

Introduction

This manual provides essential instructions for the safe and efficient use of your saschedross AC Adapter, designed as a replacement power supply for Xerox XG-90D and XG-91D 19-inch LCD monitors. Please read this manual thoroughly before installation and operation.

Product Components

The saschedross AC Adapter package includes the main adapter unit and a detachable AC power cord.



Image: Detachable AC power cord. This cord connects the adapter to a standard wall outlet.

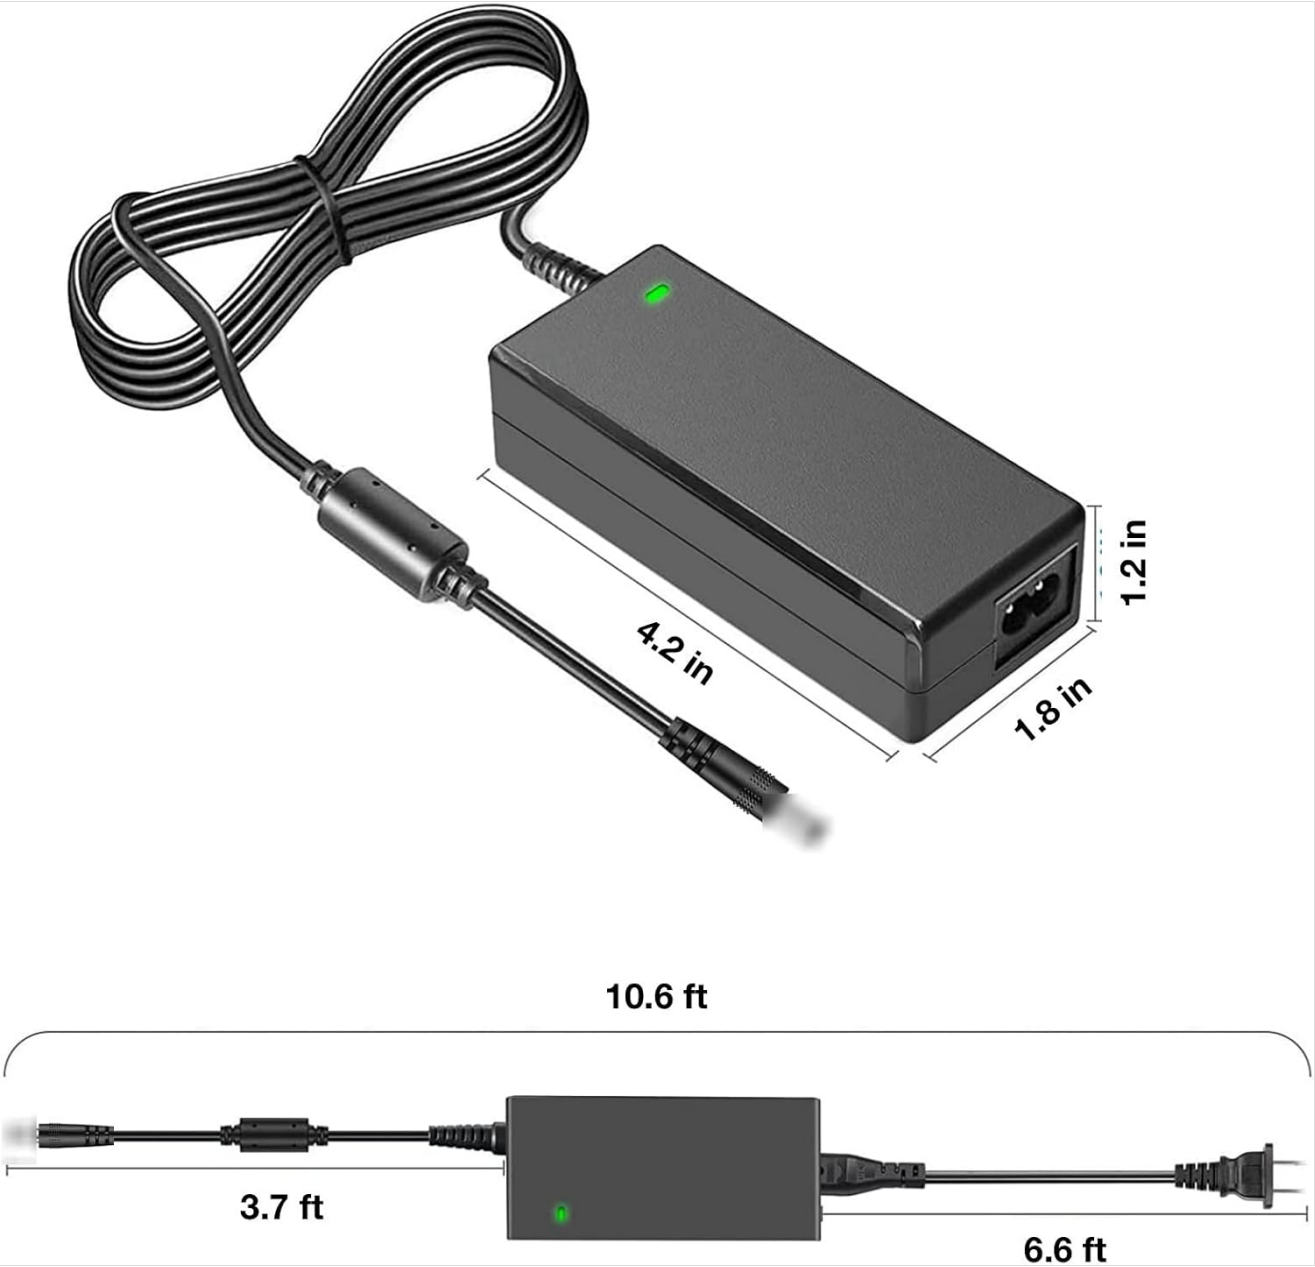


Image: AC Adapter unit with key dimensions. The adapter body measures approximately 4.2 inches in length, 1.8 inches in width, and 1.2 inches in height. The total cable length from the wall plug to the monitor connector is approximately 10.6 feet, with the DC output cable being 3.7 feet and the AC input cable being 6.6 feet.

Setup Instructions

1. **Connect the AC Power Cord:** Insert the 2-pin connector of the AC power cord firmly into the corresponding input port on the saschedross AC Adapter unit.
2. **Connect to Monitor:** Plug the DC output connector from the AC Adapter into the power input port of your Xerox XG-90D or XG-91D LCD monitor. Ensure a secure connection.
3. **Connect to Power Outlet:** Insert the two-prong plug of the AC power cord into a standard 110V AC wall outlet.



Image: AC Adapter connected to a wall outlet. The green indicator light on the adapter signifies that power is being supplied.

Once connected, the green LED indicator on the adapter unit should illuminate, indicating that power is being supplied.

Operating Instructions

The saschedross AC Adapter operates automatically once connected to a power source and your monitor. It provides a stable 12V DC output to power your compatible Xerox LCD monitor. The green indicator light on the adapter confirms active power delivery.

Maintenance

- **Cleaning:** Disconnect the adapter from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface of the adapter. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cables to prevent damage.
- **Safety:** Do not expose the adapter to water or excessive moisture. Do not attempt to open or repair the adapter,

as this will void any potential warranty and may cause electrical hazard.

Troubleshooting

- **No Power / Monitor Not Turning On:**
  - Ensure all cable connections are secure and fully inserted into their respective ports.
  - Verify that the wall outlet is functional by testing it with another device.
  - Check if the green LED indicator on the adapter is illuminated. If not, recheck connections or try a different outlet.
  - Confirm that your monitor is compatible with this 12VDC 5Amp power supply.
- **Adapter Overheating:**
  - Ensure the adapter is placed in a well-ventilated area and not covered.
  - If overheating persists, disconnect the adapter immediately and contact support.

Specifications

Input Voltage	110V AC
Output Voltage	12V DC
Output Current	5 Amp
Connector Type (AC Cord)	2-Pin
Compatible Devices	Xerox XG-90D, XG-91D 19" LCD Monitors
Adapter Body Dimensions (L x W x H)	4.2 in x 1.8 in x 1.2 in (approximate)
Total Cable Length	10.6 ft (approximate)

Warranty and Support

For warranty information or technical assistance, please contact the seller directly through your purchase platform. Keep your purchase receipt or order number handy for faster service.

© 2024 saschedross. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1BPF3Q3

More documents and user manuals: **https://manuals.plus/**