Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY BN59-01439D BN59-01439A BN59-01439L

ALLIMITY Replacement Remote Control User Manual

Model: BN59-01439D, BN59-01439A, BN59-01439L

1. Introduction and Overview

This manual provides instructions for the ALLIMITY BN59-01439D replacement remote control, designed for use with various Samsung Smart TV models. This remote serves as a direct replacement and includes dedicated shortcut buttons for popular streaming services.

Compatible Samsung Smart TV Models:

- QN77S95CAFXZA
- QN77S90CAFXZA
- QN55S95CAFXZA
- QN65S95CAFXZA
- QN55S90CAFXZA
- QN65S90CAFXZA



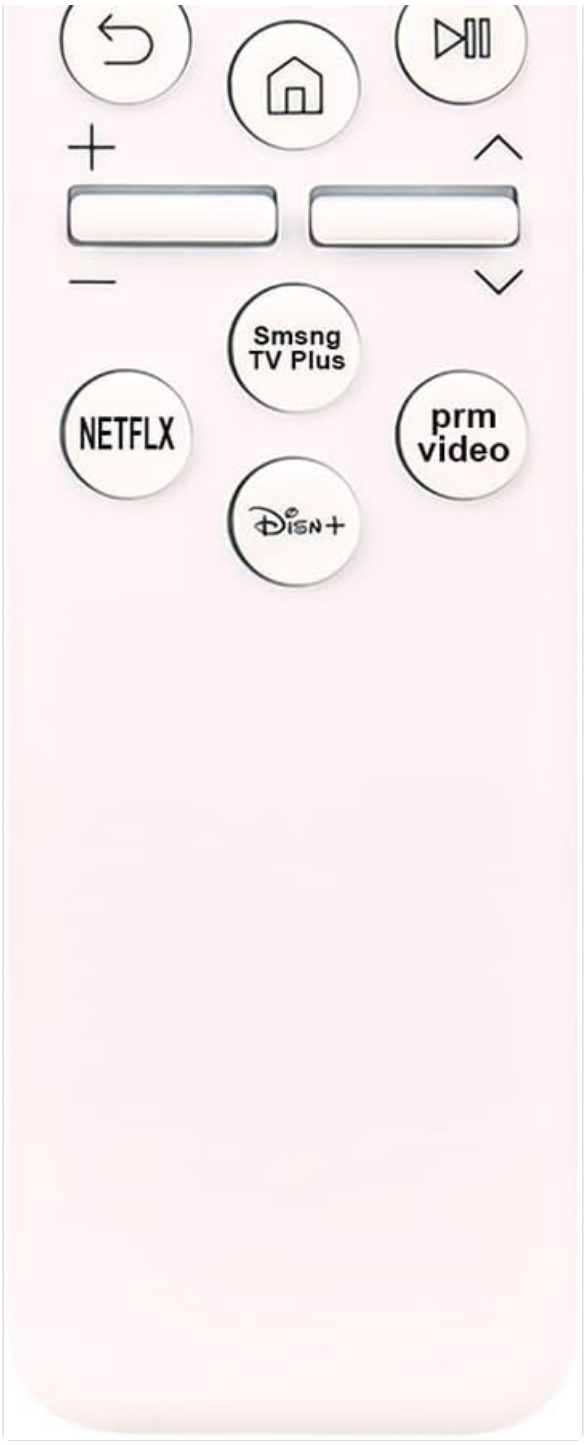


Figure 1.1: Front view of the ALLIMITY Replacement Remote Control.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No additional setup or programming is required for basic functions after battery installation.


R03 AAA 1.5V
R03 AAA 1.5V



Figure 2.1: Battery compartment of the remote control.

2.2 Pairing for Voice Function (Magic Function)

For the voice control (Magic Function) to work, the remote needs to be paired with your Samsung Smart TV. Refer to your TV's user guide for specific pairing instructions. Generally, the process involves:

- Ensuring your TV is powered on.
- Pressing and holding specific buttons on the remote (often the "Return" and "Play/Pause" buttons simultaneously, or a dedicated pairing button if available on your TV model) until a pairing message appears on your TV screen.
- Following the on-screen prompts to complete the pairing process.

If pairing is unsuccessful, please refer to the Troubleshooting section or contact customer support.



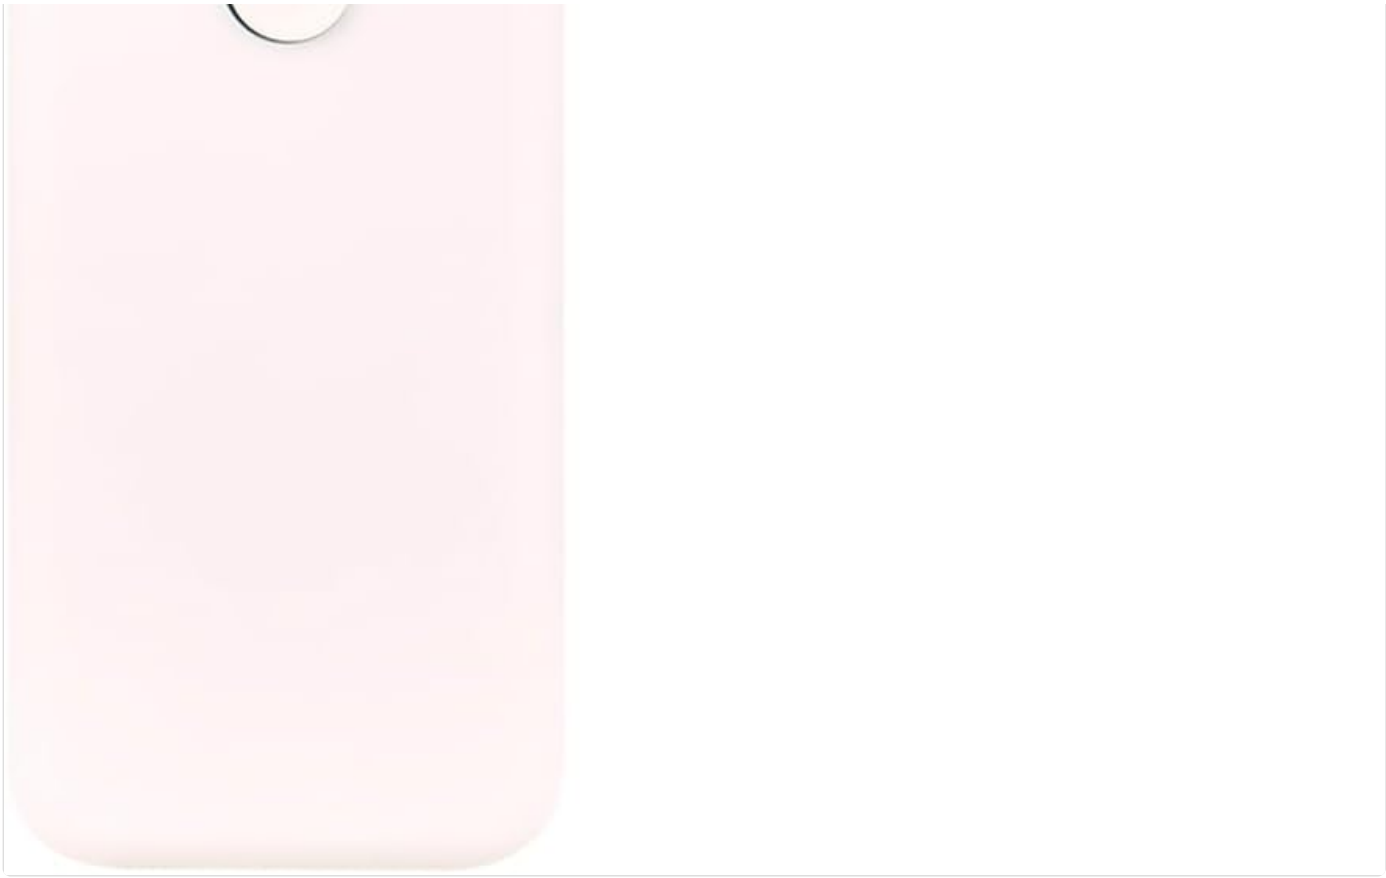


Figure 2.2: Voice control button on the remote.

3. Operating the Remote Control

This remote control provides intuitive access to your Samsung Smart TV's functions. Below are descriptions of key buttons:

Button	Function
Power ( )	Turns the TV on or off.
Voice ( )	Activates voice control for commands and searches (requires pairing).
Navigation Ring (Up, Down, Left, Right, Enter)	Navigates menus and selects items.
Back (↩)	Returns to the previous screen or menu.
Home ( )	Accesses the Smart Hub or Home screen.
Play/Pause ( )	Controls media playback.
Volume (+/-)	Adjusts the TV volume.
Channel (Up/Down)	Changes TV channels.
Netflix	Direct access to the Netflix application.
Prime Video	Direct access to the Amazon Prime Video application.
Samsung TV Plus	Direct access to the Samsung TV Plus service.
Disney+	Direct access to the Disney+ application.

4. Maintenance

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote not responding.	Obstruction between remote and TV.	Ensure a clear line of sight between the remote and the TV's IR receiver.
Voice function not working.	Remote not paired with TV.	Refer to Section 2.2 "Pairing for Voice Function" and your TV's user manual to pair the remote.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote as described in Section 4.2 "Cleaning".

6. Specifications

Feature	Detail
Model Numbers	BN59-01439D, BN59-01439A, BN59-01439L, BN59-01456A, BN59-01456D, TM2361E
Compatible Devices	Samsung Smart TVs (specific models listed in Section 1)
Power Source	2 x AAA Alkaline Batteries (not included)
Dimensions (L x W x H)	6 x 2 x 0.5 inches (approximately 15.2 x 5.1 x 1.3 cm)
Weight	1.44 ounces (approximately 40.8 grams)
Color	White
Special Feature	Ergonomic design, Voice Control (requires pairing)



15.2 cm / 5.98 in
123
Smsng
TV Plus
NETFLX
prm
video
DISN+

Figure 6.1: Remote Control Dimensions.

7. Warranty and Support

This product is designed to be a reliable replacement remote control. While specific warranty details are not provided in this manual, if you encounter any issues with the remote control, particularly with pairing the voice function, please contact the seller or manufacturer directly for assistance.

For technical support or troubleshooting beyond the scope of this manual, please reach out to the point of purchase or the manufacturer's customer service channels.

© 2024 ALLIMITY. All rights reserved.
Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1CFKF5C

More documents and user manuals: **https://manuals.plus/**