Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nokia TA-1547

Nokia 105 4G User Manual

Model: TA-1547

Introduction

The Nokia 105 4G is a reliable and easy-to-use mobile phone designed for clear communication and essential features. It supports 4G VoLTE for enhanced call quality and includes features like FM radio and games for entertainment. Its user-friendly interface with zoomed menus and Readout text-to-speech function makes navigation simple.

What's in the Box

- Nokia 105 4G Mobile Phone
- Power Adapter
- USB Cable
- 1 Lithium Ion battery (pre-installed or included separately)

Setup

1. Inserting the SIM Card and Battery

Ensure the phone is powered off before inserting or removing the SIM card or battery.

1. Remove the back cover of the phone by gently prying it open from the notch.
2. If the battery is installed, remove it.
3. Locate the SIM card slot(s). The Nokia 105 4G supports Dual SIM. Insert your SIM card(s) into the designated slot(s) with the gold contacts facing down.
4. Insert the battery, aligning the contacts.
5. Replace the back cover, pressing firmly until it clicks into place.

2. Charging the Battery

The phone comes with a rechargeable Lithium Ion battery. For optimal performance, fully charge the battery before first use.

1. Connect the USB cable to the phone's micro USB port (located at the bottom).
2. Connect the other end of the USB cable to the power adapter.
3. Plug the power adapter into a wall outlet.

4. The battery indicator on the screen will show charging progress. A full charge takes approximately 3 hours.
5. Once fully charged, disconnect the charger.



Figure 1: Front view of the Nokia 105 4G, highlighting the display and physical keypad.

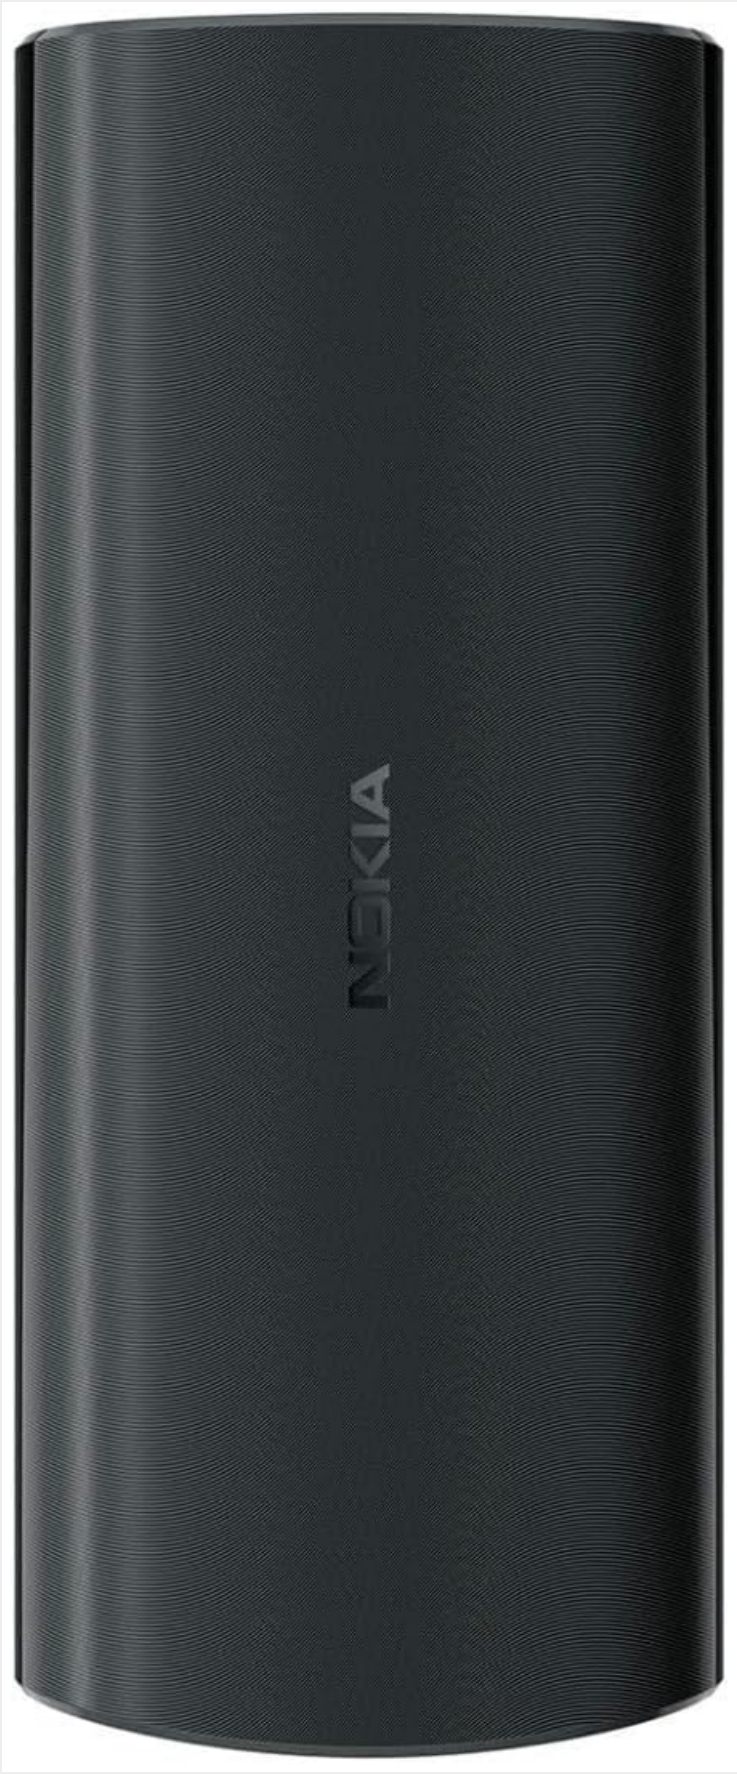


Figure 2: Back view of the Nokia 105 4G, illustrating the textured design.

Operating Instructions

Power On/Off

- To power on, press and hold the Power key (usually the red end call button) until the Nokia logo appears.

- To power off, press and hold the Power key, then select 'Power off' from the options.

Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key (usually the green button) to initiate the call.
3. To end a call, press the End Call key (red button).

Sending Messages

1. From the main menu, navigate to 'Messages'.
2. Select 'Create message' or 'New message'.
3. Enter your message using the keypad.
4. Enter the recipient's phone number or select from contacts.
5. Select 'Send'.

Menu Navigation

Use the navigation pad (center button with directional arrows) to move through menus and select options. The Nokia 105 4G features zoomed menus and Readout text-to-speech for easier navigation.



Figure 3: Example of the phone's menu interface with application icons.

FM Radio and Games

- To access FM radio, navigate to the 'FM Radio' application in the menu. You can listen to FM radio without attaching earphones.
- The phone comes with pre-installed games. Access them via the 'Games' menu option.

Maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold temperatures. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in this manual.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.

Troubleshooting

Problem	Possible Solution
Phone does not power on or is stuck in a loop.	Ensure the battery is properly inserted and charged. Try removing and reinserting the battery. If the issue persists, contact customer support.
Cannot make or receive calls/texts.	Check if the SIM card is correctly inserted. Verify that your network carrier is supported by the Nokia 105 4G (GSM carriers like T-Mobile and T-Mobile subsidiaries are compatible; AT&T, Cricket, Verizon, or their subsidiaries are not). Check network signal strength.
Low call volume.	Adjust the call volume using the phone's settings. Ensure the speaker is not obstructed.
Battery drains quickly.	Ensure the phone is fully charged. Reduce screen brightness. Close unused applications. Battery life can vary based on usage.
Messages not opening.	Restart the phone. Check if there is sufficient memory. If the issue persists, it might be a software glitch; consider a factory reset (back up data first) or contact support.

Specifications

Feature	Detail
Model Name	105 4G (TA-1547)
Brand	Nokia
Product Dimensions	4.78 x 1.97 x 0.57 inches
Item Weight	3.35 ounces
Color	Charcoal
Screen Size	1.8 Inches
Resolution	160 x 120
Battery Capacity	1450 mAh (Lithium Ion)
Phone Talk Time	Up to 24 Hours
Charging Time	Approximately 3 Hours
Memory Storage Capacity	128 MB
RAM Memory Installed Size	512 MB
Wireless Carrier Compatibility	Unlocked GSM carriers (e.g., T-Mobile and T-Mobile subsidiaries). Not compatible with AT&T, Cricket, Verizon, or their subsidiaries.
Cellular Technology	4G

Feature	Detail
Connectivity Technology	Bluetooth, USB
Special Features	Basic Phone, Dual SIM, Expandable Memory, FM Radio, LED Flashlight, Games
Audio Jack	3.5 mm
Manufacturer	HMD Global Oy
Country of Origin	China

Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Nokia support website. Keep your proof of purchase for warranty claims.
For further assistance, you may contact Nokia customer service directly.

© 2024 Nokia. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1DN7HMG

More documents and user manuals: **https://manuals.plus/**