Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PUPKIDS non

PUPKIDS Dog Bark Deterrent Device

User Manual

Product Overview

The PUPKIDS Dog Bark Deterrent Device is an advanced ultrasonic solution designed to help manage and reduce excessive barking in dogs. This device utilizes safe and harmless ultrasonic waves, inaudible to humans, to gently discourage barking behavior. It features dual speakers for effective coverage and multiple adjustable modes to suit various dog personalities and training needs.

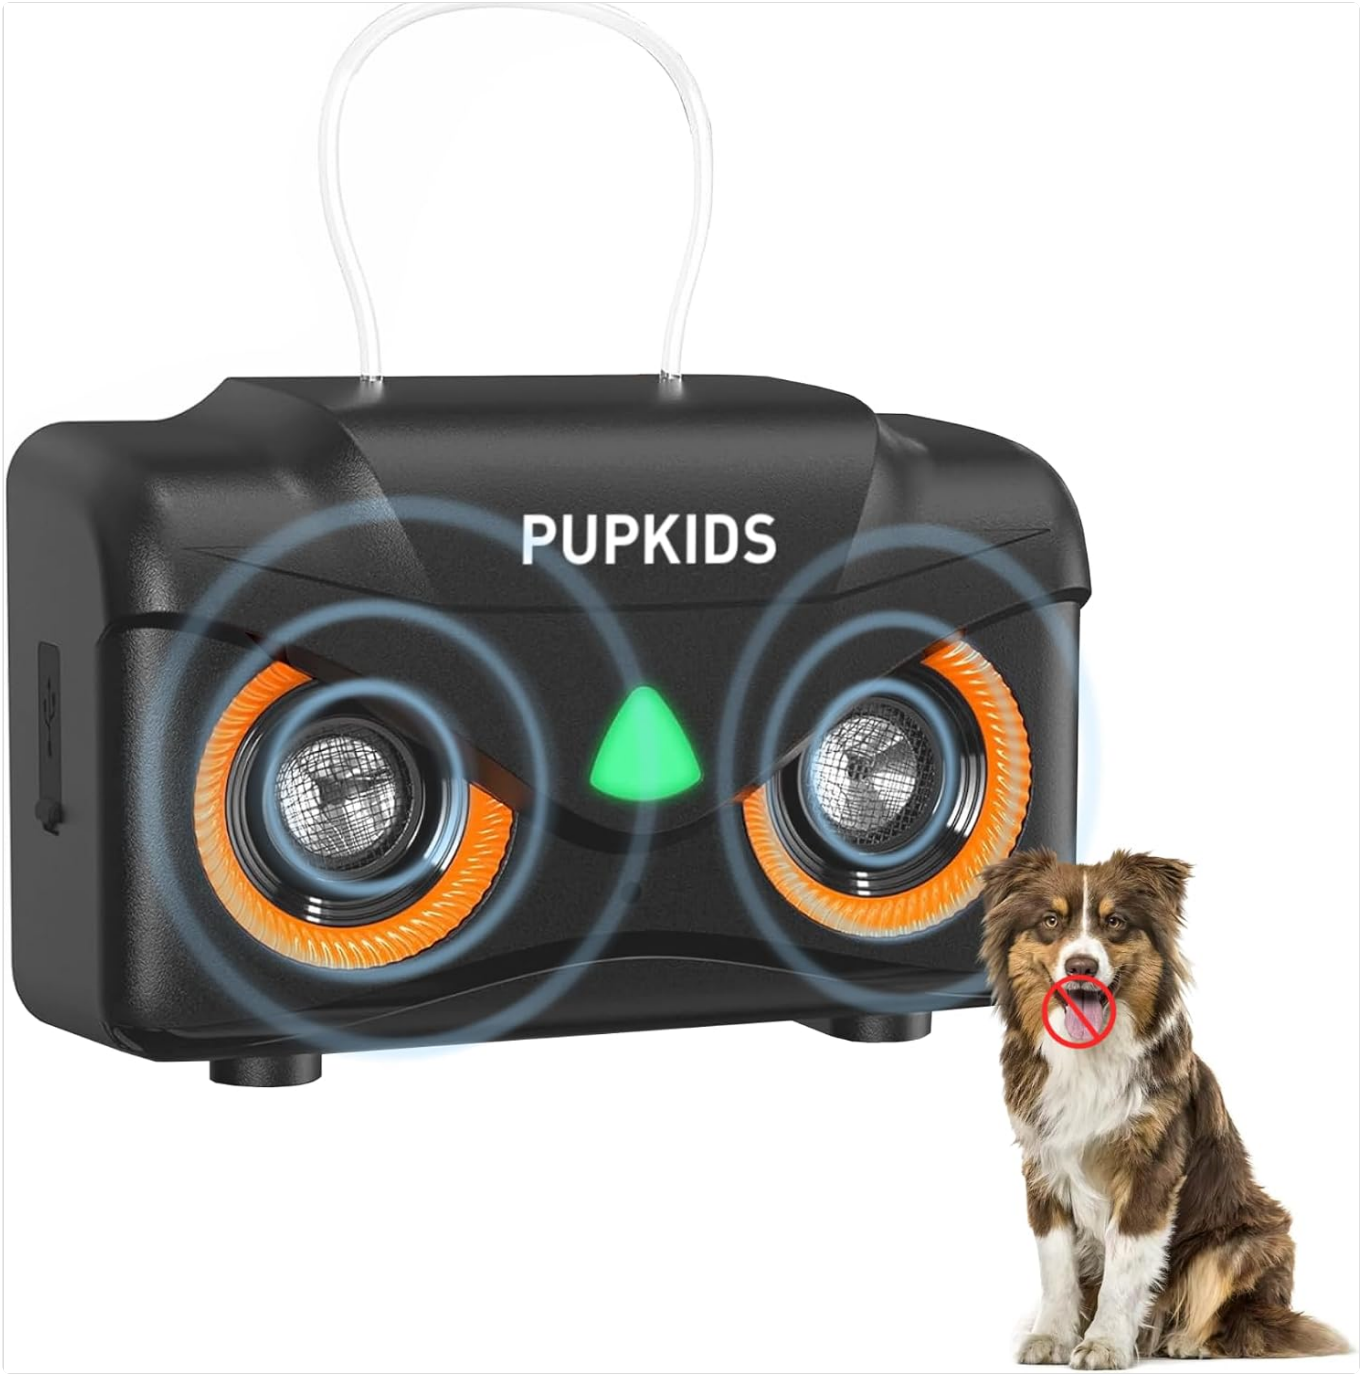


Image: The PUPKIDS Dog Bark Deterrent Device, a black rectangular unit with two orange-ringed speakers and a green LED indicator, shown next to a dog.

Key Features:

- **Automatic & Dual Speaker:** Automatically senses dog barking and emits ultrasonic waves through two powerful speakers.
- **3 Adjustable Ultrasonic Modes:** Offers different frequencies (pulsed, continuous, variable) for various dog temperaments.
- **50FT Effective Range:** Provides wide coverage for both indoor and outdoor use.
- **Rechargeable & Long-Lasting:** Fully charges in 2-3 hours and offers up to 30 days of standby time.
- **Safe and Harmless:** Designed specifically for a dog's hearing range, inaudible to humans, and causes no harm to pets.
- **Lightweight & Portable:** Easy to carry and can be mounted on walls, fences, or windows.

Safety Information and Precautions

To ensure the safe and effective use of your PUPKIDS Dog Bark Deterrent Device, please observe the following guidelines:

- This device is designed for dogs aged **6 months to 8 years old**. Do not use on puppies younger than 6 months or senior dogs older than 8 years.
- Avoid using the device on **aggressive dogs**, as it may not be effective and could potentially exacerbate behavioral issues.
- Do not use on **old, sick, or pregnant dogs**. Consult a veterinarian if you have concerns about your dog's health.
- This device is most effective in single-pet households or for targeting a specific barking dog. Its effectiveness may be reduced in environments with **more than one pet family**, as it emits a general ultrasonic sound.
- The device is durable and water-resistant but is **not recommended for use under heavy rain**
- Always ensure the device is placed in a location where the ultrasonic waves can reach the dog without obstruction.



Image: Four panels illustrating situations where the device should not be used: dogs under 6 months or over 8 years, more than one pet family, aggressive dogs, and old/sick/pregnant dogs.

What's Included

Your PUPKIDS Dog Bark Deterrent Device package includes:

- PUPKIDS Dog Bark Deterrent Device
- User Manual
- Charging Cable

Setup and Charging

Before first use, ensure the device is fully charged.

1. **Charging the Device:** Connect the provided charging cable to the charging port on the device and to a standard USB power source. The LED indicator will show charging status. A full charge typically takes 2-3 hours. Once fully charged, the device can operate for up to 30 days on standby.
2. **Placement:** Position the device within 50 feet of the area where the dog typically barks. It can be placed indoors on a flat surface or mounted on a wall, fence, or window outdoors. Ensure there are no significant obstructions between the device and the dog.

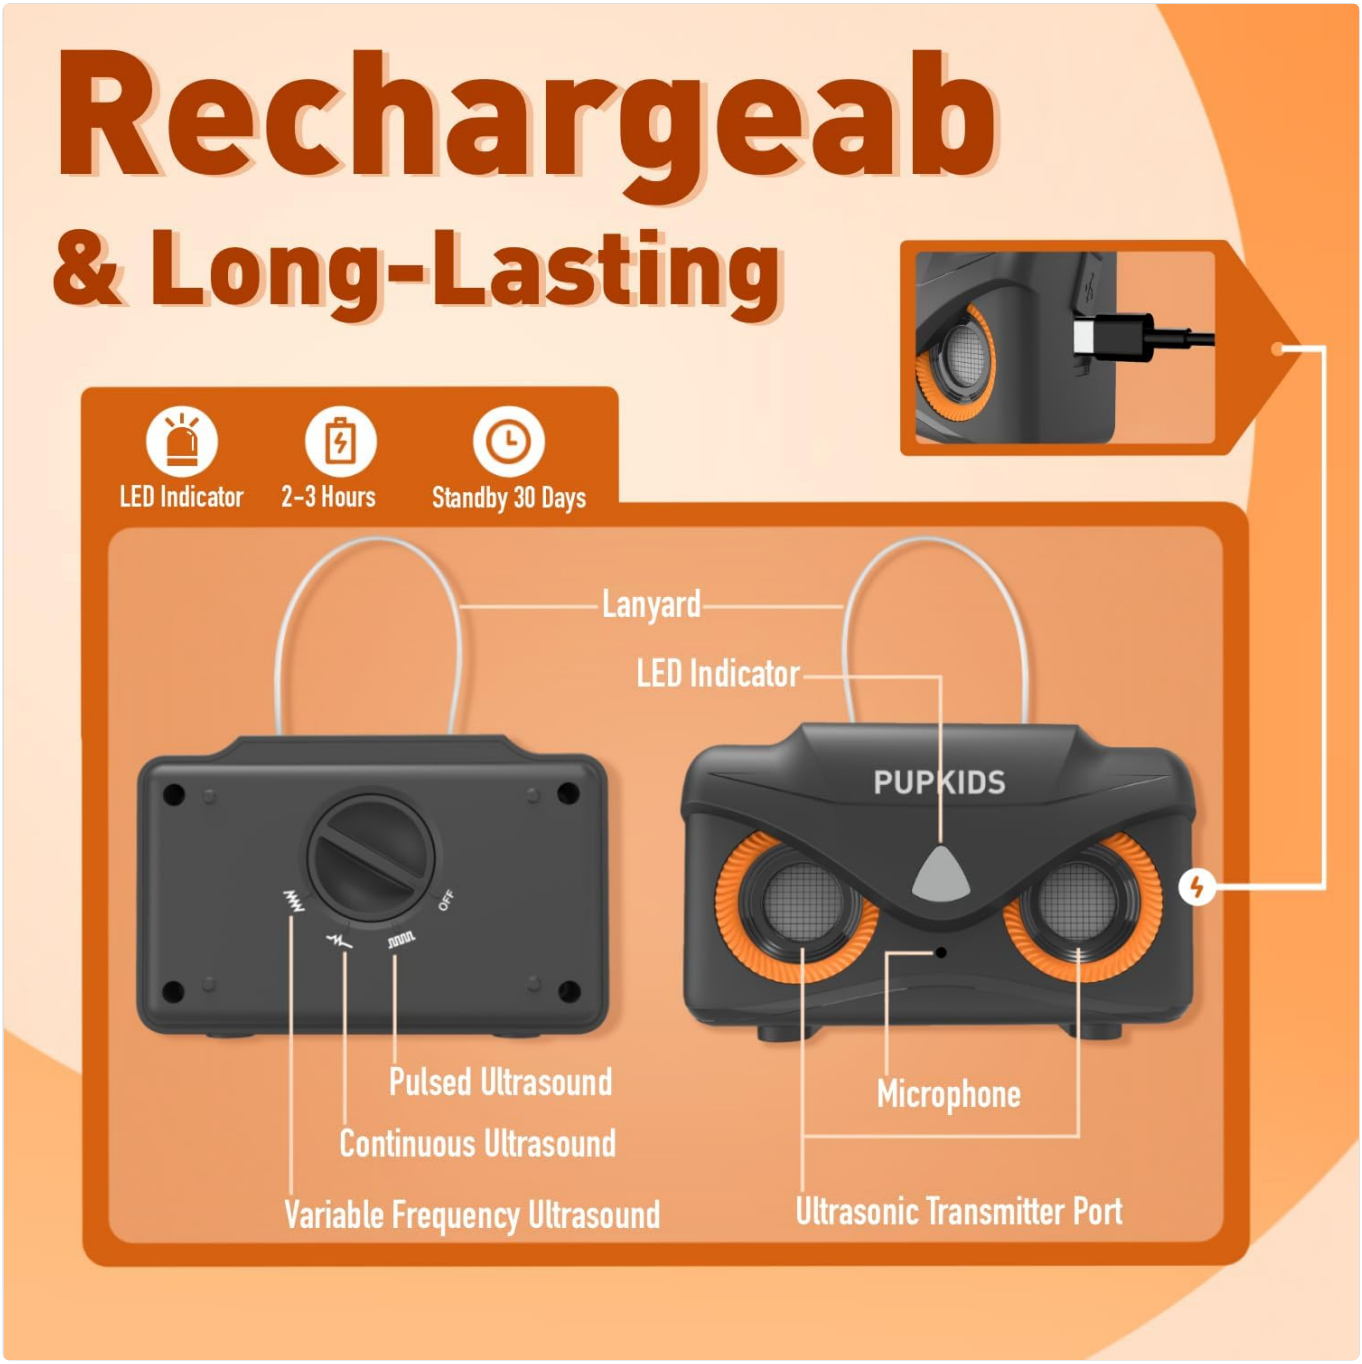


Image: Diagram showing the device's charging port, LED indicator, microphone, ultrasonic transmitter ports, and the mode selection dial on the back.



Image: Two panels illustrating the device's effective range, showing it placed indoors on a couch and outdoors on a fence, with dogs nearby.

Operating Instructions

The device automatically detects barking and emits ultrasonic sound. You can select one of three modes based on your dog's personality and responsiveness.

1. **Power On/Off:** Locate the rotary switch on the back of the device. Turn the switch from "OFF" to one of the mode settings to power on the device.
2. **Selecting a Mode:**
    - **Mode 1 (Pulsed Ultrasound - 25.29 kHz):** Suitable for *Obedient Dogs*. This mode emits pulsed ultrasonic waves.
    - **Mode 2 (Continuous Ultrasound - 24.99 kHz):** Suitable for *Naughty Dogs*. This mode emits continuous ultrasonic waves.
    - **Mode 3 (Variable Frequency Ultrasound - 23-25-27 kHz):** Suitable for *Quiet Dogs*. This mode emits variable frequency ultrasonic waves.

Rotate the switch to the desired mode (indicated by symbols or numbers next to the switch). It is recommended to test different modes to find the most effective setting for your dog.

3. **Automatic Operation:** Once a mode is selected, the device will automatically sense barking sounds via its microphone and emit the corresponding ultrasonic wave. The green LED indicator may light up when activated.



Image: Diagram illustrating the three ultrasonic modes (Pulsed, Continuous, Variable Frequency) and their recommended use for Obedient, Naughty, and Quiet dogs, respectively.

Maintenance

To ensure the longevity and optimal performance of your device:

- **Cleaning:** Wipe the device periodically with a soft, dry cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Charging:** Recharge the device when the battery indicator suggests low power, or approximately every 30 days if on standby, to maintain battery health.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place.



Image: Four panels showing the device's suitability for indoor, outdoor, and wild environments, and a note that it is not recommended for use under heavy rain.

Troubleshooting

If you encounter issues with your PUPKIDS Dog Bark Deterrent Device, please refer to the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device not activating or not effective.	Low battery; incorrect mode selected; obstructions; dog is outside effective range; dog is not suitable for ultrasonic training.	Ensure the device is fully charged. Try switching to a different ultrasonic mode (Mode 1, 2, or 3). Verify the device is within 50 feet of the dog and has a clear line of sight. Confirm the dog's age and temperament are suitable for this device (refer to Safety Information).
LED indicator not lighting up.	Device is off; battery is completely drained; device malfunction.	Turn the mode switch to an active setting. Charge the device for 2-3 hours. If issues persist after charging and mode selection, contact customer support.

Specifications

Feature	Detail
Brand	PUPKIDS
Model Name	non
Item Weight	6.4 ounces
Item Package Dimensions (L x W x H)	3.94 x 3.03 x 2.68 inches
Color	Orange
Effective Range	Up to 50 feet
Battery Life (Standby)	Up to 30 days
Charging Time	2-3 hours
Recommended Age Range	More than 6 months (up to 8 years)

Warranty Information

The PUPKIDS Dog Bark Deterrent Device comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

For warranty service or inquiries, please contact PUPKIDS customer support.

Customer Support

PUPKIDS is committed to providing excellent customer service. If you have any questions, concerns, or require assistance with your device, please do not hesitate to contact us.

Email: support@pupkids.net

Our support team aims to respond to all inquiries within 24 hours, 7 days a week.

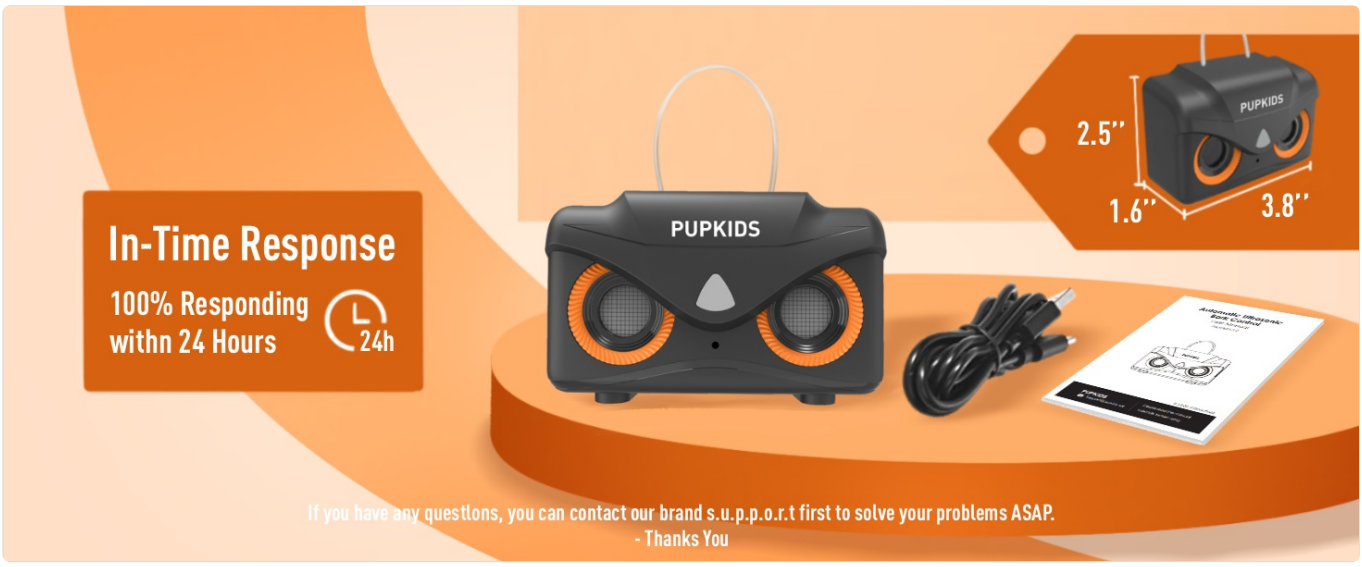


Image: Graphic indicating "In-Time Response" and "100% Responding within 24 Hours", along with the product, charging cable, and user manual.

© 2024 PUPKIDS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1JSVL9C

More documents and user manuals: **https://manuals.plus/**