Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PopoIron WN01

PopoIron Portable Sound Machine WN01 User Manual

Model: WN01

Product Overview

The PopoIron Portable Sound Machine WN01 is a compact device designed to provide a soothing audio environment for improved sleep, relaxation, and concentration. It features 17 non-looping sounds, adjustable volume, and a timer function, all within an ultra-slim, portable design.



Image: Front view of the PopoIron Portable Sound Machine WN01.

Its ultra-slim profile makes it ideal for travel and discreet use, easily fitting into pockets or small bags.

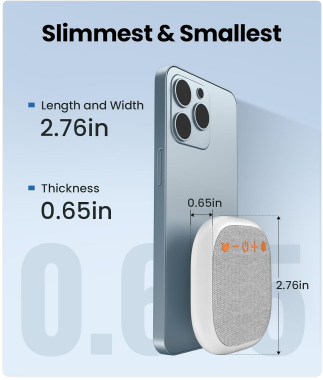


Image: Sound machine demonstrating its slimness next to a smartphone.



Image: Sound machine being packed into a travel bag, highlighting its portability.

Safety Information

Please read and understand the following safety guidelines before using the device:

- Use caution when handling batteries.
- This product is not a toy and should be kept out of reach of children without adult supervision.
- Do not expose the device to extreme temperatures or moisture.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

Package Contents

- PopoIron Portable Sound Machine WN01
- Type-C Charging Cable
- User Guide

Device Layout

Familiarize yourself with the buttons and ports on your PopoIron Sound Machine.



Image: Detailed view of the device's control panel, showing the Power Button, Volume controls, White Noise Button, Music Button, Type-C Charging Port, and Charging Indicator.

- **Power Button:** Turns the device on or off.
- **Volume -** / **+:** Adjusts the sound volume.
- **White Noise Button:** Cycles through white noise sound options.
- **Music Button:** Cycles through nature sounds and lullabies.
- **Timer Button:** Sets the auto-off timer (30/60/90 minutes) or continuous play.
- **Type-C Charging Port:** For connecting the charging cable.
- **Charging Indicator:** Shows battery status during charging.

Setup

Charging the Device

Before first use, fully charge your PopoIron Sound Machine. A full charge takes approximately 2.5 hours and provides up to 30 hours of usage at the lowest volume setting.

1. Connect the provided Type-C charging cable to the charging port on the device.
2. Plug the other end of the cable into a compatible USB power source (e.g., power bank, laptop, or wall adapter).
3. The charging indicator lights will illuminate to show charging progress. All lights will be solid when fully charged.



Image: The sound machine charging via its Type-C port, with indicator lights visible.

Operating Instructions

Power On/Off

- To power on, press and hold the **Power Button** until the device activates.
- To power off, press and hold the **Power Button** again until the device shuts down.

Sound Selection

The device offers 17 non-looping sounds, categorized into white noise and other soothing sounds.

- Press the **White Noise Button** to cycle through various white noise options (white noise, green noise, pink noise, brown noise, fan).
- Press the **Music Button** to cycle through nature sounds and lullabies (shushing, birds, rain, waves, insects, campfire, streams, Buddhist bell, lullaby).

Volume Adjustment

The volume can be adjusted across 20 levels.

- Press the **Volume +** button to increase the volume.
- Press the **Volume -** button to decrease the volume.

Timer Function

Set the device to automatically turn off after a specified period or play continuously.

- Press the **Timer Button** to cycle through timer options: 30 minutes, 60 minutes, 90 minutes, or continuous play (indicated by a specific light pattern or absence of timer lights).

Memory Function

The device automatically remembers your last selected sound and volume settings for convenience upon next power-on.

Maintenance

To ensure the longevity and optimal performance of your sound machine, follow these maintenance guidelines:

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Keep the device away from water and high humidity.
- Store in a cool, dry place when not in use.
- Avoid dropping the device or subjecting it to strong impacts.

Troubleshooting

If you encounter issues with your PopoIron Sound Machine, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device using the provided Type-C cable. Ensure the charging indicator lights are active.

Problem	Possible Cause	Solution
No sound or low volume.	Volume set too low or muted.	Press the **Volume +** button to increase the volume.
Sound stops unexpectedly.	Timer function activated or low battery.	Check the timer setting. If set, reset to continuous play or recharge the device.
Buttons are unresponsive.	Temporary software glitch.	Try turning the device off and then on again. If the issue persists, ensure the device is charged.

Specifications

Feature	Detail
Brand	PopoIron
Model Name	WN01
Dimensions (L x W x D)	2.76 x 2.76 x 0.63 inches
Weight	2.12 ounces
Sound Tracks	17 (White Noise, Nature Sounds, Lullabies)
Volume Levels	20
Charging Time	Approx. 2.5 hours
Battery Life	Up to 30 hours (at lowest volume)
Power Source	Battery Powered
Connector Type	Type C
Material	Plastic
Color	Gray

Warranty and Support

PopoIron provides lifetime 12-hour after-sales service for this product. For any questions, concerns, or technical support, please contact our customer service team. Refer to the contact information provided in your product packaging or on the official PopoIron website.

© 2024 PopoIron. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1KF1T7M

More documents and user manuals: **https://manuals.plus/**