Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EUREKA NEW400C

EUREKA NEW400C Cordless Wet Dry Vacuum Cleaner User Manual

Model: NEW400C

1. Introduction

Thank you for choosing the EUREKA NEW400C Cordless Wet Dry Vacuum Cleaner. This appliance is designed to simplify your floor cleaning routine by vacuuming and mopping simultaneously. It is suitable for various sealed hard floor surfaces, including hardwood, tile, laminate, vinyl, and marble. Please read this manual thoroughly before initial use to ensure safe and optimal operation of your device.





Image 1.1: The EUREKA NEW400C Cordless Wet Dry Vacuum Cleaner.

2. Important Safety Information

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Read all instructions before using this appliance.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filter and dirty water tank in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.

3. Product Overview

3.1 Components

The EUREKA NEW400C package includes the following items:

- Main Unit (Cordless Wet Dry Vacuum Cleaner)
- Accessory Rack
- Adapter (Charger)
- Base (Self-cleaning storage tray)
- Cleaning Brush
- Cleaning Solution
- Filter Assembly (includes 2 sponges)
- User Manual

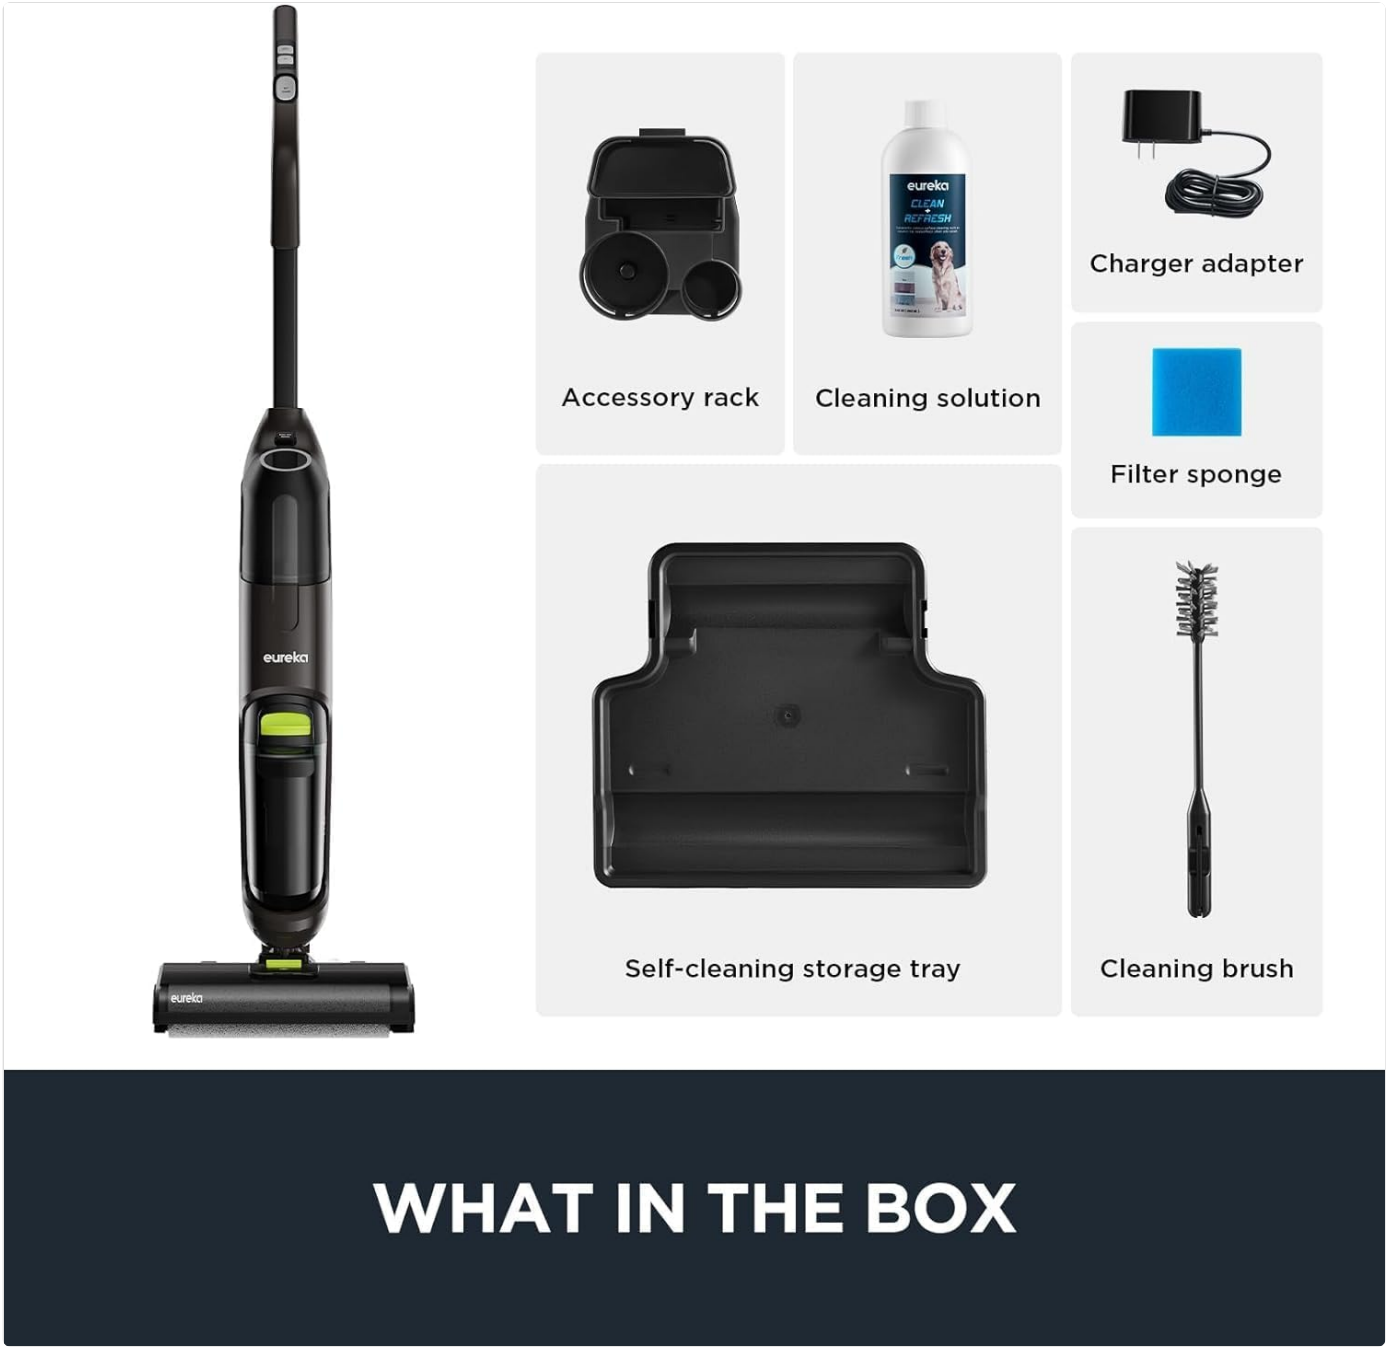


Image 3.1: What's in the Box - Main Unit, Accessory Rack, Cleaning Solution, Charger Adapter, Filter Sponge, Self-cleaning Storage Tray, and Cleaning Brush.

3.2 Key Features

- **Vacuum and Mop in One Step:** Efficiently cleans wet and dry messes simultaneously on sealed hard floors.
- **Multi-Surface Cleaning:** Effective on hardwood, tile, laminate, vinyl, and marble floors.
- **Self-Propelled Function:** Facilitates effortless movement during cleaning, reducing user fatigue.
- **Dual-Tank System:** Keeps clean water and dirty water separate, ensuring you always clean with fresh solution.
- **One-Touch Self-Cleaning System:** Automatically flushes the inner tubing and brush roller for hands-free maintenance.
- **Cordless Operation:** Provides up to 30 minutes of cleaning power on a single charge.
- **Fast, Streak-Free Drying:** Achieves up to 90% water recovery, leaving floors dry and streak-free quickly.
- **Pet Family Friendly:** Compatible with powerful sterilizing liquid to eliminate odors.
- **Upright Stop Function:** Automatically pauses operation when the machine is placed in an upright position.



Image 3.2: Vacuum and Mop in One Step.



Image 3.3: Multi-Scenario Cleaning on various hard floor surfaces.

4. Setup

4.1 Assembly

1. Carefully unpack all components from the box.
2. Insert the handle into the main body of the vacuum cleaner until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are correctly installed.

4.2 Initial Charging

1. Place the main unit onto the charging base.
2. Connect the charger adapter to the charging base and plug it into a power outlet.
3. Allow the unit to charge fully before first use. The battery indicator will show charging status. A full charge provides up to 30 minutes of runtime.



Image 4.1: Up to 30 Minutes of Runtime after a full charge.

5. Operating Instructions

5.1 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean water up to the MAX line. For enhanced cleaning, add a small amount of EUREKA cleaning solution. Do not overfill.
3. Securely close the cap and reattach the tank to the unit.

5.2 Starting the Cleaner

1. Ensure the unit is charged and both water tanks are correctly installed.
2. Press the ON/OFF button on the handle to start the vacuum cleaner.
3. The unit will begin vacuuming and mopping simultaneously.

5.3 Using the Self-Propelled Function

The EUREKA NEW400C features a self-propelled function for easier maneuverability. Simply guide the unit, and it will assist in moving forward, reducing the effort required during cleaning.

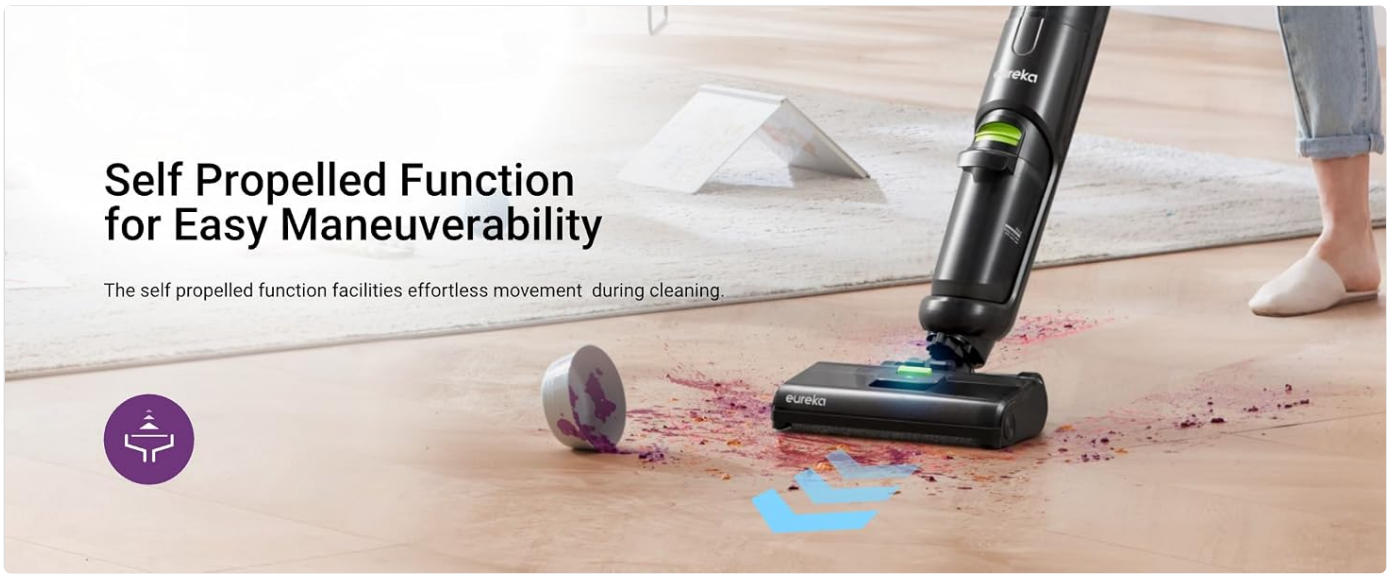


Image 5.1: Self-Propelled Function for Easy Maneuverability.

5.4 Pausing Operation

When you place the floor cleaner machine in the upright position, it will automatically stop working. This allows you to pause cleaning without needing to press the power button.



Image 5.2: Stop When Standing Upright.

5.5 Fast Drying

The EUREKA NEW400C is designed for fast, streak-free drying, recovering up to 90% of the water used. This minimizes drying time and prevents streaks on your floors.



Image 5.3: Fast, Streak-Free Drying mechanism.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your EUREKA NEW400C.

6.1 Self-Cleaning Cycle

1. After each use, place the vacuum cleaner on its charging base.
2. Ensure the clean water tank has sufficient water.

3. Press and hold the self-cleaning button for 3 seconds to initiate the self-cleaning cycle. The unit will automatically flush the inner tubing and brush roller.
4. Once the cycle is complete, empty the dirty water tank.



Image 6.1: Self-Cleaning System activation.

6.2 Emptying and Cleaning Dirty Water Tank

1. Remove the dirty water tank from the main unit.
2. Open the tank and carefully dispose of the dirty water.
3. Rinse the tank thoroughly with clean water. Use the provided cleaning brush if necessary to remove any debris.
4. Allow the tank to air dry completely before reattaching.

6.3 Cleaning the Roller Brush

1. After the self-cleaning cycle, or if the roller appears dirty, remove the roller brush cover.
2. Remove the roller brush.
3. Rinse the roller brush under running water to remove hair and debris. Use the cleaning brush for stubborn dirt.
4. Allow the roller brush to air dry completely before reinstalling.

6.4 Cleaning/Replacing the Filter

1. Locate and remove the filter assembly from the dirty water tank.
2. Rinse the filter sponge under running water until clean.
3. Allow the filter to air dry completely before reinserting.
4. Replace the filter every 3-6 months, or as needed, to maintain optimal performance.

7. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Reduced suction or poor cleaning performance	Dirty water tank full; clean water tank empty; clogged filter; tangled roller brush.	Empty dirty water tank; refill clean water tank; clean or replace filter; clean roller brush.
Unit not turning on	Battery not charged; unit not properly assembled.	Charge the battery fully; ensure handle and tanks are securely attached.
Leaking water	Water tanks not properly sealed or installed; unit tilted excessively.	Ensure tank caps are tight and tanks are correctly seated; avoid tilting the unit sharply during operation.
Unpleasant odor	Dirty water tank or roller brush not cleaned thoroughly after use.	Perform self-cleaning cycle; thoroughly clean dirty water tank, roller brush, and filter after each use. Allow components to air dry.
Streaks on floor	Dirty roller brush; incorrect cleaning solution; dirty water tank full.	Clean roller brush; use recommended cleaning solution; empty dirty water tank.
Short battery runtime	Battery not fully charged; battery degradation over time.	Ensure battery is fully charged before use. If runtime significantly decreases, contact customer support for battery replacement options.

8. Specifications

Feature	Specification
Model	NEW400C
Item Weight	8.7 Pounds
Form Factor	Upright
Battery Type	Lithium-Ion
Voltage	22 Volts
Capacity (Clean Water Tank)	600 ml
Power Source	Battery Powered
Filter Type	Sponge
Special Features	Cordless, Lightweight, Portable, Wet/Dry, Self-Propelled, Self-Cleaning
Surface Recommendation	Hard Floor

9. Warranty and Support

EUREKA provides a **2-year limited warranty** for the vacuum cleaner and a **12-month limited warranty** for the battery. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical assistance, or to purchase replacement parts, please contact EUREKA customer service. Refer to the contact information provided on the product packaging or the official EUREKA website.



Image 9.1: The EUREKA NEW400C is suitable for pet families.

© 2024 EUREKA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D1QW8HF7

More documents and user manuals: **https://manuals.plus/**