Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nikai NWM1000SPN24

Nikai NWM1000SPN24 9 Kg Semi-Automatic Twin Tub Washing Machine User Manual

Model: NWM1000SPN24

1. Introduction

This manual provides essential information for the safe and efficient operation of your Nikai NWM1000SPN24 9 Kg Semi-Automatic Twin Tub Washing Machine. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: Front view of the Nikai NWM1000SPN24 Twin Tub Washing Machine.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before use.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Never reach into the machine while it is operating. Wait until all moving parts have stopped completely.
- Ensure the machine is placed on a stable, level surface.

3. Product Features

The Nikai NWM1000SPN24 washing machine is designed with several features to enhance your laundry experience:

- **Spacious & Efficient 9kg Capacity:** Offers a 9kg washing capacity and a 5kg spin capacity, suitable for larger loads.
- **Silent Operation:** Engineered for quiet performance, minimizing disturbance.
- **Water-Efficient Performance:** Optimizes water usage for effective cleaning.
- **Powerful Big Pulsator:** Ensures thorough cleaning for various fabric types.
- **Durable Rust-Free Body:** Constructed with a plastic body resistant to rust for longevity.
- **Quick Wash Feature:** A short wash cycle for quick laundry needs.
- **Shock-Proof Design:** Enhances safety during operation.
- **Transparent Top Cover:** Allows monitoring of the washing process.
- **2-in-1 Design:** Twin tub combination for washing and spinning.
- **Built-in Drain Pump:** Facilitates quick and easy water drainage.



Image 3.1: Key features of the Nikai 9 Kg Twin Tub Washing Machine, highlighting portability, efficiency, powerful motor, and durability.



Image 3.2: Illustration of the washing and spin capacities, showing examples of load sizes.



Image 3.3: Detail of the double-layer strong body, emphasizing durability and low maintenance.



Image 3.4: Visual representation of the 15-minute quick wash feature.

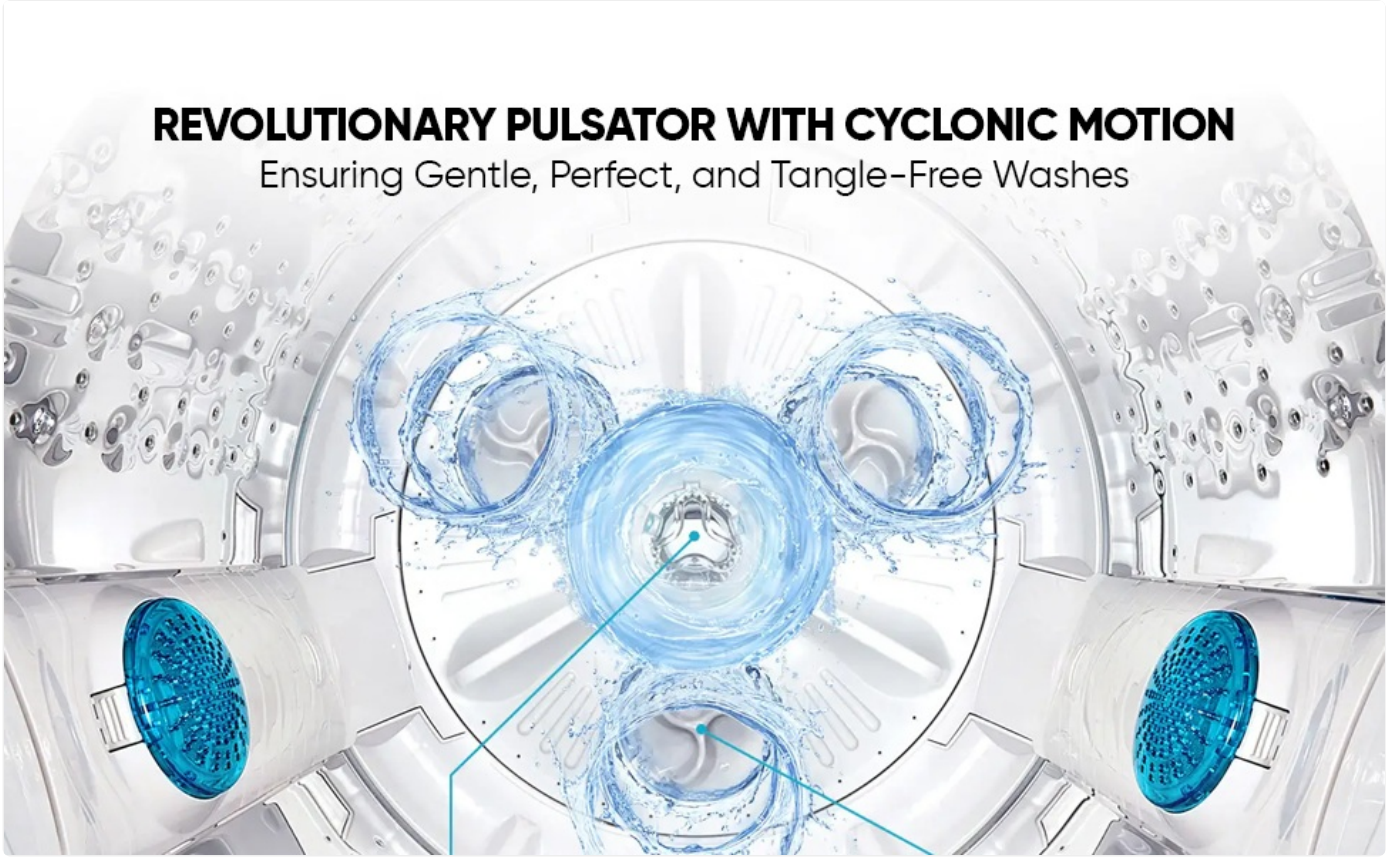


Image 3.5: Illustration of the pulsator's cyclonic motion for effective cleaning.

4. Setup and Installation

4.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

4.2 Placement

- Place the machine on a firm, level surface to prevent vibration and noise.
- Ensure there is adequate space around the machine for ventilation and access.
- Avoid direct sunlight or placing near heat sources.

4.3 Water Connection

- Connect the fill hose (included) to a cold water tap.
- Ensure the connection is secure to prevent leaks.
- Do not connect to a hot water supply.

4.4 Drain Hose

- Position the drain hose (included) to allow water to flow into a sink or drain pipe.
- Ensure the drain hose is not kinked or blocked.



Image 4.1: Overview of key components including the transparent lid, rustproof body, and drain hose.

5. Operating Instructions

5.1 Control Panel Overview



Image 5.1: Close-up of the user-friendly control panel with three rotary knobs.

- **Wash Timer:** Sets the duration of the wash cycle (up to 15 minutes).
- **Wash Selector:** Choose between "Gentle" for delicate fabrics, "Standard" for normal loads, or "Drain" to empty water.
- **Spin Timer:** Sets the duration of the spin cycle (up to 5 minutes).

5.2 Washing Procedure

1. Sort laundry by fabric type and color.
2. Load clothes into the wash tub, ensuring not to overload.
3. Add appropriate amount of detergent.
4. Fill the wash tub with water to the desired level.
5. Select the desired wash mode ("Gentle" or "Standard") using the Wash Selector.
6. Set the Wash Timer to the required duration. The machine will start washing.
7. Once the wash cycle is complete, set the Wash Selector to "Drain" to empty the water.

5.3 Spinning Procedure

1. Transfer washed clothes from the wash tub to the spin tub.
2. Distribute clothes evenly in the spin tub to prevent imbalance.
3. Close the spin tub lid securely.
4. Set the Spin Timer to the desired duration (e.g., 1-5 minutes). The machine will begin spinning.
5. Once the spin cycle is complete, open the lid and remove the clothes.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Lint Filter

- Locate the lint filter inside the wash tub.
- Remove the filter and clean any accumulated lint under running water.
- Reinsert the filter securely. Clean regularly to maintain washing efficiency.

6.3 Storage

- If storing for an extended period, drain all water from the machine.
- Unplug the power cord and store it safely.
- Cover the machine to protect it from dust.

7. Troubleshooting

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed properly; Timer not set.	Check power connection; Ensure lid is closed; Set the timer.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to "Drain".	Straighten drain hose, clear blockage; Set Wash Selector to "Drain".
Excessive vibration/noise during spin	Clothes unevenly distributed in spin tub; Machine not on a level surface.	Rearrange clothes evenly; Adjust machine's position on a level surface.
Poor washing results	Overloading; Insufficient detergent; Lint filter clogged.	Reduce load size; Use correct amount of detergent; Clean lint filter.

8. Specifications

Feature	Detail

Feature	Detail
Brand	Nikai
Model Info	NWM1000SPN24
Product Dimensions	47 x 79.6 x 90.4 cm
Washing Capacity	9 Kilograms
Spin Capacity	5 Kilograms
Installation Type	Freestanding
Special Features	Drum Clean, High Efficiency, Smart Connectivity (Note: Control is manual knob-based)
Color	White
Control Console	Knob
Standard Cycles	2 (Gentle, Standard)
Access Location	Top Load
Voltage	220 Volts
Material Type	Plastic
Included Components	Drain Hose, Fill Hose, Power Cord
Item Weight	17 Kilograms

9. Warranty and Support

For warranty information, please refer to the warranty card included with your product or contact Nikai customer service. Keep your purchase receipt as proof of purchase.
For technical support or service inquiries, please visit the official Nikai website or contact their authorized service centers.

© 2025 Nikai. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D2C9DQ15

More documents and user manuals: **https://manuals.plus/**