Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VACTechPro F02

VACTechPro V15 Cordless Vacuum Cleaner Instruction Manual

Model: F02

Introduction

Thank you for choosing the VACTechPro V15 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.
The VACTechPro V15 is designed to be lightweight and compact, offering powerful suction up to 35,000 PA. Its advanced features, including a green LED light and a V-shaped roller brush, ensure efficient cleaning across various floor types while minimizing hair tangles.

Product Components

The VACTechPro V15 comes with several components to enhance your cleaning experience:

- Main Vacuum Head
- Crevice Tool
- Upholstery Brush
- Dusting Brush
- HEPA Filter (multiple included)
- Extension Wand
- Wall Mount
- Charger

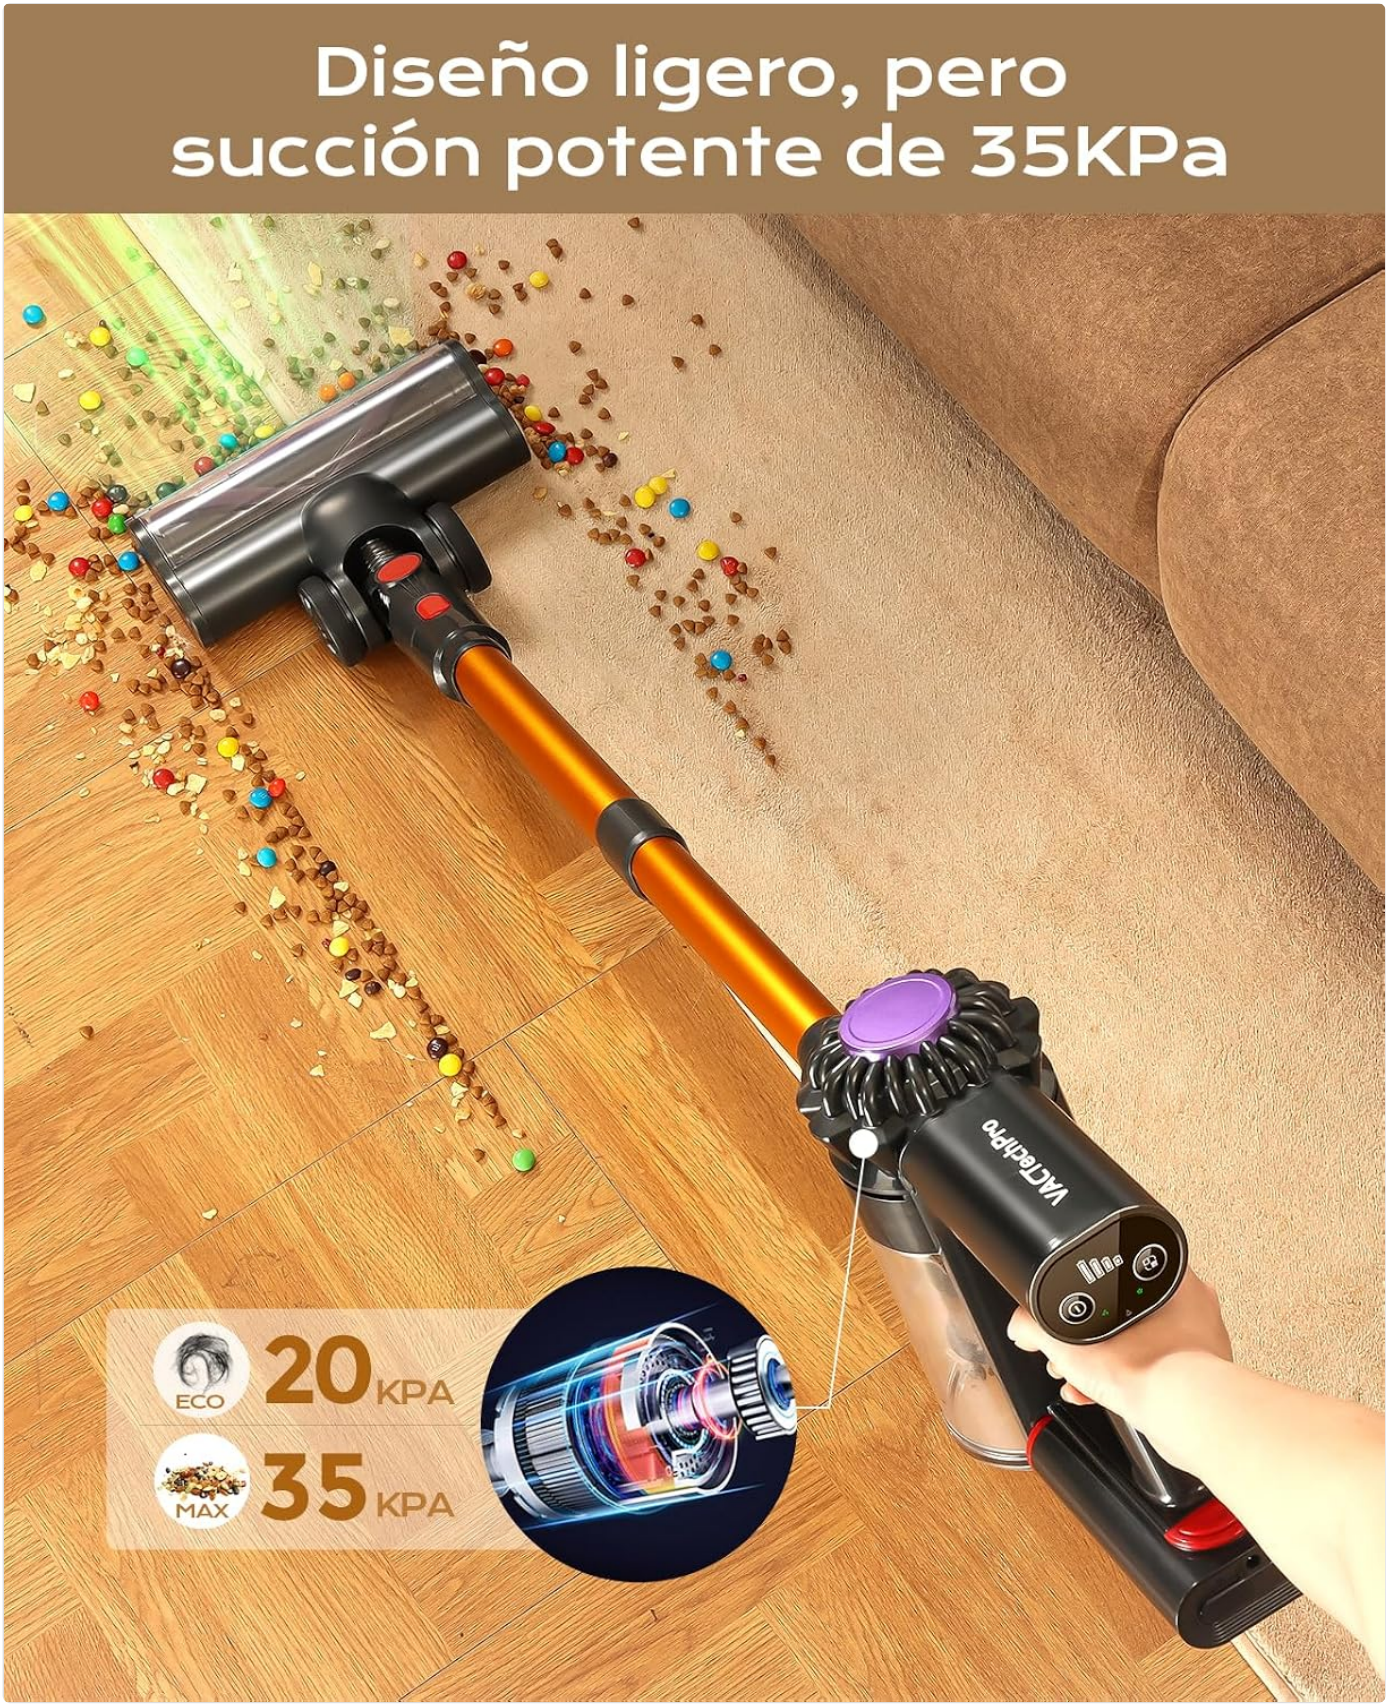


Figure 1: Overview of the VACTechPro V15 Cordless Vacuum Cleaner and its included accessories.

Setup

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assembly:**
    - Attach the extension wand to the main vacuum body until it clicks into place.

- Connect the main vacuum head (floor brush) to the other end of the extension wand.
- For handheld use, attach desired accessories (crevice tool, upholstery brush, dusting brush) directly to the main vacuum body.

3. **Initial Charging:** Before first use, fully charge the battery. Refer to the "Charging and Storage" section for detailed instructions.

Operating Instructions

Power On/Off and Suction Modes

- Press the power button to turn the vacuum on. It will start in standard suction mode (20,000 PA).
- Press the mode button to switch to Max suction mode (35,000 PA) for deeper cleaning.
- Press the power button again to turn the vacuum off.

Advanced Green Light and V-shaped Brush

The V15 features an advanced green LED light on the main vacuum head, which illuminates dust and debris in dark corners, making it easier to spot and clean. The V-shaped roller brush is designed to reduce hair tangles, ensuring consistent performance and simplifying maintenance.



Figure 2: The green LED light feature highlights dust on hard floors for thorough cleaning.



Figure 3: The V-shaped roller brush design helps prevent hair tangles and improves cleaning efficiency.

Versatile Cleaning

The VACTechPro V15 is suitable for various surfaces, including hardwood floors and carpets. Use the different attachments for specific cleaning tasks:

- **Main Vacuum Head:** Ideal for general floor cleaning.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **Upholstery Brush:** Designed for cleaning sofas, chairs, and other fabric surfaces.
- **Dusting Brush:** Use for delicate surfaces, shelves, and keyboards.
- **Extension Wand:** Extends reach for high areas or under furniture.



Figure 4: The V15 offers versatile cleaning options for various household needs, from high curtains to delicate electronics.

Maintenance

Emptying the Dustbin

1. Ensure the vacuum is turned off and disconnected from any power source.
2. Locate the dustbin release button, usually near the handle.

3. Press the button to open the dustbin flap and empty contents into a trash can.
4. Close the dustbin flap securely until it clicks.



Figure 5: Emptying the dustbin is a simple process to maintain vacuum performance.

Cleaning the HEPA Filter

Regular cleaning of the HEPA filter is crucial for maintaining optimal suction and air quality.

1. Twist and pull out the HEPA filter from the dustbin assembly.
2. Tap the filter gently to remove loose dust.
3. Rinse the filter under cold running water until the water runs clear. Do not use detergents.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Ensure it is completely dry to prevent damage to the motor.
5. Replace the filter back into the dustbin assembly.

The VACTechPro V15 includes multiple HEPA filters for convenience, allowing you to use a clean filter while another is drying.



Figure 6: The high-efficiency filtration system, including the HEPA filter, captures fine dust and allergens.

Cleaning the Roller Brush

1. Turn off the vacuum and detach the main vacuum head.
2. Locate the release mechanism for the roller brush (usually a latch or button).
3. Remove the roller brush and use scissors or a brush to remove any tangled hair or debris.
4. Reinsert the roller brush and secure it.

Charging and Storage

Charging the Battery

The VACTechPro V15 features a removable battery for flexible charging options. A full charge provides up to 35 minutes of runtime.

- Connect the charger to the charging port on the main vacuum body.
- Alternatively, remove the battery and charge it separately.
- The battery indicator lights will show the charging status.



Figure 7: The vacuum can be charged while mounted on the wall or by removing the battery.



Figure 8: The removable battery allows for convenient charging and extended use.

Wall-Mounted Storage

Use the included wall mount to store your VACTechPro V15 conveniently and save space.

1. Choose a suitable location near a power outlet for easy charging.
2. Securely attach the wall mount to the wall using appropriate screws and anchors (not included).
3. Hang the vacuum cleaner on the wall mount.

Specifications

Feature	Detail
Model Number	F02
Brand	VACTechPro
Power Source	Battery (1 A required, included)
Max Suction Power	35,000 PA (Max mode) / 20,000 PA (Standard mode)
Product Dimensions	32.9 x 11.8 x 22 cm
Product Weight	2.4 kg
Filter Type	HEPA Filter
Special Features	Cordless, HEPA Filter, Green LED Light, V-shaped Roller Brush
Recommended Surfaces	Hardwood floors, carpets, upholstered surfaces, car interiors, stairs

Troubleshooting

If you encounter any issues with your VACTechPro V15, please refer to the following common troubleshooting steps:

- **No Power:** Ensure the battery is fully charged and correctly inserted. Check if the power button is pressed firmly.
- **Reduced Suction:** Check and empty the dustbin. Clean or replace the HEPA filter. Remove any blockages from the main vacuum head, extension wand, or accessories.
- **Roller Brush Not Spinning:** Ensure the main vacuum head is properly attached. Remove any tangled hair or debris from the roller brush.
- **Short Battery Life:** Ensure the battery is fully charged. Battery performance may decrease over time with prolonged use.

For further assistance, please contact VACTechPro customer support.

Warranty and Support

VACTechPro products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official VACTechPro website.
For technical support, spare parts, or any inquiries, please contact VACTechPro customer service through the contact information provided in your product packaging or on the official website.

© 2024 VACTechPro. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D2DF8WDQ

More documents and user manuals: **https://manuals.plus/**