pofoto PD15

pofoto PD15 Portable DVD Player

USER MANUAL

1. Safety Information

Please read all safety instructions carefully before using this device. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter and car charger.
- Keep the device away from children and pets.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

2. Package Contents

Verify that all items are present in the package:

- 15.6" Portable DVD Player
- Quick Start Guide
- Remote Controller
- 3-in-1 AV Cable
- Car Charger
- AC Adapter

PACKAGE CONTENT

Portable Video Player
Remote Control
User Manual
Quick Start Quide
AC Adaper
Car Charger
3-in-1 AV Cable

Image: All components included in the pofoto PD15 Portable DVD Player package.

3. Product Overview

The pofoto PD15 Portable DVD Player features a 15.6-inch HD screen designed for an immersive viewing experience. It includes dual stereo speakers and supports various media formats.

Image: Front view of the pofoto PD15 Portable DVD Player with its 15.6-inch screen open.

3.1. Screen Features

The 15.6-inch screen offers a resolution of 1280*800 pixels. It can rotate 270° and flip 180°, allowing for optimal viewing angles.

Image: Side view of the pofoto PD15 Portable DVD Player highlighting the large 15.6-inch screen.

3.2. Control Panel and Ports

The device features intuitive control buttons on the base and various ports for connectivity.

- **USB Port:** For connecting USB drives (up to 32GB) to play media files.
- **SD Card Slot:** For inserting SD cards (up to 32GB) to play media files.
- **Headphone Jack:** 3.5mm jack for private listening.
- **AV OUT:** Audio/Video output for connecting to external displays.
- **AV IN:** Audio/Video input for connecting external media sources.
- **DC IN:** Power input for charging and operating the device.
- **Power Switch:** Physical ON/OFF switch located on the side.

Dual Stereo Speakers

Connect to stereo

Plug in headphones

Image: Close-up of the side panel of the pofoto PD15 Portable DVD Player, detailing the various input and output ports.

4. Setup

4.1. Initial Charging

Before first use, fully charge the device using the provided AC adapter. The charging indicator light will show the charging status.

4.2. Powering On/Off

- **To Power On:** Slide the physical power switch on the side to the 'ON' position. Then, press the 'POWER' button on the control panel.
- **To Power Off:** Press the 'POWER' button on the control panel, then slide the physical power switch to the 'OFF' position.

4.3. Inserting a Disc

- Gently open the disc cover by sliding the 'OPEN' latch.
- Place the DVD or CD onto the spindle with the label side facing up. Ensure it clicks into place.

- Close the disc cover firmly until it latches.

5. Operating Instructions

5.1. Basic Playback

- After inserting a disc or connecting a USB/SD card, the player will typically begin playback automatically.
- Use the **PLAY/PAUSE** button to start or pause playback.
- Use the **STOP** button to halt playback.
- Adjust volume using the **VOL+** and **VOL-** buttons.
- Use the **REV** and **FWD** buttons for fast rewind and fast forward.

5.2. Screen Adjustment

The screen can be rotated 270° and flipped 180° for flexible viewing. Adjust the screen gently to your desired position.

5.3. Media Compatibility

The player is region-free and compatible with a wide range of formats:

- **Discs:** CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD (Blu-ray and pirated discs are not supported).
- **USB & SD Cards (Max 32GB):** Supports VOB, AVI, MPEG, MP3, WMA, JPEG formats.

Reliable Power Anywhere

5000mAh 6-Hour Power for Nonstop Entertainment Delight!

Power Adapter   5000mAh Battary   Car Charger

6 hours

Image: The pofoto PD15 Portable DVD Player displaying its compatibility with various disc and digital media formats.

5.4. Last Memory Function

The device features a last memory function that resumes playback from where you last stopped, even after powering off.

Support Region Free & Multiple DVD Formats

Disc Formats:
CD/ DVD, CD -R/ RW, DVD ±R/ ±RW, VCD/ SVCD (Not support Blu-Ray and pirated discs)

USB & SD Card (Max 32GB):
Video: AVI/ VOB/ MPG1,2/ FLV
Audio: MP3/ WMA/ OGG/ ACC
Image: JPG

USB   Memory Card

Image: Visual representation of the Last Memory Function, showing a movie resuming after the player is powered on again.

5.5. Advanced Playback Options

- **A-B Repeat:** Use the 'A-B' button on the remote to select and loop specific video segments.
- **Slow Motion:** Easily slow down the current playback speed by pressing the 'SLOW' button on the remote.

6. Connecting to External Devices

The pofoto PD15 can connect to various external devices for an enhanced viewing experience.

- **Sync to TV:** Use the AV OUT port and the provided 3-in-1 AV cable to connect to a television.
- **Sync to Projector:** Connect to a projector via the AV OUT port for a larger display.
- **Sync to Similar Player:** Connect two compatible portable DVD players for synchronized viewing.

Support Region Free & Multiple DVD Formats

Disc Formats:
CD/ DVD, CD -R/ RW, DVD ±R/ ±RW, VCD/ SVCD
(Not support Blu-Ray and pirated discs)

USB & SD Card (Max 32GB):
Video: AVI/ VOB/ MPG1,2/ FLV
Audio: MP3/ WMA/ OGG/ ACC
Image: JPG

Swipe to open the cover

Image: The pofoto PD15 Portable DVD Player connected to a television, demonstrating its screen sharing feature.

7. Battery and Charging

The device is equipped with a 5000mAh rechargeable battery, providing up to 6 hours of continuous playback.

7.1. Charging Methods

- **AC Adapter:** Use the certified AC adapter for charging at home or any standard power outlet.
- **Car Charger:** Use the included car charger to power and charge the device in your vehicle.
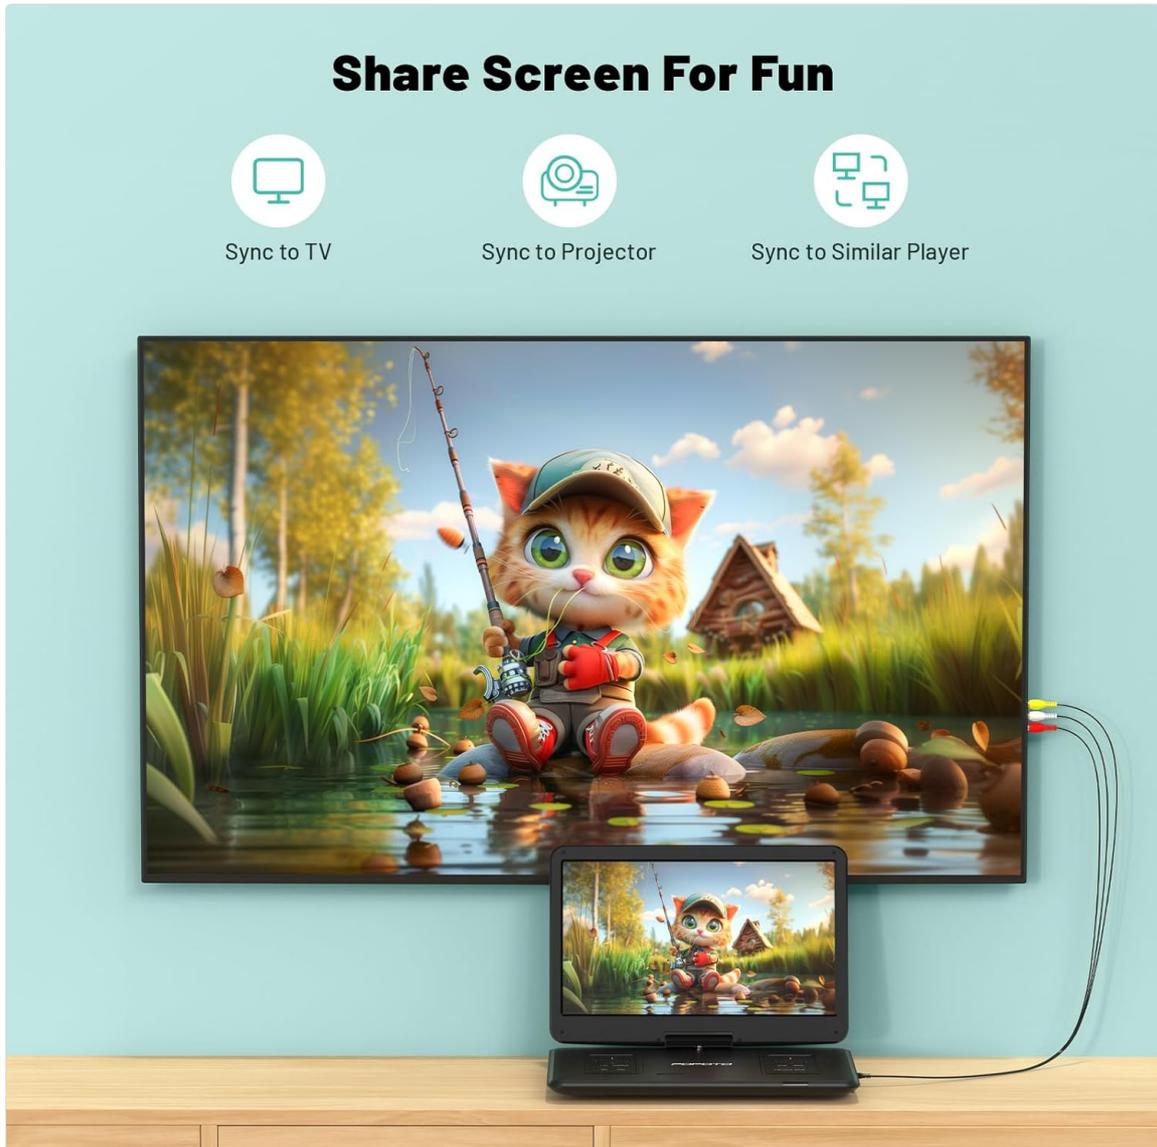

Image: The pofoto PD15 Portable DVD Player illustrating its 6-hour battery life and various charging options.

8. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight when not in use.
- **Disc Care:** Handle discs by the edges to avoid fingerprints and scratches. Clean discs with a soft, lint-free cloth.

9. Troubleshooting

- **No Power:** Ensure the device is charged or connected to a power source, and the physical power switch is in the 'ON' position.
- **Disc Not Playing:** Check if the disc is inserted correctly (label side up) and is clean. Ensure the disc format is supported (not Blu-ray or pirated).
- **No Sound:** Check the volume level. Ensure headphones are properly connected if in use. If connected to an external device, check its volume and connections.
- **Poor Picture Quality:** Ensure the disc is clean and unscratched. Adjust screen brightness and contrast settings if available.
- **Anti-Shock Function:** The built-in anti-shock function helps maintain smooth playback during movement, ideal for car travel.

10. Specifications

Feature	Detail
Brand	pofoto
Model Name	PD15
Screen Size	15.6 inches
Resolution	1280 x 800 pixels
Battery Capacity	5000mAh
Battery Life	Up to 6 hours
Supported Media Types	CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD, USB, SD Card (VOB, AVI, MPEG, MP3, WMA, JPEG)
Special Features	Anti-Shock, Region Free, Last Memory, Portable, Rechargeable
Item Weight	5.51 pounds
Product Dimensions	14.9 x 10.6 x 1.9 inches
Connectivity Technology	USB, SD, 3.5mm Headphone Jack, AV In/Out

11. Warranty and Support

Your pofoto PD15 Portable DVD Player comes with a**24-month after-sales service**. If you encounter any issues or have questions, please reach out to our customer support team. We aim to respond within 24 hours to assist you.

Your browser does not support the video tag.

Video: Official pofoto guide demonstrating the use of the 17.5" Portable DVD Player. This video provides a visual walkthrough of the product's features and basic operation.