Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Pokin SCCPPC400, SCCPPC600, SCCPPC800

Pokin Pressure Power Socket Replacement User Manual

For Crock-Pot Express Multicooker Models: SCCPPC400-V1, SCCPPC600-V1, SCCPPC800-V1

1. Product Overview

This manual provides essential instructions for the installation, operation, and maintenance of the Pokin Pressure Power Socket Replacement. This component is designed to replace the power inlet on specific Crock-Pot Express Multicooker models, restoring proper power connectivity.

Compatibility: This power socket is compatible with selected 4, 6, and 8 Quart Crock-Pot Express Multicooker models, specifically SCCPPC400-V1, SCCPPC600-V1, and SCCPPC800-V1.



Image 1.1: The Pokin Pressure Power Socket Replacement shown with a compatible Crock-Pot Express Multicooker.

2. Safety Information

- Always unplug the multicooker from the power outlet before attempting any installation or maintenance.
- Ensure the replacement socket is correctly oriented and securely fastened to prevent electrical hazards.
- Do not use the multicooker if the power socket or power cord appears damaged.
- This replacement part is for multicookers with **detachable** power cords only. Do not attempt to replace sockets on appliances with non-detachable power cords.



Image 2.1: Important note regarding compatibility with detachable power cords. The socket is only for appliances where the power cord can be removed.

3. Installation (Setup)

Follow these steps to replace the power socket on your Crock-Pot Express Multicooker:

1. **Disconnect Power:** Ensure the multicooker is unplugged from the wall outlet.
2. **Access Old Socket:** Locate the existing power socket on your multicooker. Depending on your model, you may need to gently unscrew or unclip the old socket from its housing.
3. **Remove Old Socket:** Carefully disconnect any internal wiring from the old socket. Note the orientation of the wires if applicable.
4. **Install New Socket:** Connect the internal wiring to the new Pokin power socket. Ensure connections are secure.
5. **Secure New Socket:** Insert the new power socket into the multicooker's housing. The non-angled design ensures a stable fit. Gently screw or clip it into place until it is firmly seated.

6. **Verify Installation:** Double-check that the new socket is flush with the multicooker's surface and all connections are secure.



Image 3.1: Illustrates the secure connection of a power cord into the new power socket.

4. Operation

Once the power socket is installed, operating your multicooker involves these simple steps:

1. **Connect Power Cord:** Insert the multicooker's power cord firmly into the newly installed power socket.
2. **Plug into Outlet:** Plug the other end of the power cord into a standard electrical wall outlet.
3. **Verify Power:** Confirm that the multicooker receives power (e.g., display lights up).

The non-angled design of the socket ensures a secure and stable connection, minimizing the risk of accidental disconnection during use.



Image 4.1: Demonstrates the proper way to connect the power cord to the installed socket.

5. Maintenance

To ensure the longevity and proper function of your Pokin Pressure Power Socket Replacement:

- **Keep Clean:** Periodically wipe the exterior of the socket with a dry, soft cloth to remove dust or debris. Ensure no liquids enter the socket.
- **Inspect Regularly:** Before each use, visually inspect the power socket for any signs of damage, such as cracks, bends, or discoloration.
- **Avoid Force:** Do not apply excessive force when plugging or unplugging the power cord, as this can damage the socket or the cord.
- **Storage:** When not in use, store the multicooker in a dry environment.

6. Troubleshooting

If your multicooker is not receiving power after replacing the socket, consider the following:

- **No Power to Multicooker:**
  - Ensure the power cord is fully inserted into both the multicooker's socket and the wall outlet.
  - Test the wall outlet with another appliance to confirm it is functional.
  - Check the power cord for any visible damage. If damaged, replace the power cord.
- **Loose Connection:** If the power cord feels loose in the socket, ensure the socket was installed correctly and is securely fastened. Re-seat the power cord firmly.
- **Socket Damage:** If the new power socket appears damaged during or after installation, discontinue use and replace it.

7. Specifications

Brand	Pokin
Color	Black
Compatible Models	SCCPPC400-V1, SCCPPC600-V1, SCCPPC800-V1
Connector Type	2-Pin Port (IEC C8 Inlet)
Wattage	Up to 1000 Watts (as per compatible appliances)
Voltage Rating	10A 150V (as per product images)
Material	Durable, fully molded construction

Dimensions:

- Overall Width: Approximately 2.0 inches
- Overall Height: Approximately 0.8 inches
- Mounting Hole Spacing (Width): Approximately 1.5 inches
- Mounting Hole Spacing (Height): Approximately 0.9 inches
- Pin Length: Approximately 0.3 inches

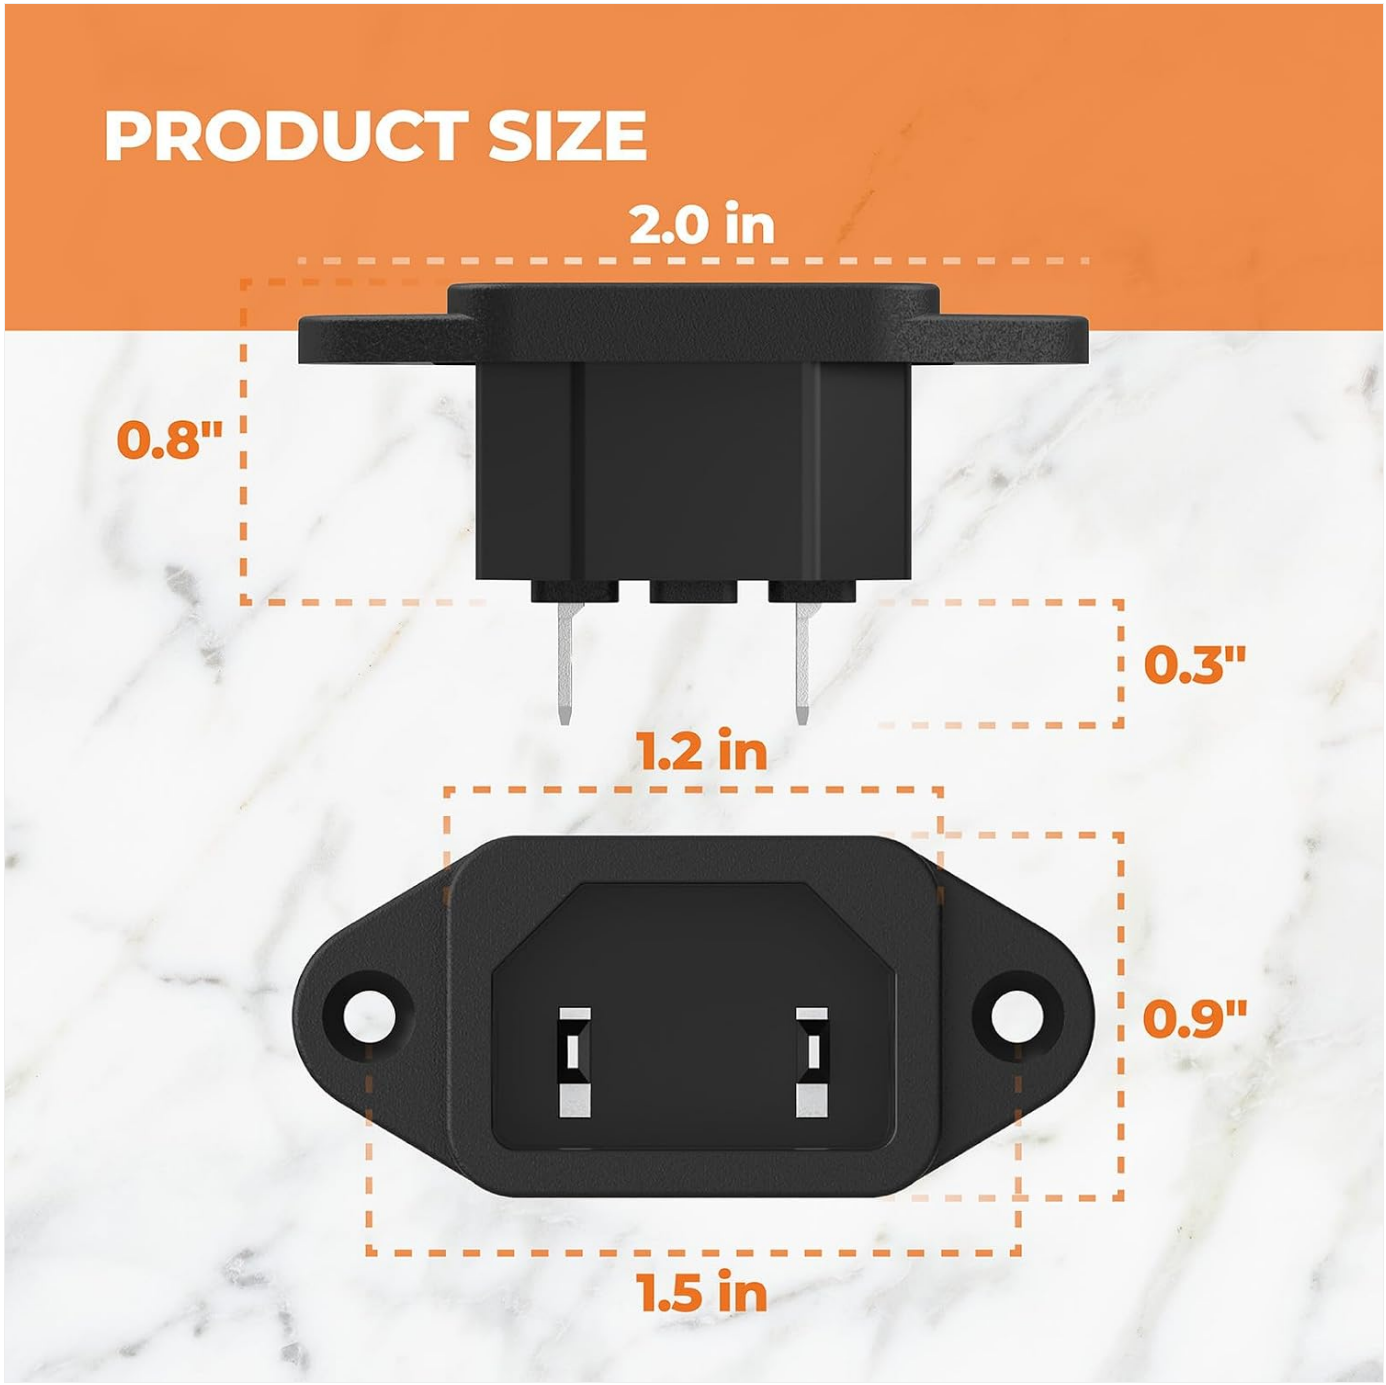


Image 7.1: Detailed dimensions of the power socket for accurate replacement.



Image 7.2: Front view of the 2-pin power socket, highlighting its design.

8. Support and Warranty

Pokin is committed to providing high-quality products and customer satisfaction. If you encounter any questions or issues with your Pressure Power Socket Replacement, please contact our customer support team.

We aim to provide a fast response and assist you in resolving any problems. If a replacement is needed due to a manufacturing defect, please reach out to us. We will respond within 24 hours to help you.

For support, please refer to the contact information provided with your purchase or visit the official Pokin store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D2WV2JJP

More documents and user manuals: **https://manuals.plus/**